

Knife sharpener

**orava**

**BN-20**

Instruction manual/Warranty

EN



**BN-20**

# Special safety instructions. Read carefully!



This symbol warns users that failure to follow the safety instructions when using and operating the device may result in: Danger of serious injury or death!

Danger of damage to the device or other damage to property!

## **Unpacking/Packaging**

- Before putting the device and accessories into operation, unpack them and remove all remaining packaging materials, labels and tags from all parts. Place the packaging materials in a safe place, especially out of the reach of children and incapacitated persons, or dispose of them safely.  
Danger of suffocation!

## **Inspection/Commissioning**

- Never use the device if it is incomplete, damaged or if any part of it has been damaged during use. Have the device repaired by a specialist workshop.  
Danger of serious injury!

## **Warning!**

- The device must not be used by children. Keep it out of the reach of children.
- The device is not intended for use by persons with limited physical, sensory or mental capabilities.
- The device is intended for household use.

## Parts Description



- 1** sharpening slot
- 2** grinding angle adjustment
- 3** silicone base release

## Before first use

Unpack the sharpener and remove all packaging material. To remove any dirt that may have accumulated during the packaging process, clean the sharpener with a dry, lint-free cloth (see the "Cleaning and maintenance" section of this manual). Clean the surface with a cloth dampened with water. Then dry thoroughly.

## Preparation and operation

### Positioning

Place the sharpener and press it down on a flat, solid surface so that the sharpener is firmly in place.

### Sharpening

#### Step 1:

Place the knife sharpener on a flat surface. Make sure the silicone base is clean before you begin. Secure the sharpener firmly by turning the sharpener half-way clockwise to achieve a strong and secure grip.

#### Step 2:

Adjust the wheel to the correct angle depending on the angle of the knife blade (see Sharpening angles table).

## Sharpening Angles

Knife Type	Sharpening Angles
Fillet Knives	14°
Kitchen Knives (Asian)	16°
Kitchen Knives (General)	20°
Pocket Knives	20°
Hunting Knives	22°
Tactical Knives	24°

**Step 3:**

Insert the knife into the sharpening slot at a 90 degree angle to the sharpener.

- The knife blade should always be held straight and vertical in the slot.
- Never point the blade up or down, or tilt it left or right.

**Krok 4:**

Use gentle pressure to sharpen the knife blade. Repeat this step approximately 6-10 times, depending on the damage or sharpness of the knife, until it is sharp.

**Warning!**

DO NOT move the blade back and forth across the slot – only pull the knife in one direction. Do not press hard!

**Step 5:**

To test the sharpness of the knife, try cutting a piece of paper or cutting a vegetable. If the knife does not cut the object easily, repeat the sharpening process. Knives made of harder steel may require additional strokes.

**Notes**

- Always clean the sharpening groove after each sharpening.
- After sharpening the knife, use a damp cloth to remove any grinding residue that may remain on the blade.

***Never push the knife into the groove. Always sharpen the knife by pulling, not pushing!***

## Cleaning and maintenance

- Use only a slightly damp cloth to clean the device itself.
- Do not use any solvents or harsh cleaning agents.
- Do not wash the device in the dishwasher.

### **Warning!**

**Never immerse the device in water or any other liquid!**

The device is maintenance-free. There is no work to be done on or in the device by the user. In the event of malfunction or visible damage to the device, please contact customer service.

## Technical data

**Dimensions (W x H x D):** 6,4 x 8,6 x 6,2 cm  
**Weight:** 130 g

**Subject to change without notice!**

## Warranty conditions

A warranty period of 24 months is provided for this device. When exercising the right to a warranty service, return the warranty card and the cash receipt of the equipment to the service center together with the product. The date of the warranty card and proof of purchase must be the same. If not, the warranty will not be granted.

- The right to free repair of the product during the warranty period expires if:
  - the user does not submit a valid warranty and proof of purchase of the product;
  - malfunctions due to incorrect connection, improper use and maintenance (dusty environment), mechanical damage, engine failure and residential installation;
  - do unauthorized interference or alteration in the product by an unauthorized person and/or a malfunction due to the use of non-original spare parts;
  - the appliance is not used according to the enclosed operating instructions.

### Other terms and conditions related to the warranty

The shop where the device is sold to the consumer is obliged to show the device to the buyer and inform the buyer:

- the way it is used and handled;
- how warranty repairs are available;
- with the nearest warranty service as well as the way the warranty service is dispatched to the supplier's service center;
- properly fill in the warranty card. Incorrect and incomplete warranty card is void and the consumer loses the right to warranty;
- the guarantee / repair, exchange or withdrawal of the contract / are covered by the relevant provisions of the Civil Code and the Complaint Rules.