

Electric hair, beard, body and  
nose/ear trimmer

**orava**

**VS-100 Shaver**  
Instruction manual

EN



CE

## Safety Instructions for use

- This document contains important safety instructions and warnings for the safe, correct and economical operation of electrical equipment. Observing it helps the user to avoid risks and increase the reliability and service life of the product.
- The following symbols and their meanings have been used on the equipment and in the accompanying documentation to draw attention to possible hazards:



This symbol alerts users that the device operates with dangerous electrical voltage.



This symbol warns users that failure to follow the safety instructions when using and operating the device may result in:

Risk of serious injury or death!

Risk of damage to the device or other property!



The product is suitable for use in the shower and bathtub.



This symbol means that the product is equipped with circuits in which the highest electrical voltage does not exceed the permissible values of the extra-low safety voltage.

With such equipment, an electric shock cannot occur when touching live parts in normal operation or when touching non-live parts in the event of a device failure.

- **Before putting the device into operation, we recommend that you carefully study the operating instructions and operate the device according to the specified instructions!**
- **By not following the safety instructions and warnings, the manufacturer is not responsible for any damage to health or property!**
- Before using the device for the first time, carefully check that the device is complete and does not show any visible signs of damage. If the product is defective or has any visible damage, do not use the product.

- The appliance is intended for use in households and similar indoor areas intended for living, without special purpose. This is not a professional appliance for commercial use.
- Do not change the technical parameters and characteristics of the appliance by unauthorized changes or modifications to any part of the appliance.
- The manufacturer is not liable for damage caused during transport, improper use, damage or destruction of the appliance due to adverse weather conditions.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, only if they are supervised or instructed on how to use the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance may be carried out by children aged from 8 years and above only under the supervision of a responsible person.
- Children must not play with the appliance.
- Perform normal user cleaning and maintenance of the electrical appliance only in the recommended manner. Do not use solvents or harsh cleaning objects for cleaning. Dirt and visible stains from fingers or hands can be cleaned using cleaning detergents specially designed for cleaning household appliances.
- Before calling for service:
  1. Switch the appliance off and on to make sure that the fault does not reoccur.
  2. If the appliance fault persists after the above actions, call the nearest specialist service.
- Never repair the electrical appliance yourself!
- Unauthorised, unqualified and unprofessional intervention in the electrical appliance may result in electric shock or other serious injury.
- Leave the warranty and post-warranty repair of the electrical appliance only to a suitably qualified specialist <sup>(\*)</sup>.

<sup>(\*)</sup> Competent qualified professional: the sales department of the manufacturer or importer or a person who is qualified and authorized to carry out this type of activity with the ability to avoid all hazards.

## **Operation/Monitoring**

### **Warning!**

- This appliance may only be used with original and undamaged parts and accessories. Be very careful when using the appliance without the comb attachment attached. The cutting blades are sharp and can cause serious injuries.
- Do not use the appliance to cut animal fur or hair. There is a risk of parasites being transmitted from animals to people!
- Do not use the appliance if the main switch on the appliance does not work.

### **Caution!**

- Never open or disassemble the battery! Damage can cause an electrical short circuit and release substances that are harmful to health. If you are affected, seek professional medical attention.
- The battery must not come into contact with fire and must not be exposed to direct sunlight or excessive heat.  
There is a risk of danger from batteries! There is a risk of fire!  
- If the battery is damaged, have this device replaced by a professional service.
- Dispose of batteries in accordance with the applicable regulations and provisions for the disposal of electronic devices.

## Operation

### Device description:





1. Cutting blades
2. LED light
3. ON/OFF button
4. LED display
5. Battery charging connector
6. Charging base
7. Charging cable
8. Foil shaver attachment
9. Shaving/trimming attachment
10. Comb attachment (3/4.5/6 mm)
11. Nose/ear attachment
12. Lubricating oil
13. Cleaning brush

# Preparation


## Charging:

### 1 Charge the device before first use.

Connect the connector of the supplied cable to the power connector on this device (5) and the other USB connector to the USB connector on the optional AC adapter (DC output voltage 5V, 1000mA) or to the USB connector on a powered PC. Plug the AC adapter into a power outlet.

2 During charging, the LED charging display (4) will show the battery charge level from 000 to 100 (%) along with the charging symbol . When the battery reaches 100, the symbol  will turn off. Disconnect the device from the charging source and you can use it.



3 When the battery reaches 10% charge, the symbol  will flash on the display and the device will turn off.



The first full charge takes about 1.5 hours (depending on the charging source). With fully charged batteries, the device can work for about 90 minutes.

## Warning!

You can use the device even while it is charging. In this case, connect the AC adapter directly to the connector on the device.

## Before use

- Make sure the device is clean and functional.
- Attach the desired attachment to the device.  
**Only attach and fold the attachment when the device is switched off!**  
**This may cause injury or damage to the device.**
- Place a towel around the neck of the person you are going to cut so that hair does not get on their clothes while cutting.
- The person you are going to cut should sit on a chair so that you have good access to all the hair on their head.
- When cutting, hold the comb and the clipper loosely to achieve a smooth and even cut.

- Only cut natural human hair. The hair to be cut must be clean and dry.
- Only cut small amounts of hair. If you try to cut a large amount of hair at once, the cutting will not be effective

## Replacing the cutting/shaving attachment

- 1 Hold the clipper with the LED display facing you. Then, push the clipper attachment away from you with your thumb. The clipper attachment will be released. Follow the reverse procedure to attach the next attachment to the clipper.



## Hair cutting

- 1 Slide the comb attachment onto the cutting blades of the appliance. Place the attachment over the blades of the appliance and press the back of the comb until the comb clicks into place and remains fixed at the desired length.



To cut hair to a minimum length, remove the comb attachment.


- 2 Turn on the clipper with the on/off button (3) and cut hair. Follow the cutting procedure as shown.
- 3 Press the button (3) to turn on the device, the LED display (4) will light up and show the battery level from 000 to 100.
- 4 When you are finished using the device, press the switch (3) to turn it off.

## After cutting

After use, clean the clipper from hair with the brush provided.



## Cleaning and oiling

- Your clipper has been carefully tested, the cutting blade oiled and adjusted and packaged before being shipped from the factory.
- If the blade is not evenly oiled, apply a few drops of the supplied silicone oil. The device also recognizes when the blades need to be oiled. If the oiling symbol  starts flashing during use or when the device is switched on, do not forget to apply the supplied lubricating oil (11) to the blades.
- For better use of the device, we recommend that you clean the device regularly, otherwise it will affect the performance and service life of the device.

### **Warning!**

**Never immerse the AC adapter in water or other liquids when cleaning!**

Clean the device, charging base and AC adapter with a dry cloth slightly dampened with water. Do not use any abrasive cleaning agents or solvents such as alcohol, benzine or thinner for cleaning.

### **Replacing the batteries**

The device is powered by a built-in battery. If the device operates for a significantly shorter time after maximum charging, the battery will need to be replaced.

Contact your dealer or authorized service center for information on replacement options.

### **Warning!**

The battery may explode if mishandled. Do not disassemble or dispose of batteries in a fire.

Dispose of them in accordance with local regulations and standards.

## Technical specifications

<b>Power supply:</b>	Li-ion battery, 600 mAh, 3.7 V
<b>AC adapter:</b> (not supplied)	input: 230 V~ 50 Hz, 5 W output: 5 V/1,000 mA
<b>Class of protection:</b>	III
<b>Dimensions (w x h x d):</b>	3.7 x 14.8 x 4.6 cm
<b>Weight:</b>	120 g, with accessories 240g
<b>Noise:</b>	50 dB(A)

The declared noise emission value of this appliance is 50 dB (A), which represents the A-weighted sound power level with respect to a reference sound power of 1 pW.

Subject to change without notice!

ORAVA retail 1, a.s.  
Seberíniho 2, 821 03 Bratislava  
Slovak Republic  
+421 43 5306 002, office@orava.eu  
[www.orava.eu](http://www.orava.eu)

#### **INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING**

Dispose of used packaging material at a municipal waste disposal site.

#### **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more details collection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

#### **For business entities in the countries of the European Union**

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

#### **Disposal in other countries outside the European Union**

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product complies with all the essential requirements of the EU directives that apply to it.

# Warranty conditions

A warranty period of 24 months is provided for this device. When exercising the right to a warranty service, return the warranty card and the cash receipt of the equipment to the service center together with the product. The date of the warranty card and proof of purchase must be the same. If not, the warranty will not be granted.

- The right to free repair of the product during the warranty period expires if:
  - the user does not submit a valid warranty and proof of purchase of the product;
  - malfunctions due to incorrect connection, improper use and maintenance (dusty environment), mechanical damage, engine failure and residential installation;
  - do unauthorized interference or alteration in the product by an unauthorized person and/or a malfunction due to the use of non-original spare parts;
  - the appliance is not used according to the enclosed operating instructions.

## **Other terms and conditions related to the warranty**

The shop where the device is sold to the consumer is obliged to show the device to the buyer and inform the buyer:

- the way it is used and handled;
- how warranty repairs are available;
- with the nearest warranty service as well as the way the warranty service is dispatched to the supplier's service center;
- properly fill in the warranty card. Incorrect and incomplete warranty card is void and the consumer loses the right to warranty;
- the guarantee / repair, exchange or withdrawal of the contract / are covered by the relevant provisions of the Civil Code and the Complaint Rules.