

**orava**

# Lyra

**Instruction  
manual**

**EN**



**5-in-1 electric  
manicure/pedicure set**

# Intended use of the device

The appliance is designed solely for the care of nails on the feet and skin. The equipment is determined by the technical and operating parameters and functions, the safety and user instructions and the external effects of the operating environment.

ORAVA electrical appliances are manufactured according to the state of the art and recognized safety rules. Nevertheless, improper use may result in injury or endangerment to the life of the user or a third party, damage to equipment and other property

## General Instructions and Cautions

- We recommend that you read the operating instructions carefully and operate the equipment in accordance with the instructions before operating the equipment.
- The safety instructions and cautions in this manual do not cover all possible conditions and situations that may occur when using the machine. The user must understand that a factor that cannot be built into any of the products is personal responsibility and caution. Therefore, these factors must be ensured by the users operating the device.
- The manufacturer is not responsible for any damage to health or property if the safety instructions and warnings are not followed!
- If possible, keep the operating instructions close to the unit for the entire life of the unit. Always keep the operating instructions together with the appliance for future use and use by new users.
- Use the device exclusively for its intended purpose and in the manner specified by the manufacturer.
- This is not a professional device for commercial use.
- Do not change the machine's specifications and characteristics.
- The manufacturer is not liable for damage caused during transport, misuse, damage or destruction of the device due to adverse weather conditions.

## **Operating environment safety**

- Do not use the device in an industrial or outdoor environment!

### **Do not expose the device to:**

- sources of excessive heat or open fire,
- vibration and excessive mechanical stress,
- insects, animals and plants,
- aggressive and chemical substances.

The operating environment of the equipment shall always be in accordance with the specified essential characteristics.

### **Operating environment characteristics:**

1. Ambient temperature: +5 - +40 ° C
2. Humidity: 5 - 85%
3. Altitude: = <2 000 m
4. Occurrence of water: occasional condensation of water or occurrence of water vapor
5. Occurrence of foreign bodies: amount and type of dust are insignificant

### **Electrical safety**

- Class III electrical devices are devices that are powered by a low-voltage power supply (battery or accumulator) and do not present a hazard to the user in terms of electric shock.

### **Safety of persons**

- Operations of the device include operations such as turning the device on and off, user handling and adjusting operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.

### **Unpacking**

- Unpack the device and its accessories and dispose of any parts of the packaging material, labels, and labels before operating it.
- Store the packaging materials in a safe place or keep them out of reach of children and incapacitated persons.

### **Inspection/Commissioning**

- We recommend performing initial and subsequent regular inspections of the equipment. Use the device only with accessories supplied and approved by the manufacturer.
- Never use the appliance if it is incomplete, damaged or parts or accessories have been damaged during use (eg due to a fall).

- Never clean the device (body with electrical parts) in such a way as to allow it to be immersed in the liquid and the liquid to enter the device.
- Clean electrical parts only with a damp cloth and wipe dry or allow to dry.
- Keep the device clean and dry.

## **Operation/Use**

### **Warning!**

- The device is designed for personal use.
- With this in mind, it is not recommended that people use the device in professional salons.

Risk of transmission of dermatological disease!

### **Warning!**

- Use the device with extreme caution.
- Do not use the device in places with open wounds or other acute skin infections.

## **Special safety instructions. Read carefully!**

- The electrical equipment is designed and manufactured in such a way as to allow safe operation and use by unauthorized persons. Despite all the precautions taken by the manufacturer for safe use, operation and use, there are certain residual risks and potential hazards associated with them.
- The following symbols and their meanings have been used on the device and in the accompanying documentation to indicate potential hazards:



This symbol warns users that if the safety instructions for using and operating the device are not followed, there is a risk of: serious injury or death!

Risk of equipment damage or other property damage!



This symbol indicates that the electrical equipment is operating at a safe low voltage for operation.

## **Transportation/Transfer**

- Only transport/carry the equipment after thoroughly inspecting the area and routes, which must be clear of obstructions.
- Never carry the machine while it is in operation. Do not carry the device while it is on.
- When carrying, ensure that your hands and equipment are not damp or slippery.  
Risk of serious injury or death!  
Risk of equipment damage!

## **Unpack/Packaging**

- Unpack and dispose of all parts and accessories of packaging materials, and labels prior to startup. Keep all packaging materials in a safe place or keep them out of the reach of children and incapacitated persons.  
Risk of serious injury! There is a risk of suffocation!

## **Inspection/Commissioning**

- Never use the appliance if it is incomplete, damaged or any part of it has been damaged during use. Have the device repaired by a specialist garage.
- Always turn the device to the ,0' position when attaching or removing handles.  
Risk of serious injury!

## **Warning!**

- Handle with care. Improper use can cause injury. Especially at higher speeds, cautious handling is recommended.
- The appliance is intended for domestic use. This is not a professional device.
- Be careful not to let the device come into contact with water - it may be damaged.
- Do not use the device in an industrial environment or outdoors.
- Do not use the device in a humid environment (near a swimming pool, wash basin or shower, etc.).
- If the head or cover is damaged, stop using the machine for safety reasons.
- You should not leave the device turned on for more than 20 minutes. To prevent the motor from overheating, a pause of at least 15 minutes is required after this time.
- If you experience discomfort or pain or irritation while using it, stop using the device.

- Make sure your hair does not get caught in the rotating shaft when using the machine. Secure your hair with a rubber band to be sure.
- Do not use the device after taking medicines or alcohol (limited ability to perceive!).
- Do not use the device while driving a motor vehicle.
- Do not use the appliance in bed. You must never fall asleep during use.
- Do not apply strong pressure and always bring the handles carefully as close as possible to the surface to be treated.
- Keep in mind that grinding sticks have limited effectiveness when wet. For this reason, we ask you not to use the device in a water bath.
- Check the results regularly during treatment.  
This is especially true for diabetics, because they do not have such sensitivity in their hands and feet as a result of the disease.
- Do not use the machine if it has been dropped and shows visible signs of damage.
- Do not repair or modify the device yourself. Have all repairs carried out by an authorized service center. By interfering with the product, you expose yourself to the risk of losing the legal right from faulty fulfillment, eventually. quality assurance.  
Risk of serious injury!  
There is a risk of damage to the equipment or other property damage!

## **Location/Installation**

- Children under 3 years of age must be prevented from accessing the equipment unless they are constantly supervised.
- Children 3 years of age and under 8 years of age must not turn on, regulate or clean the device, or perform maintenance by the user.
- This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental abilities or lack of experience and knowledge when supervised or provided they are instructed in the safe use of the equipment and understand the risks involved.
- Children must not play with the appliance.

## **Warning!**

- Place the device in a place where children cannot reach freely. Avoid children manipulated (played) with it. The device may topple over and cause serious injury. Mechanical damage (breakage or breakage of parts and covers) of the device can cause serious injury.

Risk of serious injury or death!

There is a risk of damage to the equipment or other property damage!

- Keep the device away from animals. The device may topple over and cause mechanical damage (rupture or breakage of parts and covers) of the device may cause serious injury.
- The machine must be used and stored on a stable surface.
- Always make sure that the area where you want to place the device has sufficient space, stability, and mechanical strength.
- Do not place the appliance on or near electric or gas cookers and other heat sources.
- Never cover the appliance when it is switched on (blanket, pillow).
- Turn off the unit when not in use, cleaning, attaching accessories, or when a malfunction occurs.
- Do not touch any parts of the machine in motion. Do not push or push your fingers between the rotating parts. Never handle sticks while the machine is plugged in.
- Never leave the appliance unattended and freely accessible.

Risk of serious injury!

## **Cleaning/Maintenance**

### **Cleaning the outside of the machine**

- Turn off the machine before cleaning.
- Wipe the unit with a cloth that has been slightly moistened. Never allow liquid to enter the device or accessories. Then wipe everything dry.
- For hygienic reasons, the sticks can be cleaned with a cloth. brush. Then dry them thoroughly.
- Do not use metal objects, petrol, thinners or abrasive cleaners, etc. to clean the surface.
- To avoid possible damage, do not wash the device under running water, spray water or immerse it in water or any other liquid.
- Do not reuse the appliance until it is completely dry.  
Risk of serious injury or death!

## **Device Information**


- Nail and foot care equipment.
- 2 speed settings according to your needs.
- 5 attachments for specific applications.
- The manicure and pedicure attachments is equipped with high-quality handles. In the basic package there are 5 handles with different surfaces and long life, allowing you to treat your feet and nails at a high level, which is otherwise only possible with a pedicurist.



# Power supply

The device is powered by 2 1.5 V AAA batteries (not supplied). Insert the batteries into the device:


- 1 Open the back of the battery compartment and open the battery compartment.
- 2 Insert 2 AAA size 1.5 V batteries (not supplied) into the battery compartment. Observe correct polarity + and - marked inside the space.
- 3 Close the battery compartment by sliding the cover until it clicks.

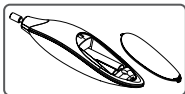

## Notes

- Do not insert any other objects into the battery compartment.
- If you will not be using the device for an extended period of time, remove the batteries to prevent possible leakage of the battery contents and subsequent corrosion.
- Observe correct polarity + and -. If the batteries are stored in the wrong polarity, the batteries and the device itself may be damaged.
- Always replace the batteries when the head stops rotating
- Do not insert any other objects into the battery compartment.
- If you will not be using the device for an extended period of time, remove the batteries to prevent possible leakage of the battery contents and subsequent corrosion.

## Parts description

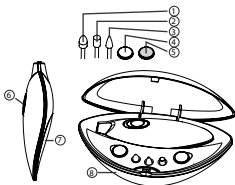

- 1 Felt handle (polishing)
- 2 White corundum sanding roller
- 3 Diamond Grinder with Silicon Carbide (Carborundum)
- 4 Nickel grinder
- 5 Abrasive paper sander
- 6 Power switch (on (2 speeds)/off)
- 7 Battery cover
- 8 Storage case

## Operation

- 1 Before using for the first time, insert the batteries as described above.
- 2 When using the machine, follow the recommended nail care instructions found eg. on the Internet.
- 3 Select the desired grinding/polishing head (attachment) you want to use and attach it to the machine body until it clicks into place.

### **Felt handle (1):**

Nail polishing to give them a glossy finish.

### **White corundum sanding roller (2):**

Ideal for use on acrylic (artificial) nails, shortening and shaping the nail edge.

Can also be used on natural nails

**Diamond Grinder with Silicon Ravid  
(Carborundum) (3):**

It can be used to remove cuticle from the side and top of the nail.

**Nickel Grinder (4):**

For precise nail polishing of both acrylic and natural nails.

**Abrasive paper grinder (5):**

Grinding thick nails for perfect shape.

- 4 Slide the power switch to the "1" position to turn on the machine and activate a slow speed. Treat your nails with the attached handle. Gently press the device on with your fingernails or cuticles and move the device with small circular or sliding movements as shown (see illustration). To change to high speed mode, set the power switch to "2".



- 5 After use, turn the power switch to "0" to turn off the unit. Remove the handle and clean the device and handles as described in for cleaning and store it with the handles in the storage case.

# Problem solving

## **Warning!**

If you have any problems with this device, try this problem solving guide.

If the measures do not help, do not attempt to disassemble or repair the device yourself.

## **The device is not working.**

Batteries are almost discharged or completely discharged.

Replace the batteries as instructed. The batteries are inserted incorrectly. Insert the batteries correctly.

## **Unusual noise**

The grinding shaft is incorrectly installed.

Install the grinding handpiece correctly as instructed.

## **Note**

If the device still does not operate properly after performing the above solutions, stop using the device and contact the seller.

# Cleaning and maintenance

## **Turn off the machine before cleaning.**

### **Cleaning the device surface**

To clean the surface, panel, controls, use a soft cloth slightly moistened with a mild cleaning solution. Do not use abrasive cloths, cleaning powders

or solvents such as thinner, gasoline or alcohol. After cleaning, allow the device to dry and store it in its case.

### **Cleaning of attachments**

Use a brush to clean the handles and rinse them under running lukewarm water. Do not use cloths that leave fibers and scraps on the rough surface.

After cleaning, allow the handles to dry and place them in the protective case.

# Technical parameters

**Power consumption:** approx. 540 mW

**Power supply:** 2x 1.5 V AAA battery (not supplied)

**Dimensions:** 176 x 91 x 49mm

**Material:** ABS

**Noise level:** 47 dB

The declared noise emission value of this appliance is 47 dB (A), which represents the sound power level A relative to the reference sound power of 1 pW.

## **Supplied accessories:**

operating Instructions (1)

attachments (5)

storage case (1)

**Subject to change!**

**Producer:**

ORAVA retail 1, a.s.  
Seberiniho 2  
821 03 Bratislava  
Slovenská republika

**Importer:**

ORAVA retail 1, a.s.  
Seberiniho 2  
821 03 Bratislava  
Slovenská republika

ORAVA distribúcia CZ, s.r.o.  
Ostravská 494  
739 25 Světlá nad Sázavou  
Česká republika



**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

The symbol on the product or on its packaging indicates that this product does not belong to household waste. It is necessary to take it to a collection point for electrical recycling and electronic equipment.

By ensuring proper disposal of this product, you will help prevent negative consequences to the environment and human health that would otherwise be caused by inappropriate disposal of this product. For more detailed information about recycling of this product, please contact your local authority, your household waste disposal service or the shop where you purchased the product.



This product meets all the essential requirements of the EU directives that apply to it.