

Electric grill

orava

Grillchef-5

Instruction manual

EN



CE

Grillchef-5

Intended use of the device

The device is designed exclusively for heat treatment of food - grilling, baking, baking, etc., to the extent that is determined by technical and operational parameters and functions, safety and user instructions and external influences of the operating environment.

ORAVA electrical appliances are manufactured in accordance with the state of the art and recognized safety regulations. Nevertheless, incorrect and unprofessional use or use contrary to the intended purpose may create a risk of injury or endanger the life of the user or a third party, resp. damage to equipment and other property.

1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the generic term product is used in text parts such as: electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
 - household electric appliances,
 - information and communication equipment,
 - consumer electronics,
 - lighting equipment,
 - electrical and electronic tools,
 - toys and equipment for sporting and recreational

1.1 General safety instructions

- Before commissioning the unit, we recommend that you carefully read the operating instructions and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that can not be incorporated into any of the products is responsibility and caution. These factors must therefore be ensured by users / users who use and operate this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!
- Make sure that the appliance is complete and shows no signs of damage before using the appliance for the first time. If the product is defective or if it has any visible damage, do not use the product.
- Keep the operating instructions as close to the device as possible throughout its service life. Always keep the operating instructions together with the appliance for future use and use by new users.

- Use the appliance only for the purpose for which it is intended and in the manner specified by the manufacturer.
- The appliance is intended for home and similar indoor use, with no special focus.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

1.2 Safety of the operating environment

- Do not use the device in an industrial environment or outside environment.
- Always keep the operating environment clean and well lit.
- Do not place the device on an unstable surface. Overriding or dropping the device may result in personal injury or damage to the device.
- Do not expose the unit to direct sunlight or excessive heat sources.
- Do not use an electric appliance in areas with flammable liquids, gases or dust. The appliance may be the source of scaling, which can result in the ignition of dust or vapors.

Features of the operating environment

1. Ambient temperature: $+5 \div +40$ ° C
 2. Humidity: $5 \div 85\%$
 3. Altitude: $\leq 2\,000$ m
 4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
 5. Occurrence of foreign bodies: amount and type of dust are not significant
Protection class: IP20
- Other characteristics of the operating environment (mechanical stress - shocks and vibrations, occurrence of plant, animals, weather effects) are negligible in terms of effect on the correct and safe use of electrical equipment.

1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electrical appliance is designed for mains supply 230 V ~.
The electrical safety of the appliance is guaranteed only if it is properly connected to the electricity grid.
- Only use a power cord with a plug (mains lead) that came with the device and compatible with a wall outlet. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible power outlet. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- Do not pull the power cord / power cord by pulling on the cord / cord. Disconnect the power cord by pulling the plug behind the power cord / power cord plug.

- If you use an extension cord, check that the total rated (ampere) power of all devices connected to the extension cord does not exceed the maximum current rating of the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power outlet, and not to another extension cord or power supply. Extension power cord or power supply block must be designed for grounded plugs and plugged into a grounded outlet.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged sockets.
- To avoid electrical shock, plug the power cables into properly grounded electrical outlets. If the device is equipped with a 3-pin power supply cord, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.
- Do not bend, crush or otherwise expose the power cord / power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.
- If the power cord is damaged, disconnect the appliance from the mains and do not use it again. If the power cord / power cord is damaged, it must be replaced by the manufacturer, its service department, or a qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical appliance as well as the power cable. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock. If the power cord is wet or the appliance gets water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power supply before attempting to disconnect the power supply. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

1.4 Safety of persons

- This appliance is intended for use by persons without an electrotechnical qualification (layperson) according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children 8 years of age and older and persons with reduced physical, sensory or mental abilities or lack of experience and knowledge only when under the supervision or guidance of the responsible person have been instructed to use the appliance in a safe way and understand the potential hazards .
- Cleaning and user maintenance can be carried out by children 8 years of age and older only under the supervision of the responsible person.

- Children may not play with the appliance.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance. Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus. Inattention during operation may result in serious injury.

1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
- If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
- Electrical appliances that are cleaned after use and are not intended to be completely or partly immersed in water or other liquid, protect against the effects of dripping and / or splashing water and before immersion.
- Electric household appliances, like all other technical devices, are subject to the surrounding environment and natural wear. Since the legal framework of regular maintenance is not laid down for lay-in electrical household appliances, the manufacturer recommends that the user have the appliance checked and cleaned at least once a year by a specialist workshop.
- By doing so, it is possible to achieve safety, operational reliability and increased service life.
- Do not disassemble the electric appliance! The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the mains supply during user maintenance. In the event of a fault, please have the repair serviced by an authorized service center.
- Before calling a service:
 1. Turn the appliance off and on to make sure the fault reappears.
 2. If the malfunction of the appliance still persists after these operations, call the nearest specialist service center.
- Never repair the electric appliance yourself!
- Unauthorized, unqualified and improper use of an electric appliance may result in electric shock or other serious injury.
- Only carry out the warranty or post-warranty repair of an electrical appliance to an authorized qualified person^(*).

^(*)Competent qualified expert: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

2. Special Safety Instructions. Read carefully!

- Electrical equipment is designed and manufactured in such a way as to allow for safe operation and use by persons without a professional qualification. Despite all the measures taken by the manufacturer to ensure safe use, handling and use, it carries with it some residual risks and associated potential hazards.
- To warn of possible hazards, the following symbols and their meanings have been used on the device and in the accompanying documentation:



This symbol alerts users that the device is operating a dangerous electrical voltage. Do not remove protective covers on the device. Failure to observe the safety instructions during use and operation of the device may result in:
Danger of electric shock!
Danger of serious injury or life threatening!



This symbol alerts users to the following:
Risk of serious injury or life threatening when not following the safety instructions when using and operating the unit!
Danger of damage to equipment or other damage to property!



This symbol warns users that if the safety instructions for use and operation of the appliance are not followed, there is a risk of: Burns from hot surfaces!



This symbol alerts users to the following: Failure to observe the safety instructions during use and operation of the unit may result in: Danger of fire!

Transport/Carry

- When transporting and using, for example the transport cart, be careful when moving, to avoid overturning the device.
- Transport / carry the equipment only after thorough inspection of the space and the routes, which must be unobstructed.
- Never carry the machine while it is in operation. Do not carry the device while it is plugged into a wall outlet.

Attention!

- Some surfaces may be hot during operation.
 - Never transfer the appliance until it has cooled down to ambient
 - Transfer the device firmly with both hands behind the handles or the lower edge of the base or fixed parts of the body.
 - Make sure that your hands and equipment are not damp or slippery when carrying.
- There is a risk of serious injury or life threatening!
There is a risk of damage to the device!

Unpacking/Packaging

- Unpack and remove all parts and accessories of packaging materials, labels, and labels before putting the device into operation. Keep all packaging materials in a safe place or keep them out of the reach of children and inappropriate persons.
There is a risk of serious injury!
There is a risk of choking!

Check/Startup

- Clean the machine before commissioning as described in the „Startup“ section. „Cleaning“.
- Do not clean the unit (the body with the electrical parts and the control panel) and the power cord with the plug and the temperature controller - under running water, which may cause the liquid to flow into the device.
- Clean these parts with a slightly moistened cloth and wipe dry or let it dry.
- Only clean the appliance if it is switched off and disconnected from the mains.
- We recommend performing both initial and subsequent regular machine inspections. Do not attempt to interfere with the construction or adjustment of the component parts in any way.
- Never use the appliance if it is incomplete, damaged, or any part of it has been damaged during use. In case of damage, have the appliance repaired by a specialist workshop.
There is a risk of serious injury!

Location/Installation

Warning!

- The appliance is not intended for use in recreational and motor homes and boats.
- Only place the appliance on straight, strong and stable pads - kitchen work desks and furniture parts, suitable for the location of kitchen utensils.
- It is recommended to use a heat-resistant insulation pad underneath the device to provide effective protection against excessive heat flowing from the device.
- The insulating washer must be made of the reaction-to-fire class A1 (non-combustible) or A2 (non-flammable) with a thickness of at least 1 mm. The size of such a pad should exceed the ground plan of the device by 150 mm on each side.
- Always make sure that the place you want to place the device has sufficient space, stability, mechanical strength and appropriate lighting.
- Do not place objects or containers of liquids on the heated plates unless you use them.
- Do not place the appliance:
 - unstable tables or inappropriate parts of furniture,
 - on an uneven and dirty surface,
 - on the sealing edge of tables or parts of furniture,
 - in the vicinity of containers with water or other liquids.

Warning!

- It is forbidden to install and use the device in an environment where there is a risk of fire or explosion of explosives, explosions of flammable gases and vapors, and fire of flammable liquids.

Warning!

- Place the device in a place where children can not reach freely. Work desks and furniture for placing should not be less than 85 cm.
- Prevent children from handling the device. The device may overwrite and cause serious injury. Mechanical damage (breakage or breakage of parts and covers) of the device can cause serious injury.

- Do not place the appliance and do not use the proximity of containers with water. If the appliance falls into the water, do not remove it! First, pull the power cord plug out of the power outlet and then select the device.
In such cases, take the device for inspection to a specialist service to check that it is safe and working properly.
There is a risk of electric shock!
There is a risk of electrical short circuit!
- Do not expose the device to:
 - direct sunlight, sources and equipment producing heat,
 - vibration and mechanical stress,
 - excessive dust,
 - water and excess moisture,
 - insect,
 - aggressive effects of the external environment.
 There is a risk of serious injury!
There is a risk of damage to equipment or other property damage!
- Do not cover the device in any way. Do not insert or allow the foreign bodies to enter the holes of the device covers. Do not cover the cover openings for air flow. Air ventilation ensures reliable and safe operation of the device.
- From a fire protection and safety point of view, the device can also be placed on a work table or similar surface if a safe distance from the flammable surfaces is maintained:
 - at least 800 mm in the direction of the main heat , and
 - at least 200 mm in other directions.
 There is a risk of electric shock! There is a danger of fire!

Operation/Supervision

Warning!

- Only use the device with the original parts and the supplied accessories.
- For the safe and reliable use of the device, use only the original power cord with the appropriate thermostat connector.
- This requirement applies to all types of equipment that include a power supply with a connector containing the thermostat.

Warning!

- Connect the appliance to the power supply only in such a way that you first connect the thermostat socket to the socket on the device and then plug the power plug for the mains socket.
- Do not disconnect the AC power plug from the device while the power cord plug is plugged into an electrical outlet.
- The power supply connector is under a dangerous voltage when the power supply is connected to the power supply.
- Do not drop any objects into the power connector.
- Make sure that the controller is set to „OFF“ in the „0“ position before each connection to the power supply.
- Do not switch the device on or off by plugging in or pulling out the plug of the power cord from the wall socket.
- Always connect the appliance to mains power supply for normal use, then switch on the main power switch - the power controller.
- When you have finished using the appliance, turn off the main power switch - the power controller, and then pull the plug of the power cord out of the mains socket.
- The device is under dangerous voltage when the power supply is connected.
There is a risk of electric shock!
There is a risk of damage to equipment or other property damage!
- The electrical socket and power cord must remain easily accessible for safe disconnection of the device from the power supply.

- Always unplug the power cord from the wall outlet when leaving the device unattended.
- Never leave the appliance unattended and freely accessible with a free-hanging power cord. Children, inappropriate persons or animals could throw down the device for the power cord.
There is a risk of serious injury!
There is a risk of damage to equipment or other property damage!
- Do not store the appliance with a wrapped cord around its body. Unfold the network cord „in the way it was put in the original packaging by the manufacturer.
- If you are not using the device for a long time, disconnect the power plug from the socket located on the device itself. Keep the power supply securely together with the device.
There is a risk of damage to the device or other damage to property.
- Always keep your device under control during use and operation!
- This device is not intended to be operated via a programmer, external time switch or remote control because there is a risk of fire if the device is covered or incorrectly positioned.
- Do not leave the appliance unattended during use and during operation, especially when there are children, inappropriate persons or animals nearby.
- Do not use the appliance near easily flammable materials and objects, curtains, curtains, decorative fabrics,

Warning!

- Do not use the appliance for space heating, drying textiles, clothing, footwear or any other items!
- Do not place objects on the appliance's heating surface. There is a danger of fire!
There is a risk of damage to equipment or other property damage!

Caution!

- The temperature of the accessible surfaces may increase during operation.
- Do not touch hot surfaces, especially when operating and immediately after use.
- Be very careful when preparing meals. Heat-treated dishes are also very hot.
- Use handles when handling the device and its parts. Use kitchen towels or gloves.
- Open the device covers (eg glass lid) at the time of use slowly and carefully.
When suddenly opening, there is a risk of a hot air leak.

Attention!

- After turning off the machine, the surfaces remain warm for a certain amount of time. Before any further handling of the storage device, always wait for the hot surfaces to cool completely.
There is a risk of burning from the hot surface!
There is a risk of burning / burning from hot air/hot food!

Caution!

- Do not use the appliance to prepare or cook food with an open flame.
- Food preparation unattended when using grease or oil can be dangerous and may result in fire.
- Do not try to extinguish with water if there is a fire (from overheating of fat or oil). Always turn off the device first and cover the flame on the device, for example, a lid or a fire blanket. There is a risk of damage to the device or other damage to property. There is a danger of fire!
- Never overload the equipment beyond the limits specified by the technical specifications!
- Observe the operating mode of the machine in accordance with the operating and operating instructions.
- If you notice any unusual occurrences (sounds, smell, smoke, ...) while using the device, switch off the device immediately and disconnect it from the power supply. Have the appliance checked by a specialist workshop.
- Carefully clean the appliance after all use of all food and grease residues. Incorrect cleaning or neglect of cleaning results in reduced equipment safety and service life.

Warning!

- Do not immerse the appliance (even in part) in water or other liquid. There is a risk of electric shock!
There is a risk of damage to equipment or other property damage!
- If any safety component (mechanical, electrical) is part of the device, never disable this part / component! If the safety component is damaged or not working, do not use the appliance!
- Children under 3 years of age must be prevented from accessing the appliance unless they are under the supervision.
- Children between 3 years and under 8 years of age may not connect the appliance to a power outlet, nor regulate or clean it or service users.

CAUTION!


- Some parts of this product may become very hot and may cause burns. Take special care when vulnerable persons or children are present.
- Never underestimate the potential hazards and take extreme caution !!!

Before use

Before using the device, observe the following!

- Wash the grill plate and tray with water and detergent. Wipe dry. Then lightly rub the grill surface with a suitable cooking oil.
- When using your grill for the first time, do not place any food on the grill plate.
- Connect the grill as instructed.
- There is an invisible protective layer from the production process on the radiator. This protective layer must be removed before first use. Set the thermostat to the maximum value and leave it on for 10 minutes. Make sure the room is well ventilated as smoke may be generated. This is not a fault on the device, it is a process in which the protective layer is removed. Switch off the grill by turning the thermostat to the „0“ (OFF) position and let it cool down. The grill is now ready for use.

Parts description

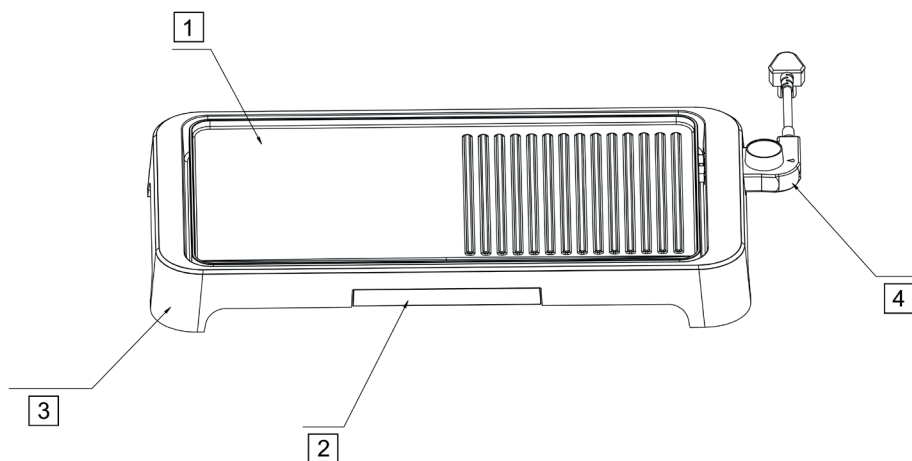

- 1 grilling plate**
- 2. removable oil tray (grease)**
- 3. base of grill**
- 4. detachable temperature setting thermostat / mains switch with power cord**

Using the device

1. Connect the thermostat with mains cord (4) to the thermostat connector on the grill.
2. Plug the power cord into an electrical outlet.
3. Switch on the appliance by turning the thermostat knob and set the desired power (temperature).
The power light on the thermostat will light up and the grill plate will heat up according to the thermostat setting.
It takes a few minutes to warm up. The heating time depends on the set thermostat level. The higher the setting, the longer it takes to warm up.
When the light turns off, the plate has reached the set temperature.
4. During operation, the power light turns on and off as needed to heat the grill plate.

Helpful overview for various thermostat settings

Setting	Temp.	Function
1 - 2	approx 60°	low temperature - keeping food warm
2 - 3	approx 100°	mild temperature - thorough and slow baking
3 - 4	approx 160°	high temperature - fast baking with juice preservation
5	approx 220°	highest temperature - rapid and fast surface overcooking

Grill as needed for about 3 to 8 minutes (or until the power light turns off again). Also adjust the thermostat as needed.

Notifications!

Do not leave the grill on for a long time without inserting food. The grill can overheat and be damaged.

Check grilled food regularly and do not leave it unattended.

Do not use any containers. There is a risk of fire.

5. After grilling, switch off the grill by setting the thermostat to position „0“ (OFF), disconnect the grill from the mains and then disconnect the thermostat from the grill plate and allow everything to cool down.

Warning!

Remove the grilled food from the plate (turn it over) only with plastic or wooden grill tools so that the non-stick surface of the grill plate is not damaged.

Types of meat grilling

- Always use fresh meat for grilling.
- Do not grill too large pieces of meat.
- We do not recommend grilling meat with coarse bones
- Do not salt the meat before grilling, otherwise it will be firm and dry.
- Do not pierce the meat during grilling, otherwise the juice will leak and the meat will be firm and dry.
- Always bake chicken well.

Cleaning and maintenance

Disconnect the thermostat with mains cord from the mains and from the appliance and let everything cool down completely.
Then disassemble the device in the reverse order of assembly.

1. Cleaning the surface of the device

Never immerse the entire assembly device (not even the grill heel itself) in water or any other liquid!

To clean the surface, use only a cloth slightly dampened in a mild detergent solution. Do not use any solvents or harsh cleaners. They can damage the surface finish.

2. Cleaning the grill plate

Use only a cloth slightly dampened in a mild detergent solution to clean the grill plate. Do not use any solvents or harsh cleaners. They can damage the surface finish.

You can wipe the grease off the plate with a paper towel first.

After cleaning, allow the plate to air dry and store everything after drying.

3. Cleaning the thermostat with mains cord

Clean the thermostat from any grease with a dry cloth. If necessary, use a slightly damp cloth in clean water.

Do not use any solvents or harsh cleaners. They can damage the thermostat.

4. Oil tray cleaning

Remove the tray and remove the juice and fat from it. Then wash it in warm water with kitchen detergent. Then rinse the tray with water, dry it and put it back in the bottom of the grill.

Technical specifications

Power supply:	220 - 240 V~ 50/60 Hz
Power consumption:	2 000 W
Dimensions (WxHxD):	58 x 6,5 x 31,2 cm
Weight:	2,9 kg

We reserve the right to make changes!

Warranty conditions

A warranty period of 24 months is provided for this device. When exercising the right to a warranty service, return the warranty card and the cash receipt of the equipment to the service center together with the product. The date of the warranty card and proof of purchase must be the same. If not, the warranty will not be granted.

- The right to free repair of the product during the warranty period expires if:
 - the user does not submit a valid warranty and proof of purchase of the product;
 - malfunctions due to incorrect connection, improper use and maintenance (dusty environment), mechanical damage, engine failure and residential installation;
 - do unauthorized interference or alteration in the product by an unauthorized person and/or a malfunction due to the use of non-original spare parts;
 - the appliance is not used according to the enclosed operating instructions.

Other terms and conditions related to the warranty

The shop where the device is sold to the consumer is obliged to show the device to the buyer and inform the buyer:

- the way it is used and handled;
- how warranty repairs are available;
- with the nearest warranty service as well as the way the warranty service is dispatched to the supplier's service center;
- properly fill in the warranty card. Incorrect and incomplete warranty card is void and the consumer loses the right to warranty;
- the guarantee / repair, exchange or withdrawal of the contract / are covered by the relevant provisions of the Civil Code and the Complaint Rules.

Producer:

ORAVA retail 1, a.s.
Seberíniho 2
821 03 Bratislava
Slovenská republika

Importer:

ORAVA retail 1, a.s.
Seberíniho 2
821 03 Bratislava
Slovenská republika

ORAVA distribution CZ, s.r.o.
Ostravská 494
739 25 Sviadnov
Česká republika

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING

Dispose of used packaging material at a municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more details collection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

For business entities in the countries of the European Union

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product complies with all the essential requirements of the EU directives that apply to it.