

Face sauna

orava

FI-120A

Instruction manual/warranty

EN



CE

FI-120A

The intended use of the device

The device is designed for cosmetic perfusion and preventive inhalation of water vapor. In particular, the device provides cosmetic relaxing effects such as, overheating, stimulation, and perfusion of the facial skin during vaporization, and allows preventive inhalation of heated steam by the respiratory tract to the extent defined by the technical and operating parameters and functions, safety and user instructions, and external influences of the operating environment.

ORAVA electrical appliances are manufactured according recognized safety rules. Nevertheless, the use or use contrary to designation may result in the risk of injury or endanger the life of the user or third person, damage to the device and other material values.

1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the generic term product is used in text parts such as: electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
 - household electric appliances,
 - information and communication equipment,
 - consumer electronics,
 - lighting equipment,
 - electrical and electronic tools,
 - toys and equipment for sporting and recreational

1.1 General safety instructions

- Before commissioning the unit, we recommend that you carefully read the operating instructions and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that can not be incorporated into any of the products is responsibility and caution. These factors must therefore be ensured by users / users who use and operate this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!
- Make sure that the appliance is complete and shows no signs of damage before using the appliance for the first time. If the product is defective or if it has any visible damage, do not use the product.
- Keep the operating instructions as close to the device as possible throughout its service life. Always keep the operating instructions together with the appliance for future use and use by new users.
- Use the appliance only for the purpose for which it is intended and in the manner specified by the manufacturer.
- The appliance is intended for home and similar indoor use, with no special focus.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

1.2 Safety of the operating environment

- Do not use the device in an industrial environment or outside environment.
- Always keep the operating environment clean and well lit.
- Do not place the device on an unstable surface. Overriding or dropping the device may result in personal injury or damage to the device.
- Do not expose the unit to direct sunlight or excessive heat sources.
- Do not use an electric appliance in areas with flammable liquids, gases or dust. The appliance may be the source of scaling, which can result in the ignition of dust or vapors.

Features of the operating environment

1. Ambient temperature: $+5 \div +40$ °C
 2. Humidity: $5 \div 85\%$
 3. Altitude: $\leq 2\,000$ m
 4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
 5. Occurrence of foreign bodies: amount and type of dust are not significant
- Protection class: IP20
- Other characteristics of the operating environment (mechanical stress - shocks and vibrations, occurrence of plant, animals, weather effects) are negligible in terms of effect on the correct and safe use of electrical equipment.

1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electrical appliance is designed for mains supply 230 V ~. The electrical safety of the appliance is guaranteed only if it is properly connected to the electricity grid.
- Only use a power cord with a plug (mains lead) that came with the device and compatible with a wall outlet. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible power outlet. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- Do not pull the power cord / power cord by pulling on the cord / cord. Disconnect the power cord by pulling the plug behind the power cord / power cord plug.
- If you use an extension cord, check that the total rated (ampere) power of all devices connected to the extension cord does not exceed the maximum current rating of the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power outlet, and not to another extension cord or power supply. Extension power cord or power supply block must be designed for grounded plugs and plugged into a grounded outlet.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged sockets.
- To avoid electrical shock, plug the power cables into properly grounded electrical outlets. If the device is equipped with a 3-pin power supply cord, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.

- Do not bend, crush or otherwise expose the power cord / power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.
- If the power cord is damaged, disconnect the appliance from the mains and do not use it again. If the power cord / power cord is damaged, it must be replaced by the manufacturer, its service department, or a qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical appliance as well as the power cable. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock. If the power cord is wet or the appliance gets water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power supply before attempting to disconnect the power supply. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

1.4 Safety of persons

- This appliance is intended for use by persons without an electrotechnical qualification (layperson) according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children 8 years of age and older and persons with reduced physical, sensory or mental abilities or lack of experience and knowledge only when under the supervision or guidance of the responsible person have been instructed to use the appliance in a safe way and understand the potential hazards .
- Cleaning and user maintenance can be carried out by children 8 years of age and older only under the supervision of the responsible person.
- Children may not play with the appliance.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance. Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus. Inattention during operation may result in serious injury.

1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
 - If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
 - Electrical appliances that are cleaned after use and are not intended to be completely or partly immersed in water or other liquid, protect against the effects of dripping and / or splashing water and before immersion.
 - Electric household appliances, like all other technical devices, are subject to the surrounding environment and natural wear. Since the legal framework of regular maintenance is not laid down for lay-in electrical household appliances, the manufacturer recommends that the user have the appliance checked and cleaned at least once a year by a specialist workshop.
 - By doing so, it is possible to achieve safety, operational reliability and increased service life.
 - Do not disassemble the electric appliance! The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the mains supply during user maintenance. In the event of a fault, please have the repair serviced by an authorized service center.
 - Before calling a service:
 1. Turn the appliance off and on to make sure the fault reappears.
 2. If the malfunction of the appliance still persists after these operations, call the nearest specialist service center.
 - Never repair the electric appliance yourself!
 - Unauthorized, unqualified and improper use of an electric appliance may result in electric shock or other serious injury.
 - Only carry out the warranty or post-warranty repair of an electrical appliance to an authorized qualified person (*).
- (*) Competent qualified expert: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

2. Special Safety Instructions. Read carefully!

- Electrical equipment is designed and manufactured in such a way as to allow for safe operation and use by persons without a professional qualification. Despite all the measures taken by the manufacturer to ensure safe use, handling and use, it carries with it some residual risks and associated potential hazards.
- To warn of possible hazards, the following symbols and their meanings have been used on the device and in the accompanying documentation:



This symbol alerts users that the device is operating a dangerous electrical voltage. Do not remove protective covers on the device.

Failure to observe the safety instructions during use and operation of the device may result in:

Danger of electric shock! Danger of serious injury or life threatening!



This symbol alerts users that by violation of safety instruction it can cause danger or serious life threatening injury.

Danger of damage to equipment or other damage to property!



This symbol means that the product is made with a double insulation between hazardous live parts (parts with dangerous voltage from the mains) and parts that are accessible in normal use.



This symbol used on the product replaces the sentence: Do not immerse in water or other liquids!



Danger of burns due to vapor leakage! Be careful when handling the device.

Transportation/ Transfer

- When transporting, be careful when moving, to prevent overturning, falling and damage to the device.
There is a risk of damage to the device!

Packaging

- Unpack the equipment and accessories before putting it into service and remove all parts of packaging material and labels.
- Store the packaging in a safe place or keep it out of the reach of children.

There is a risk of serious injury! There is a risk of choking!

Check/Startup

- We recommend performing both initial and subsequent regular machine inspections. Only use the device with the accessories supplied and approved by the manufacturer.
- Never use the appliance if it is incomplete, damaged, or if parts or accessories (eg due to fall) have been damaged during use.
There is a risk of serious injury!
- Check and assemble the machine before operating it as described in „Before Use“.
- Never clean the device (body with electrical parts) in a way that liquid could get into the device.
- Clean the electrical parts with a damp cloth only and wipe dry or let it dry.
- Keep the appliance clean and dry.

Operation/Use

DANGER!

- Never use the appliance in the home environment for small children.
- If you decide to use your device for young or older children or for vulnerable people, always act only on the advice of a health care practitioner and exercise caution and never leave children and vulnerable persons without uninterrupted supervision by a responsible person.
- Never use medicine at arbitrary discretion. The device is not a medical aid.
- Never use the appliance if you are excessively tired, if you are under the influence of sedatives or narcotics and if you are too sleepy.
There is a risk of serious health hazards. There is a risk of choking.

Warning!

- Use the device with extreme caution.
In particular:
 - if different stains or plastic shapes are present on the skin, such as large pimples, birthmarks, blisters or warts, etc.,
 - if the skin is affected by eczema, psoriasis, open wounds or other acute skin infections,
 - if the skin of your face is otherwise mechanically or otherwise damaged in any way,
 - for heart disease,
 - for breathing problems and other serious respiratory diseases.
- Use of the device by persons insensitive to heat is recommended only with increased personal caution.
- Consult your doctor or healthcare professional for the suitability of using the device,
- The device was designed to allow application of the effects of water vapor, possibly enriched with herbal essences.
- Use the appliance only if it is filled with sufficient water. The required amount of water is defined by marking on the inner wall of the container.
- Use the instrument only in the recommended way and at a time when your effects will not be unpleasant.
- Only use the appliance on a face that has been thoroughly washed and removed from all cosmetic products.
- Adjust the temperature of water vapor so that your use of the device is not unpleasant and does not cause health problems.
- The duration of the appliance is not specified by the manufacturer. It is solely at the personal estimation of the responsible person not to exceed such a period of use in order to avoid danger and damage to health and damage or destruction of the device.
- All data in the instruction manual for use of the instrument are only indicative and represent only „Tip“ for use.
- If you experience any adverse effect on the condition of your face or respiratory system during use, stop using this device immediately. Contact your doctor if any difficulties arise or persist.
- The manufacturer expressly recommends that the equipment be maintained in proper purity.
- After use, always clean the device thoroughly according to the instructions in „Cleaning the Appliance and its Accessories for the Care of the Human Body“.

Warning!

- The device is intended for personal cosmetic and preventive relaxation use. In view of this, it is not recommended to be used by persons suffering from dermatological skin diseases and contagious respiratory diseases.
- Failure to follow the principles of proper and thorough hygienic maintenance of the appliance
Risk of transmission of dermatological disease!
- Incorrect or inappropriate cleaning of all parts can result, for example, resulting in the formation of molds, as a result of which there is a risk of serious danger or damage to health, and there is a risk of damage to the instrument.

Warning!

- Do not use the appliance in a bathtub and / or shower.
- Do not place or use equipment near bathtubs, showers, pools and other containers containing water. If the appliance falls into the water, turn it off and let it dry completely.
- If the equipment subsequently shows signs of damage or change of functionality, take it to a specialist service for inspection.
There is a risk of serious injury!
There is a risk of damage to equipment or other property damage!
- Never overload the equipment beyond the limits specified by the technical specifications!
- Do not expose the device to:
 - direct sunlight, sources of excessive heat,
 - vibration and mechanical stress,
 - polluting chemicals,
 - insects, plants,
 - aggressive environmental influences.
There is a risk of serious injury!
There is a risk of damage to equipment or other property damage!
- Observe the operating mode of the device (operating time / operation and breaks) in accordance with the operating instructions. Clean the device regularly.
Pollution of the device may result in a decrease in operating parameters and possible subsequent irreversible damage.
- If there is safety component / (mechanical, electrical) as part of the device, never disable this part! If the safety component is damaged or not working, do not use the appliance!
- Cleaning appliances and their accessories designed to care for the human body
- The use of body care products also involves the need for regular and thorough cleaning of these devices and their accessories.
- This paragraph lists important basic procedures for cleaning appliances and their accessories for the care of parts of the human body during repeated use.

Warning!

- Do not allow other persons to use a body care device, especially a personal hygiene appliance, personal use.
- Observe the following procedure and instructions when using and cleaning parts of the human body:
- Always check thoroughly for any damage to the appliance, whether it is working properly and that it is in good hygienic state.
- After each use of the appliance, all parts and surfaces of the appliance and its accessories that have been contaminated, or if there is the residue of cosmetic preparations, clean thoroughly with dry paper cloth - coarse dry cleaning,
- After removing coarse soiling, apply a suitable cleaning agent (suitable detergent concentrate to remove residual particles and degrease surfaces - cleaning and / or disinfectant for cleaning hygiene products), and thoroughly clean these parts by hand (by applying adequate pressure to the fingers and friction of surfaces)
- After cleaning, the accessories of the appliance (parts detachable from the unit with electrical circuits) should be thoroughly rinsed under flowing, clean and warm water,
- Wipe dry all parts of the equipment and accessories or let it dry.
- It is often necessary to repeat this process repeatedly to thoroughly clean the equipment accessories from the residue of the impurities.
- It is recommended to use a suitable disinfectant used in the area of human skin disinfection (eg Septonex spray, etc.) in order to obtain a higher effect in the cleaning and disinfection of the appliance accessories.
- Proper and thorough cleaning of accessories for human body care equipment is an important prerequisite for keeping these parts in an acceptable hygienic state and achieving the longest possible service life.
- Never underestimate the potential hazards and exercise caution!

Information

Take care of your tired skin, especially if you feel on your face symptoms of aging, loss of fat and nutrients from the cheekbones, chin and lips, and their accumulation on the neck.

The device is designed for intensive skin care and inhalation of water vapor.

- It relaxes the muscles and relieves pain.
- Performs deep skin massage.
- It gives your skin a youthful look.
- It relieves stress and fatigue.
- Opens the pores for more effective cleaning and moisturizes the skin.
- There is also a steam nozzle for inhalation of water vapor.
- It is easy to clean.

Proper use results in increased blood circulation in the facial skin, which results in a pleasant and long-term feeling of warmth (increase in skin temperature).

The facial sauna at regular intervals improves blood circulation in the face and releases the nasal and frontal cavities.

After you set the water temperature on the control panel of the appliance, the heating system with the temperature control maintains the required temperature in the device.


Preparation

Location

Unpack the device, remove all packaging material and place it on a flat and hard surface.

Do not place it on a rug, for example.

Part description

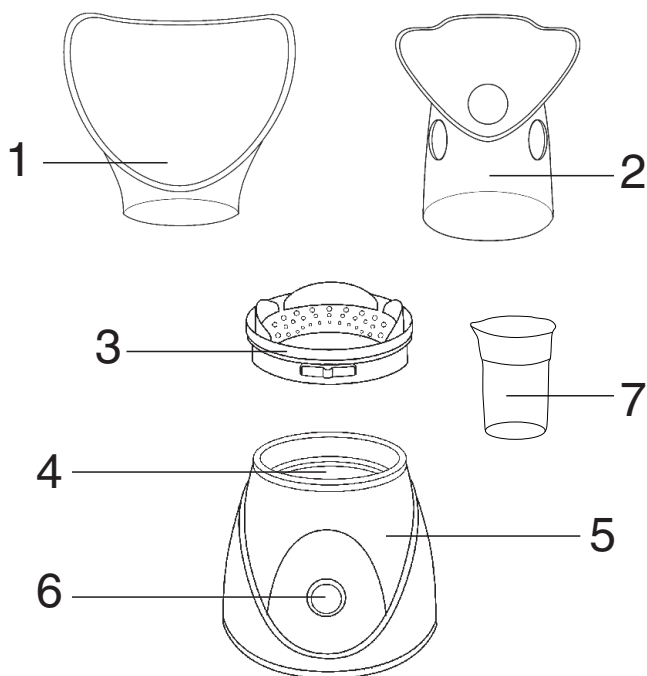

- 1 Face mask**
- 2 Nosepiece for inhalation of water vapor**
- 3 Extension holder with sliding steam regulator**
- 4 Water bowl (inside the appliance)**
- 5 Body of the device**
- 6 On/Off button with power indicator**
- 7 Water meter**

Using the device

- 1 Place the heater base on a flat, non-slip and dry surface.
- 2 The device can only be used if it is filled with water. Remove the Extension Bracket **3** by turning it clockwise and pulling it upwards. Fill the bowl with warm water as needed with the supplied measuring cup. Do not fill the water more than the „60ml“ mark on the inside back of the water bowl.

Warning!

- Never fill more water than the „60ml“ mark in the water bowl. Otherwise the appliance could be overfilled and the water would enter its interior. You could damage the device and disable it.
- 3 Make sure the device is OFF (button **6** is off).
 - 4 Replace the Extension Holder **3**. The projections must fit into the grooves on the base. Then turn the bracket to the left to lock firmly on the heater.
Then connect the power cord to a 230V~ 50 Hz power socket.
 - 5 Place the face mask **1** or the nozzle insert **2** for inhalation of water vapor into the extension holder **3**.
 - 6 Press **6** to turn on the device.
 - 7 Turn the steam regulator **3** to the right to block the vents for the steam to accumulate first.
 - 8 When the water begins to evaporate, sit comfortably with your face above the device and slowly press your face against the face mask. Close your eyes and relax.
Turn the steam controller slowly to the left to uncover the vents and set the desired steam level.
 - 9 Inhale water vapor or just enjoy hot steam on your skin. When using a facial sauna, your skin is optimally prepared for further care, such as deep cleansing, moisturizing, face masks etc. Vapour revives the skin, opens the pores, so the dirt can then be removed more easily. If you don't feel well or vapour is unpleasant, pull your face a little further from mask or reduce the intensity of the steam with the regulator. If you have an unpleasant feeling of persistence, stop using the device.

Warning!

For the following diseases, do not use the face mask:

- skin inflammation
- when the skin is reddening
- swelling in the face area
- for heart disease
- Breathing problems
- facial injuries
- Eczema
- psoriasis
- if you are pregnant or have other health problems

If you suffer from any above problems, ask your doctor for advice.

- 10** When the water from the water bowl evaporates, the device automatically shuts off.

When you want to turn off the device earlier, press switch 6 to turn off the power indicator.

Warning!

After 40 minutes, the appliance automatically shuts off even if there is still water in the water bowl.

- 11** After switching off, disconnect the appliance from the power supply, store device only after cooling off.

12 WARNING!

Do not put mineral water or oil in container (use only clean water).

Tips

Steam treatment for oily skin

Steam your face for about 10 to 15 minutes.

Then clean your face with water and a universal cleanser on your skin.

Then apply lotion or a peeling mask. Finally, use a facial emulsion.

Steam treatment for dry skin

Steam your face for about 5 to 10 minutes. Then clean your face with water.

Finally, use a whitening mask or a nutritional emulsion.

Steam treatment for sensitive skin

Steam your face for about 10 minutes.

Then clean your face with water.

Finally, use sensitive skin care products (cream, nourishing mask, etc.).

Steam treatment for skin prone to pruritus and rash

Steam your face for about 5 to 15 minutes.

Use a cotton pad to wipe off sweat and skin sebum.

Then gently exfoliate the skin

After exfoliation, treat the skin with a universal skin cleanser, skin tint or healing emulsion.

Store device after it has cooling off.

Cleaning and maintenance

Wash your face properly and use clean water before use.
Before cleaning, unplug the appliance and let it cool down.

Cleaning procedure

Cleaning the base

After using the device, pour out water and clean the base with a dry cloth. Do not use any abrasive cleaners or solvents such as alcohol, gasoline or thinner. Never immerse the appliance in water.

Cleansing face mask, nose tips and measuring cups

Clean these parts after assembly from the device in a mild detergent solution. Then rinse all with clean water and let it dry completely in the air.

Water bowl

When the limescale deposits begin to form in the bowl, clean the water tray with a normally available decalcifier, also suitable for aluminum. Follow the instructions for using the decalcifier.

Storage

Disconnect the appliance from the power supply. Check if it is cooled and there is no water in it. Then store it in a clean and dry place. Store the power cord around the base before storing the device

Technical specifications

Power supply:	230 V~ 50 Hz
Protection Class:	II (protection against electric shock the current is secured by double insulation)
Input power:	130 W
Dimensions (h x dia.):	11,3 x 12,9 cm (without accessories)
Bowl volume:	60 ml
Weight:	0,55 kg (with accessories)

The right to change is reserved!

Producer:

ORAVA retail 1, a.s.
Seberíniho 2
821 03 Bratislava
Slovenská republika

Importer:

ORAVA retail 1, a.s.
Seberíniho 2
821 03 Bratislava
Slovenská republika

ORAVA distribution CZ, s.r.o.
Ostravská 494
739 25 Sviadnov
Česká republika

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING

Dispose of used packaging material at a municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more details collection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

For business entities in the countries of the European Union

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product meets all the essential requirements of the EU directives that apply to it.