

Multifunction rice cooker

**orava**

# MH-05

## Instruction manual

EN



CE

MH-05

---

# Intended use of the device

The device is designed exclusively for heat treatment of food - cooking, stewing in a container intended for treatment, to the extent specified by technical and operational parameters and functions, safety and user instructions and external influences of the operating environment.

ORAVA electrical appliances are manufactured according to the knowledge of the current state of technology and recognized safety and technical rules. Nevertheless, incorrect and unprofessional use or use contrary to the intended purpose may create a risk of injury or endanger the life of the user or a third party, resp. damage to equipment and other property.

---

## 1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the general term product is used in text parts such as:  
electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
  - household electric appliances,
  - information and communication equipment,
  - consumer electronics,
  - lighting equipment,
  - electrical and electronic tools,
  - toys and equipment for sporting and recreational purposes,
  - medical devices (aids),
  - monitoring and control devices,
  - vending machines.

### 1.1 General safety instructions

- Before operating the unit, we recommend that you carefully read the instruction manual and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that cannot be incorporated into any of the products is personal responsibility and caution. These factors must therefore be ensured by users serving this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!
- Keep the instruction manual as close to the device as possible throughout its service life. Always keep the instruction manual together with the appliance for future use and use by new users.
- Use the appliance only for the intended purpose and in the manner specified by the manufacturer.
- The appliance is intended for home and similar indoor use without special focus.

- This appliance is intended, in addition to domestic use, for the following uses:
  - in shops, offices and other similar work environments;
  - in economic buildings;
  - in hotels, motels and other residential environments;
  - in bed and breakfast establishments.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

## **1.2 Safety of the operating environment**

- Do not use the device in an industrial environment or outside environment!
- Do not expose the appliance to:
  - sources of excessive heat or open flame,
  - dripping or splashing water,
  - vibration and excessive mechanical stress,
  - insects, animals and plants,
  - aggressive and chemical substances.
- The operating environment of the device must always be in accordance with the basic characteristics set out.
- Features of the operating environment:
  1. Ambient temperature:  $+5 \div +40$  ° C
  2. Humidity:  $5 \div 85\%$
  3. Altitude:  $\leq 2\,000$  m
  4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
  5. Occurrence of foreign bodies: quantity and type of dust are insignificant
  6. Protection degree: min. IP20 (device protected from touching dangerous parts by hand and non-waterproof)
- This degree of protection is not indicated on the product and on the technical parameters in the operating instructions.
- If the protection class of the product is different from IPX0, this information is then displayed on the label of the appliance or in the technical data of the operating instructions.
- Other characteristics of the domestic operating environment (mechanical stress - vibrations and vibrations, occurrence of plant, animals, weather effects ...) are negligible in terms of effect on the correct and safe use of electrical equipment.

### 1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electric appliance is designed to power from 1 / N / PE ~ 230 V 50 Hz.
- The electrical safety of the appliance is guaranteed only if it is properly connected to the mains.
- Electrical protection class I equipment is equipped with a protection against electric shock by means of protective earthing of inanimate parts, which can become dangerous when the device is malfunctioning. Always connect such devices to properly installed mains sockets that are equipped with earthing conductors and have a properly grounded earthing conductor.

All electrical equipment is equipped with a three-wire power supply.

- Class II electrical equipment is protected against electric shock by double insulation or by enhanced insulation of hazardous live electrical parts. Device of protection class II it must not be equipped with means to connect protective earthing.

All electrical equipment is equipped with two-wire power supply.

- Class III electrical equipment is a device that is powered by a small safe voltage source (battery or accumulator) and does not present any danger to the user from electrical shock.
- In order to provide increased safety against the risk of electric shock due to the use of electrical appliances by laypersons, it is recommended to install the power supply circuit for sockets with a rated current not exceeding 20 A RCD with a rated operating current not exceeding 30 mA.

To ensure the safety and correctness of the electrical installation, consult a qualified electrician.

- Only use a power cord with a plug (mains lead) supplied with the device and compatible with a wall socket. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible mains socket. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- The power cord and mains plug must always be easily accessible for safe disconnection of the electrical appliance from the power supply.
- Do not pull off the power cord by pulling the cable. Disconnect the power cord by pulling the plug behind the power cord plug.
- If you use an extension cord, make sure that the total rated power of all devices connected to the extension cord does not exceed the max. current load on the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power socket, and not to another extension cord or power supply. The extension power cord or power supply block must be designed for grounded electrical plugs and connected to a properly grounded electrical socket.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged drawers!
- To avoid electrical shock, plug the power cables into properly grounded electrical sockets. If the device is equipped with a 3-pole plug, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.
- Do not bend, crush or otherwise expose the power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.

- When the power cord is damaged, disconnect the appliance from the mains and do not use it again.
- If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similarly qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical appliance as well as the power cord and power socket. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock.  
If the power cord is wet or the water has penetrated the water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power circuit before attempting  
unplug the power. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

#### **1.4 Safety of persons**

- This appliance is intended for use and operation by persons without electrotechnical qualification - lay people, according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children under the age of 8 and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge when supervised or instructed to use the appliance safely and understand the dangers involved.
- Children may not play with the appliance.
- Cleaning and maintenance for users may not be performed by children unattended.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance! Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus.
- Inattention during operation may result in serious injury.

## 1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
- If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
- Electrical appliances that are cleaned after use and are not intended to be completely or partly immersed in water or other liquid, protect against the effects of dripping and / or splashing water and before immersion.
- Electric household appliances, like all other technical devices, are subject to the surrounding environment and natural wear. Since the legal framework of regular maintenance is not laid down for lay-in electrical household appliances, the manufacturer recommends that the user have the appliance checked and cleaned at least once a year by a specialist workshop.
- By doing so, it is possible to achieve safety, operational reliability and increased service life.
- Do not disassemble the electric appliance! The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the mains supply during user maintenance. In the event of a fault, please have the repair serviced by an authorized service center.
- Before calling a service:
  1. Turn the appliance off and on to make sure the fault reappears.
  2. If the malfunction of the appliance still persists after these operations, call the nearest specialist service center.
- Never repair the electric appliance yourself!
- Unauthorized, unqualified and improper use of an electric appliance may result in electric shock or other serious injury.
- Only carry out the warranty or post-warranty repair of an electrical appliance to an authorized qualified person <sup>(\*)</sup>.

(\*) Competent qualified expert: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

## 2. Special safety instructions. Read carefully!

The electrical equipment shall be designed and manufactured in such a way as to permit safe operation and use by persons without professional qualifications. Despite all precautions taken by the manufacturer for safe use, operation and use entails certain residual risks and the associated potential hazards.

The following symbols and their meanings have been used on the device and in the accompanying documentation to indicate potential hazards:



This symbol alerts users that the device is operating with hazardous electrical voltages. Do not remove the protective covers on the device. Failure to follow the safety instructions while using and operating the equipment may result in:  
Risk of electric shock! Risk of serious injury or death!



This symbol warns the user that if the safety instructions for using and operating the device are not followed, there is a risk of: serious injury or death! Risk of equipment damage or other property damage!



This symbol warns the user that there is a risk of not following the safety instructions when using and operating the machine: Risk of burns from hot surfaces!



This symbol warns the user that there is a risk of fire or fire if the safety instructions for using and operating the device are not followed!



This symbol warns users that the device should be cleaned after use and is not intended to be partially or completely immersed in liquid.  
Do not immerse in any liquid!

### Transportation/Transfer

- During transport and use take care when moving the truck to prevent the machine from toppling over.
- Only transport/carry the equipment after thoroughly inspecting the area and routes, which must be clear of obstructions.
- Never carry the machine while it is in operation. Do not carry the device while it is connected to a power outlet.
- Carry the device firmly with both hands on the bottom edge of the base or solid body parts.
- When carrying, ensure that your hands and equipment are not damp or slippery.
- For added safety (with respect to dimensions and weight), carry the device only with qualified and physically fit persons.  
Risk of serious injury or death! Risk of equipment damage!

### Unpacking/Packaging

- Unpack and discard all parts and accessories of packaging materials, and labels before operating the machine. Keep all packaging materials in a safe place or keep them away from children and incapacitated persons.  
Risk of serious injury! There is a risk of suffocation!

### Inspection/Commissioning

- The appliance is intended for food preparation. Therefore, clean all parts according to the instructions in the section before commissioning „Start-up“ resp. „Cleaning“.

- Never clean the device (body with electrical parts and control panel) and the power cord with plug under running water or immersion, as this may cause liquid to enter the device.
- Clean these parts only with a slightly damp cloth and wipe them dry or allow to dry.
- Only clean the unit when it is turned off and unplugged and adequately cooled.
- We recommend performing initial and subsequent regular inspections of the equipment. It is very important that the (glazed) lid of the device closes well and is not damaged. Do not attempt to interfere in any way with the design or adjustment of the components of the device.
- Never use the appliance if it is incomplete, damaged or any part of it has been damaged during use. Have the device repaired by a specialist garage.  
Risk of serious injury!

### **Location/Installation**

- Only place the appliance on flat, firm and stable bases - on kitchen desks and furniture parts suitable for placing kitchen appliances.
- Always make sure that the area where you want to place the device has sufficient space, stability, mechanical strength, and adequate lighting.
- Do not place any objects or containers of liquids on the unit when not in use.

### **Warning!**

Do not place the device:

- for unstable tables or inappropriate parts of furniture,
- uneven and dirty surfaces,
- on the tight edge of tables or furniture parts,
- in the vicinity of containers containing water or other liquids.
- Do not partially cover the device. Do not place any objects on the device. Do not insert or allow foreign bodies to enter the openings of the machine's covers.
- Do not block the air vents of the covers. Air ventilation ensures reliable and safe operation of the device.
- From a fire safety and safety point of view, the unit may also be placed on a workbench or similar surface as long as a safe distance from flammable surfaces or surfaces is maintained. materials:  
not less than 500 mm in the direction of the main radiant heat, and  
- at least 100 mm in other directions. Risk of fire!

### **Warning!**

- Place the device in a place where children cannot reach freely. Worksurface and furniture should not be lower than 85 cm.
- Do not allow children to manipulate (play) the device. The device may topple over and cause serious injury. Mechanical damage (breakage or breakage of parts and covers) of the device can cause serious injury.

Risk of serious injury!

There is a risk of damage to the equipment or other property damage!

- Do not place or use this product near containers containing water. Do not remove the device if it falls into water. Unplug the power cord from the wall outlet before removing the machine from the water. In such cases, take the equipment to a professional service center to check that it is safe and working properly.  
Risk of electric shock! Risk of electric short circuit!

### **Operation/Supervision**

#### **Caution!**

- Use the machine only with the original parts and the supplied accessories.
- For safe and reliable use of the device, use only the original power cord with the appropriate connector (plug) - disconnectable power supply.
- This requirement applies to all types of equipment that include a detachable power supply.



## **Warning!**

- Only connect the machine to the mains in such a way that you first connect the power cord plug to the power outlet (socket) on the machine and then connect the power plug to the power outlet.
- Do not disconnect the power plug from the machine while the power plug is plugged into an electrical outlet.
- The power supply connector is under dangerous voltage when the power supply plug is connected to the mains.
- Do not insert any objects into the power supply connector.

## **Danger!**

- When cooking food by frying or deep-frying, the oil used will heat up. Be very careful when operating the machine.
- The oil used is very hot!
- Be very careful when placing cold (frozen) food (food that contains residual amounts of cold or cold water) in hot oil. In such a case, the hot oil is rapidly cooled and sprayed into the space.
- Before placing frozen or wet food in hot oil, clear the food from ice or residual water.
- Avoid pouring cold water directly into hot oil!
- Avoid overheating and ignition of the oil.
- Do not use old or unsuitable oil or grease cartridges as they may catch fire.
- Never ignite hot oil with water if hot oil ignites! The use of water causes an increase in the volume of the drop more than 1700 times for each drop, when it falls into the hot oil, already at 100 ° C, and subsequent ejection of the burning oil into the environment.
- The increase in flame volume has a “deflagration (explosion first phase - rapid ignition)” character and can reach up to 8 meters in open space. Risk of fire or fire! Risk of serious injury!
- Always keep the unit under supervision during use and operation!
- This equipment is not intended to be operated by a programmer, external timer or remote control, as there is a risk of fire if the equipment is covered or improperly positioned.
- Do not leave the device unattended during operation, especially if there are children, incapacitated persons or animals near them.
- Do not use this product near flammable materials or objects such as. curtains, drapes, decorative fabrics, etc.
- Do not use the appliance for heating various kinds of liquids, for drying food, for heating rooms, for drying clothes, shoes or any other objects! Risk of fire!
- Make sure that the controller is set to “0” “OFF” before connecting the machine to the mains.
- Do not turn the device on or off by plugging in or unplugging the power cord from the wall outlet.
- In normal use, always connect the device to the power outlet first and then turn it on with the main power switch.

- After use, turn the power switch off with the main power switch, then unplug the power cord from the wall outlet.
- Do not use the unit if the main power switch is not working.
- The equipment is under dangerous voltage when the AC power is connected.  
Risk of electric shock!
- The appliance contains parts and surfaces that become very hot during operation - the appliance covers, workspace surfaces, and the cooker.

### **Warning!**

- Do not touch heated covers, surfaces or parts! Use only handles and handles!
- Use kitchen towels or potholders to open the lid of the container and handle the container.
- For handling eg. use the basket handle only when the appliance is in operation!
- Slowly and carefully open the appliance lid during operation. Sudden opening may cause hot air to escape from the work area.

### **Warning!**

- Warm surfaces remain hot for some time after the unit is turned off. Always wait until the hot surfaces have cooled down completely before any further manipulation - cleaning and storing.  
Risk of burns from hot surfaces!  
Risk of scalding from hot air!
- The power outlet and power cord must remain easily accessible to safely disconnect the equipment from the power supply.
- Never leave the appliance unattended and freely accessible with a free-hanging power cord. Children, incapacitated persons, or animals could pull the device off the power cord.
- Do not store the device with the power cord wrapped around its body. Fold the power cord in the same way as it was put in the original packaging from the manufacturer.  
Risk of serious injury!
- Never overload the device beyond the limits specified in the technical data!
- Use only with original parts and accessories provided by the manufacturer.
- Only use a container intended for food preparation.
- Only operate the machine when it is filled with the required amount of oil or grease.
- The oil level must always be within the MIN range. and MAX. indicated on the inner wall of the container.
- Do not place excessive food items and unsuitable containers in the machine.
- Observe the operating mode of the device according to the operating and use instructions.

- If you notice any abnormal effects (sounds, odors, smoke, ...) while using the unit, turn off the unit immediately and unplug it from the wall outlet. Have the device checked by a specialist garage.
- Always clean the appliance thoroughly of food, grease and burns after use. Failure to properly maintain the equipment will reduce its safety and practical life.
- Never put this part/component out of operation if any safety part/component (mechanical, electrical) is included! if it is safety part/component damaged or inoperative, do not use the device!
- Children under 3 years of age must be prevented from accessing the appliance unless they are constantly supervised.
- Children aged 3 years and under 8 years must not plug the appliance in, regulate or clean the appliance, or perform maintenance by the user.

### **WARNING!**

- Some parts of this product may become very hot and cause burns. Pay special attention when vulnerable persons or children are present.
- Never underestimate possible dangers and be careful !!!

### **Instructions for cleaning surfaces of equipment or parts intended to come into contact with food or oil**

- When using the appliance, it must not adversely affect the quality and properties of the food, so regular and thorough cleaning of all surfaces that come into contact with the food and oil to be processed is necessary.
- Always clean all parts of the appliance from food residues after use. It is important to thoroughly clean the surfaces of any grease and grease deposits.
- Do the following:
  - Disassemble the appliance (as instructed) into parts that are individually washable either directly under running hot water or can be immersed in warm water to which suitable detergent has been added and parts that are cleaned exclusively by wiping. Wiping cleans those parts of the machine that contain electrical components and circuits.
  - Thoroughly clear all parts of the appliance from visible food residues. A suitable method is to wipe all surfaces with a dry paper towel.
  - Immerse the individual washable parts in a kitchen sink (or suitable container) with warm water and a small amount of detergent concentrate. Let the cleaning solution act for a few minutes.
  - Subsequently contaminated surfaces with adequate pressure but thoroughly wipe with a soft cleaning sponge and remove any food residue.
  - Then clean the surfaces of parts of the machine parts with clean warm water using a soft sponge or cloth.
- Repeat this procedure as necessary to remove any residual detergent.
- Always wipe cleaned and washed surfaces thoroughly with a soft cloth or paper towel, or let them dry.

Thoroughness is important when cleaning equipment (parts and components intended to come into contact with foodstuffs), as food residues tend to be digested and thus contaminate safe food during their subsequent processing.

# Characteristics

Boiled or hard rice is a thing of the past. Multifunction Orava MH-05 with fully automatic operation prepares all types of rice (including rice for Sushi) perfectly. This will allow you to do more pleasant things than running around the stove. Up to 450 g of rice can be placed in a 1.5 l container, so it will perfectly serve a family of four.

## **A great helper for a low price**

With fully automatic operation, you won't have to worry about anything. The rice cooker will do all the work for you. Cooking is based on the principle of steam cooking, so the preparation of rice will be fast, healthy, without mixing and roasting. In addition, this affordable companion has a temperature keeping function that keeps the rice warm for up to 6 hours after cooking.


## **Simplicity and safety**

In addition to the quality functionality of this pot, its safety has not been forgotten. The rice cooker is equipped with non-slip feet, practical side handles and light indicators for operation and temperature maintenance. The equipment also includes a glass cover (lid) with a hole for steam escape and a triple safety fuse - against overheating, boiling water and automatic shut-off after boiling.

## **Easy maintenance and practical accessories**

For even better and more convenient cooking, the rice cooker comes with a scoop and a measuring cup for water and rice, so the resulting dish will always be perfectly prepared. And because your time is precious, maintenance is also very easy - the internal removable pot has a non-stick surface and you can clean it easily and quickly.

# Package Contents/Parts Description

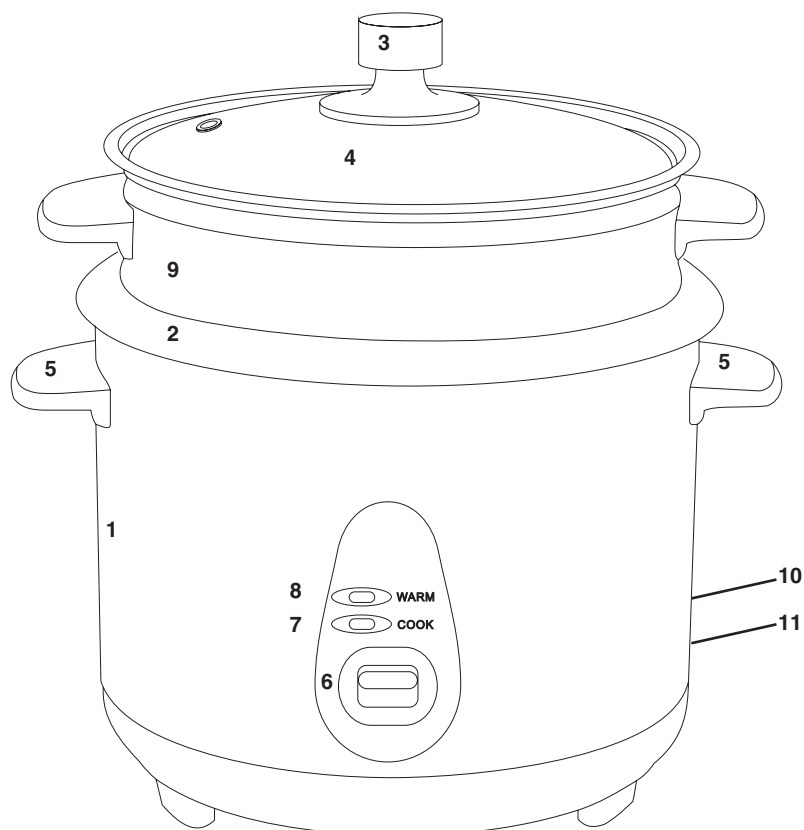

- 1 Device body
- 2 Inner container
- 3 Lid handle
- 4 Glass lid
- 5 Device handles
- 6 Switch
- 7 COOK indicator light
- 8 WARM indicator light
- 9 Steamer

## Side

- 10 Power cord connector
- 11 Switch 0/1 (OFF/ON)

## Supplied accessories

- Scoop (1)
- Measuring cup (160 ml) (1)
- Power cord (1)
- Steamer(1)

## Preparation before use

Do not connect the device to the mains during preparation.

Choose accessories (scoop, measuring cup), lid, inner container ...

Rinse them in lukewarm water. Fill a removable container with a non-stick surface with a little water and wash thoroughly.

Do not immerse the body of the device in water!

Clean the surface with a cloth dampened in water. Dry all parts thoroughly.

## Preparation of the device for operation

Prepare the device for operation as follows.

After unpacking, make sure you have received all of the items listed. Remove the inner container.

Remove all items from the inner container.

Place the inner container in the body (base) of the rice cooker.

Plug the power cord connector into the connector on the side of the device. Plug the power cord into an electrical outlet.

Put the lid on the inner container.

The device is ready for cleaning.

### **Important note!**

Before first use, the inner container, scoop and measuring cup must be washed in water with a detergent solution, rinsed and then dried thoroughly. Never use metal scrapers for cleaning, as this will damage the surfaces.

# Operation

Insert the inner container into the device.

Never use the device without the inner container inserted!

## Cooking rice

- 1 Measure and wash the rice. Then pour it into the cooking container.  
Do not use the cooking container to wash the rice, as this may damage the surface.
- 2 After pouring the rice into the cooking container, add water. Use 1.5 scoops of water for 1 scoop of rice.  
Salt the rice or season it according to your own habits.

**Reference table:**

Number of scoops of rice (160 ml)	Number of scoops of water (160 ml)	Number of persons
1	1,5	1
2	3	1 – 2
3	4,5	2 – 3
4	6	3 – 4
5	7,5	4 – 5

- 3 Assemble the machine as described above. The outside of the inner container must always be dry! If this surface is wet or damp, it may cause noise during cooking.  
After inserting the inner container, turn it left / right to ensure good contact with the heater.
- 4 Cover the inner container with the lid.
- 5 Plug the power cord into the machine and the other end into an electrical outlet.
- 6 Switch the device to position 1 with switch 0/1.
- 7 Press the electronic switch down. The COOK light will illuminate. The rice will boil and steam will escape through the steam escape hole in the glass lid.
- 8 When cooking is completed for any function, the WARM function is activated.  
To achieve a better result, let the rice rest for about 15 minutes (the rice is steamed).
- 9 Slowly open the lid to allow the residual steam to escape slowly, stir in the rice (eg with the scoop supplied).

## Cooking food in steamer

The steamer is intended for cooking food (vegetables, meat, etc.) in steam

- 1 Pour water into the inner container so that it reaches under the steamer. Water must not flood the food.
- 2 Place the food in the steamer and place the steamer in the inner container.
- 3 Cover the inner container with the lid.
- 4 Plug the power cord into the machine and the other end into an electrical outlet.
- 5 Switch the device to position 1 with the 0/1 switch.

### Notifications!

- When the food is finished, the pot will automatically remain in the **WARM** program (Temperature maintenance).
- Do not keep rice warm longer than necessary (max. 5 hours). The food could start to spoil.

### Notes

- For the preparation of potatoes, legumes, soups, cereals, etc. get inspired by cookbooks and freely available recipes, but the machine is primarily intended for making rice.
- The device operates at a temperature of approximately 95 - 103 °C, the function of maintaining the temperature at a temperature of approximately 70 - 80 °C.
- The appliance responds to the temperature inside the rice cooker - it detects when a predefined amount of water has evaporated and then switches to keep warm mode.
- Cooking times are individual and depend mainly on the type and volume of food.

### Notifications!

- During the first commissioning, a possible brief, slight smoke may occur, which is not a malfunction or a reason for a complaint about the device.
- Steam escapes from the steam escape opening in the glass lid during the entire preparation process, and water may also leak slightly around the edge of the lid, which may be accompanied by a characteristic „hissing / splashing“ sound. This phenomenon is completely normal and is not a reason to complain about the device.
- Do not touch the surfaces of the appliance during cooking, as these parts are HOT! Be especially careful that children do not touch the pot!
- We recommend the use of protective equipment (eg cloth, protective gloves) during handling.
- Never cut processed foods in a container!
- If you lift the lid several times, steam will escape and cooking will take longer.
- Before eating, check that the food is sufficiently heat-treated.  
If the prepared dishes are not cooked enough, continue cooking. At the same time, check and top up with sufficient water if necessary.
- Use the supplied spoon for mixing.



# Equipment cleaning and maintenance

## **Important Notice!**

You must clean any food residue or moisture from all components after each use.  
Before cleaning, unplug the power cord and allow the appliance to cool down completely.

## **Cleaning the device body/device surface:**

Never immerse the body of the device in water or any other liquid!

Use only a slightly damp cloth to clean the surface of the device and controls.

After cleaning, wipe the outer body (base) with a damp cloth and then dry thoroughly with a soft, dry cloth. Do not use any solvents or harsh cleaners. They can damage the surface.

## **Cleaning the glass cover**

Clean the lid regularly with water like ordinary glassware. Do not use any solvents or harsh cleaners.

You can wash it in the dishwasher, but it is prone to breakage, so we do not recommend it.  
In case of clogging, clean the steam escape hole, e.g. using a wooden toothpick.

## **Cleaning the inner container with a non-stick surface and accessories**

Clean these accessories with water and a mild detergent solution. Dry the accessories thoroughly after cleaning.

Fill the inner container with warm water and clean it (removed from the appliance). Do not scratch its surface finish!

Do not use any solvents or harsh cleaners.

Wash the spoon and measuring cup like ordinary dishes (you can also use a dishwasher).

Dry all components and the surface of the device (for example, from condensed moisture) before using it again. If the power cord becomes dirty, wipe it with a damp cloth. Some foods may color the accessories in some way. However, this has no effect on the functionality of the device and is not a reason to complain about the device.

This color usually disappears by some time or does not interfere with further use.

## **Storage**

Prior to storage, make sure that the appliance, the cooking container and all components have cooled down.

Store the device and accessories in a safe and dry place, out of reach of children and people with reduced sensory abilities.

## Technical specifications

<b>Power supply:</b>	220 - 240 V~ 50 - 60 Hz
<b>Power consumption:</b>	500 W
<b>Capacity (volume):</b>	1,5 l
<b>Weight:</b>	2,1 kg
<b>Dimensions (w x d x h):</b>	30 x 25 x 25,5 cm

We reserve the right to make changes!

**Producer:**

ORAVA retail 1, a.s.  
Seberiniho 2  
821 03 Bratislava  
Slovenská republika

**Importer:**

ORAVA retail 1, a.s.	ORAVA distribution CZ, s.r.o.
Seberiniho 2	Ostravská 494
821 03 Bratislava	739 25 Sviadnov
Slovenská republika	Česká republika

**INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING**

Dispose of used packaging material at a municipal waste disposal site.

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more detailscollection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

**For business entities in the countries of the European Union**

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

**Disposal in other countries outside the European Union**

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product meets all the essential requirements of the EU directives that apply to it.