

Hot plate electric cooker

orava

VP-81W

Instruction manual

EN



CE

VP-81W

Intended use of the appliance

The appliance is intended solely for the heat treatment of the food - cooking /heating, in containers intended for the heat treatment of foodstuffs, to the extent determined by technical and operational parameters and functions, safety and user instructions and external influences of the operating environment.

ORAVA electrical appliances are manufactured according to the state of the art and recognized safety rules. Nevertheless, improper and unprofessional use or use that is not intended for use may result in injury or danger to the life of the user or third party. damage to the device and other material values.

1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the general term product is used in text parts such as: electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
 - household electric appliances,
 - information and communication equipment,
 - consumer electronics,
 - lighting equipment,
 - electrical and electronic tools,
 - toys and equipment for sporting and recreational purposes,
 - medical devices (aids),
 - monitoring and control devices,
 - vending machines.

1.1 General safety instructions

- Before operating the unit, we recommend that you carefully read the instruction manual and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that cannot be incorporated into any of the products is personal responsibility and caution. These factors must therefore be ensured by users serving this device.

- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!
- Keep the instruction manual as close to the device as possible throughout its service life. Always keep the instruction manual together with the appliance for future use and use by new users.
- Use the appliance only for the intended purpose and in the manner specified by the manufacturer.
- The appliance is intended for home and similar indoor use without special focus.
- This appliance is intended, in addition to domestic use, for the following uses:
 - in shops, offices and other similar work environments;
 - in economic buildings;
 - in hotels, motels and other residential environments;
 - in bed and breakfast establishments.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

1.2 Safety of the operating environment

- Do not use the device in an industrial environment or outside environment!
- Do not expose the appliance to:
 - sources of excessive heat or open flame,
 - dripping or splashing water,
 - vibration and excessive mechanical stress,
 - insects, animals and plants,
 - aggressive and chemical substances.
- The operating environment of the device must always be in accordance with the basic characteristics set out.
- Features of the operating environment:
 1. Ambient temperature: $+5 \div +40 \text{ }^{\circ}\text{C}$
 2. Humidity: $5 \div 85\%$
 3. Altitude: $\leq 2\,000 \text{ m}$
 4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
 5. Occurrence of foreign bodies: quantity and type of dust are insignificant
 6. Protection degree: min. IP20 (device protected from touching dangerous parts by hand and non-waterproof)
- This degree of protection is not indicated on the product and on the technical parameters in the operating instructions.
- If the protection class of the product is different from IPX0, this information is then displayed on the label of the appliance or in the technical data of the operating instructions.

- Other characteristics of the domestic operating environment (mechanical stress - vibrations and vibrations, occurrence of plant, animals, weather effects ...) are negligible in terms of effect on the correct and safe use of electrical equipment.

1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electric appliance is designed to power from 1 / N / PE ~ 230 V 50 Hz.
- The electrical safety of the appliance is guaranteed only if it is properly connected to the mains.
- Electrical protection class I equipment is equipped with a protection against electric shock by means of protective earthing of inanimate parts, which can become dangerous when the device is malfunctioning. Always connect such devices to properly installed mains sockets that are equipped with earthing conductors and have a properly grounded earthing conductor.

All electrical equipment is equipped with a three-wire power supply.

- Class II electrical equipment is protected against electric shock by double insulation or by enhanced insulation of hazardous live electrical parts. Device of protection class II it must not be equipped with means to connect protective earthing.

All electrical equipment is equipped with two-wire power supply.

- Class III electrical equipment is a device that is powered by a small safe voltage source (battery or accumulator) and does not present any danger to the user from electrical shock.
- In order to provide increased safety against the risk of electric shock due to the use of electrical appliances by laypersons, it is recommended to install the power supply circuit for sockets with a rated current not exceeding 20 A RCD with a rated operating current not exceeding 30 mA.

To ensure the safety and correctness of the electrical installation, consult a qualified electrician.

- Only use a power cord with a plug (mains lead) supplied with the device and compatible with a wall socket. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible mains socket. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- The power cord and mains plug must always be easily accessible for safe disconnection of the electrical appliance from the power supply.
- Do not pull off the power cord by pulling the cable. Disconnect the power cord by pulling the plug behind the power cord plug.

- If you use an extension cord, make sure that the total rated power of all devices connected to the extension cord does not exceed the max. current load on the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power socket, and not to another extension cord or power supply. The extension power cord or power supply block must be designed for grounded electrical plugs and connected to a properly grounded electrical socket.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged drawers!
- To avoid electrical shock, plug the power cables into properly grounded electrical sockets. If the device is equipped with a 3-pole plug, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.
- Do not bend, crush or otherwise expose the power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.
- When the power cord is damaged, disconnect the appliance from the mains and do not use it again.
- If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similarly qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical appliance as well as the power cord and power socket. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock.
If the power cord is wet or the water has penetrated the water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power circuit before attempting
unplug the power. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

1.4 Safety of persons

- This appliance is intended for use and operation by persons without electrotechnical qualification - lay people, according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children under the age of 8 and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge when supervised or instructed to use the appliance safely and understand the dangers involved.
- Children may not play with the appliance.
- Cleaning and maintenance for users may not be performed by children unattended.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance! Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus.
- Inattention during operation may result in serious injury.

1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
- If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
- Electrical appliances that are cleaned after use and are not intended to be completely or partly immersed in water or other liquid, protect against the effects of dripping and / or splashing water and before immersion.
- Electric household appliances, like all other technical devices, are subject to the surrounding environment and natural wear. Since the legal framework of regular maintenance is not laid down for lay-in electrical household appliances, the manufacturer recommends that the user have the appliance checked and cleaned at least once a year by a specialist workshop.
- By doing so, it is possible to achieve safety, operational reliability and increased service life.
- Do not disassemble the electric appliance! The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the mains supply during user maintenance. In the event of a fault, please have the repair serviced by an authorized service center.
- Before calling a service:
 1. Turn the appliance off and on to make sure the fault reappears.
 2. If the malfunction of the appliance still persists after these operations, call the nearest specialist service center.
- Never repair the electric appliance yourself!
- Unauthorized, unqualified and improper use of an electric appliance may result in electric shock or other serious injury.
- Only carry out the warranty or post-warranty repair of an electrical appliance to an authorized qualified person^(*).

^(*)Competent qualified expert: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

2. Special Safety Instructions. Read carefully!

- Electrical equipment is designed and manufactured in such a way as to allow for safe operation and use by persons without a professional qualification. Despite all the measures that have been taken by the manufacturer for safe use, handling and use carries with it certain residual risks and the associated potential hazards.
- To warn of possible hazards, the following symbols and their meanings have been used on the device and in the accompanying documentation:



This symbol alerts users that the device is operating at dangerous electrical voltage. Do not remove protective covers on the device. Failure to observe the safety instructions during use and operation of the device may result in:
Danger of electric shock!
Danger of serious injury or life threatening!



This symbol alerts users to the following: Risk of serious injury or life threatening when not following the safety instructions when using and operating the unit!
Danger of damage to equipment or other damage to property!



This symbol alerts users that if not following safety instructions while using and operating the device:
Danger of burning from hot surfaces!

Transport/Carriage

- When transporting and using, for example the transport cart, be careful when moving, to avoid overturning the device.
- Transport / carry the equipment only after thorough inspection of the space and the routes, which must be unobstructed.
- Never carry the machine while it is in operation. Do not carry the device while it is plugged into a wall socket.

Warning!

- Some surfaces may be hot during operation. Do not touch hot surfaces!
- Never transfer the appliance until it has cooled down to ambient temperature.
- Transfer the device firmly by both hands to the bottom edge of the base or fixed parts of the body.
- Make sure that your hands and equipment are not damp or slippery when carrying.

There is a risk of serious injury or life threatening! There is a risk of damage to the device!

Unpacking/Packaging

- Unpack and remove all parts and accessories of packaging materials, etiquettes, and labels before putting the device into operation. Keep all packaging materials in a safe place or keep them out of the reach of children and inappropriate persons. There is a risk of serious injury!
There is a risk of choking!

Check/Commissioning

- Clean the machine before commissioning as described in the „Commissioning „ or „Cleaning“ section.
- Never clean the appliance (body with electrical parts and control panel) and the power cord with the plug - under running water, which could cause the liquid to flow into the device.
- Clean these parts with a slightly moistened cloth and wipe dry or let it dry.
- Only clean the appliance if it is switched off and disconnected from the mains.
- We recommend performing both initial and subsequent regular machine inspections. Do not attempt to interfere with the construction or adjustment of the component parts in any way.
- Never use the appliance if it is incomplete, damaged, or any part of it has been damaged during use. Have the appliance repaired by a specialist workshop.
There is a risk of serious injury!

Location/Installation

- Only place the appliance on straight, strong and stable pads - kitchen work desks and furniture parts, suitable for the location of kitchen utensils.
- Always make sure that the location you want to place the device has sufficient space, stability, mechanical strength and appropriate lighting.
- If you do not use the appliance, do not place objects or liquid containers on the cooker.

Warning!

- Do not install or use the machine on metal (ferromagnetic) washers.
- Do not place the appliance:
 - unstable tables or inappropriate parts of furniture,
 - on an uneven and dirty surface,
 - on the sealing edge of tables or parts of furniture,
 - in the vicinity of containers with water or other liquids.

Warning!

- Place the device in a place where children can not reach freely. Work desks and furniture for placing should not be less than 85 cm.
- Prevent children from handling the device. The device may overwrite and cause serious injury. Mechanical damage (breakage or breakage of parts and covers) of the device can cause serious injury.
- Do not place the appliance and do not use the proximity of containers containing water. If the appliance falls into the water, do not remove it! First, pull the power cord plug out of the mains socket and then select the appliance from the water. In such cases, take the device for inspection to a specialist service to check that it is safe and working properly.
There is a risk of electric shock! There is a risk of electrical short circuit!

- Do not expose the device to:
 - direct sunlight, sources and equipment producing heat,
 - vibration and mechanical stress,
 - excessive dust,
 - water and excess moisture,
 - insect,
 - aggressive effects of the external environment.

There is a risk of serious injury!
There is a risk of damage to equipment or other property damage!
- Do not cover the device in any way. Do not insert or allow the foreign bodies to enter the holes of the device covers. Do not cover the cover openings for air flow. Air ventilation ensures reliable and safe operation of the device.
- From a fire protection and safety point of view, the device can also be placed on a work table or similar surface if a safe distance from the flammable surfaces is maintained. materials:
 - at least 500 mm in the direction of the main heat sink, and
 - at least 100 mm in other directions.

There is a risk of electric shock! There is a danger of fire!

Operation/Supervision

Warning!

- The induction cooker (panel surface) is made of a technical material (eg glass-ceramic), which is susceptible to damage under certain circumstances.
- Be careful about this, and do not expose the device to excessive mechanical stress (mechanical shock and pressure of sharp objects) acting on the surface of the hob.

Warning!

- If the surface of the hob is cracked or otherwise mechanically damaged, turn off the device to avoid possible electric shock. Do not use the damaged device anymore.

CAUTION!

- Do not place any metallic (ferromagnetic) objects on the surface of the cooker, knives, forks, spoon or cover plates, etc., as they may become hot and cause burns.

CAUTION!

- Use only such hob guards that have been designed by the manufacturer of the cooking appliance or the manufacturer of the appliance as instructed to indicate that they are suitable for use or the hoods of the hobs built into the appliance.
- Using unsuitable protective covers may cause accidents.

CAUTION!

- For cooking / heating only dishes intended for heating / cooking by means of whirlpools - vessels with ferromagnetic bottom.
- Do not switch on or use the appliance with an empty kettle on the hob.

Warning!

- Do not heat any metal cans on the hotplate.
- Position the cooking container as accurately as possible into the central axis of the cooking zone of the cooking zone.
- Ensure that the cooker is in the cooking zone during the entire cooking time (during cooking). The evacuation of the cooking vessel from the cooking zone results in a reduction of the cooking power and thus the extension of the cooking time.
- Do not place other devices and products sensitive to the electromagnetic field in the vicinity of the device. They may affect their function or damage them.
- Always keep your device under control during use and operation!
- This device is not intended to be operated via a programmer, external time switch or remote control because there is a risk of fire if the device is covered or incorrectly positioned.
- Do not leave the appliance unattended during operation, especially if there are children, inappropriate persons or animals nearby.
- Do not use the appliance near easily flammable materials and objects, blinds curtains, decorative fabrics,

Warning!

- Do not use the appliance for space heating, drying textiles, clothing, footwear or any other items!
There is a danger of fire!
- Do not immerse the appliance or any part of it in water or other liquid.
There is a risk of electric shock!
There is a risk of damage to equipment or other property damage!
- Make sure that the controller is set to „OFF“ in the „0“ position before each connection to the power supply.
- Do not switch the device on or off by plugging in or pulling out the plug of the power cord from the wall socket.
- Always connect the appliance to mains power supply for normal use, then switch on the main power switch - the power controller.
- When you have finished using the appliance, turn off the main power switch - the power controller, and then pull the plug of the power cord out of the mains socket.
- If the main power switch does not work - the power controller, do not use the device.
- The device is under dangerous voltage when the power supply is connected.
There is a risk of electric shock! There is a danger of fire!

CAUTION!

- The cooking zones become hot during use.
- Do not touch hot surfaces, especially when operating and immediately after use. The residual heat transferred from the heated bottom of the cooking vessel acts on the cooking zone of the panel.
- Be very careful when cooking. Cooking utensils and cooked / heated dishes are also very hot / hot. Use kitchen towels or cloths when handling the appliance and cooking utensils.
- Open closed containers at the time of cooking slowly and carefully. Sudden leakage of hot air or boiling fluid may occur when a sudden opening occurs.

Attention!

- After switching off the appliance, the hotplate surfaces remain warm for some time. Before any further handling of the storage and storage device, always wait for the hot surfaces to cool completely.
- Do not disconnect the appliance from the electrical socket immediately after use. To ensure efficient cooling, it is necessary that the fan power supply is connected for at least a few minutes.
There is a risk of burning from the hot surface!
There is a risk of burning / burning from hot air / hot food!

CAUTION!

- Unpreserved cooking on the cooking bar with grease or oil can be dangerous and may result in a fire.
- Do not try to extinguish with water if there is a fire (from overheating fat or oil). Always switch off the device first and cover flames in the cooker, for example with blanket or a fire blanket.

Warning!

- Keep the cooking process constantly under surveillance. The short-term cooking process must be constantly monitored.
- The electrical socket and power cord must remain easily accessible for safe disconnection of the device from the power supply.
- Never leave the appliance unattended and freely accessible with a free-hanging power cord. Children, inappropriate persons or animals could download the device for the power cord.
- Do not store the appliance with a wrapped cord around your body. Unfold the network cord „in the way it was put in the original packaging by the manufacturer.
There is a risk of serious injury!
- Never overload the equipment beyond the limits specified by the technical specifications!
- Observe the operating mode of the machine in accordance with the operating and operating instructions.
- If you notice any unusual occurrences (sounds, smell, smoke, ...) while using the device, switch off the device immediately and disconnect it from the power supply. Have the appliance checked by a specialist workshop.

- Always thoroughly clean the machine after decommissioning from food and grease residues. Failure to properly maintain the device results in a reduction in its safety and its practical life.
- If any safety component / component (mechanical, electrical) is part of the device, never disable this part / component! If the safety component / component is damaged or not working, do not use the appliance!
- Children under 3 years of age must be prevented from accessing the appliance unless they are under the supervision.
- Children between 3 years and under 8 years of age may not connect the appliance to a power socket, nor regulate or clean it or service users.

CAUTION!

- Some parts of this product may become very hot and may cause burns. Take special care when vulnerable persons or children are present.
- Never underestimate the potential hazards and take extreme caution!!!

Parts description



Preparation before use

Do not connect the appliance to the power supply during preparation.
Do not immerse the device in water! Clean the device surface with a cloth dampened in water. Some impurities from the manufacturing process or packaging material could remain on it.
Dry thoroughly after cleaning.

Commissioning

1. Place the machine on a horizontal, stable, non-flammable, heat-resistant surface. There must be nothing placed around the device and above the device.
2. Set the temperature control knob to the OFF position.
3. Connect the equipment to the mains.
4. Place a metal cooking pot on the electric heating plate that is flat and stable and cannot tip over. Fill the container with cooked food (liquid, etc.).
Note: Use dishes with a flat (ground) bottom of the same or larger (max. 4 cm) diameter as the plate to treat the dishes. If the bottom is not flat, there is no optimal heat transfer from the plate to the dishes, thus increasing the power consumption and the cooking time increases.
5. Use the power adjustment knob to adjust the power from 1 (lowest temperature) to 5 (maximum temperature). The electric heater plate will be switched on and off alternately to maintain the set temperature as indicated by the indicator light.
Note: The electric heater plate will start immediately after setting the temperature controller heating up. Do not touch it or other parts of the area and the cooking utensil.
Risk of burns! In the very first heating after purchase, the spread of mild smoke and odor may occur. It is a common process for firing electric heating plates. It is not a malfunction and there is no danger to health.
6. When cooking is complete, set the temperature control knob to the left of the OFF position.
Unplug the appliance and do not touch it until all parts have cooled down.

Equipment cleaning and maintenance

Turn off the appliance, unplug the power cord, and allow it to cool completely before cleaning.

Cleaning the surface of the device

- Never immerse the appliance in water or any other liquid!
- Use only a slightly damp cloth to clean the surface of the machine.
- Do not use any solvents or abrasive cleaners.
- After cleaning, wipe the device dry.

Technical specifications

Power supply:	220 - 240 V~ 50/60 Hz
Power :	1 500 W
Consumption average:	185 mm
Weight:	2,1 kg
Dimensions (W x H x D):	23 x 7 x 27 cm

Warranty conditions

A warranty period of 24 months is provided for this device. When exercising the right to a warranty service, return the warranty card and the cash receipt of the equipment to the service center together with the product. The date of the warranty card and proof of purchase must be the same. If not, the warranty will not be granted.

- The right to free repair of the product during the warranty period expires if:
 - the user does not submit a valid warranty and proof of purchase of the product;
 - malfunctions due to incorrect connection, improper use and maintenance (dusty environment), mechanical damage, engine failure and residential installation;
 - do unauthorized interference or alteration in the product by an unauthorized person and/or a malfunction due to the use of non-original spare parts;
 - the appliance is not used according to the enclosed operating instructions.

Other terms and conditions related to the warranty

The shop where the device is sold to the consumer is obliged to show the device to the buyer and inform the buyer:

- the way it is used and handled;
- how warranty repairs are available;
- with the nearest warranty service as well as the way the warranty service is dispatched to the supplier's service center;
- properly fill in the warranty card. Incorrect and incomplete warranty card is void and the consumer loses the right to warranty;
- the guarantee / repair, exchange or withdrawal of the contract / are covered by the relevant provisions of the Civil Code and the Complaint Rules.

Producer:

ORAVA retail 1, a.s.
Seberíniho 2
821 03 Bratislava
Slovenská republika

Importer:

ORAVA retail 1, a.s.
Seberíniho 2
821 03 Bratislava
Slovenská republika

ORAVA distribution CZ, s.r.o.
Ostravská 494
739 25 Sviadnov
Česká republika

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING

Dispose of used packaging material at a municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more details collection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

For business entities in the countries of the European Union

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product complies with all the essential requirements of the EU directives that apply to it.