

Device for the preparation of hot dogs,
eggs and vegetables

orava

HM-04

Instruction manual

EN



CE

HM-04

The intended use of the device

The appliance is intended solely for the preparation, heating and cooking of foodstuffs in containers intended for preparation to the extent specified by the technical and operating parameters and functions of the equipment, safety and user instructions and external influences of the operating environment.

ORAVA Electrical Appliances are manufactured in accordance with the state of the art and recognized safety-technical rules. Nevertheless, the use or use contrary to designation may result in the risk of injury to or endangering the life of the user or third person, damage to the device and other material values.

1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS



Read all instructions before using the device!

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the general term product is used in text parts such as: electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
 - household electric appliances,
 - information and communication equipment,
 - consumer electronics,
 - lighting equipment,
 - electrical and electronic tools,
 - toys and equipment for sporting and recreational purposes,
 - medical devices (aids),
 - monitoring and control devices,
 - vending machines.

1.1 General safety instructions

- Before operating the unit, we recommend that you carefully read the instruction manual and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that cannot be incorporated into any of the products is personal responsibility and caution. These factors must therefore be ensured by users serving this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!

- Keep the instruction manual as close to the device as possible throughout its service life. Always keep the instruction manual together with the appliance for future use and use by new users.
- Use the appliance only for the intended purpose and in the manner specified by the manufacturer.
- The appliance is intended for home and similar indoor use without special focus.
- This appliance is intended, in addition to domestic use, for the following uses:
 - in shops, offices and other similar work environments;
 - in economic buildings;
 - in hotels, motels and other residential environments;
 - in bed and breakfast establishments.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

1.2 Safety of the operating environment

- Do not use the device in an industrial environment or outside environment!
- Do not expose the appliance to:
 - sources of excessive heat or open flame,
 - dripping or splashing water,
 - vibration and excessive mechanical stress,
 - insects, animals and plants,
 - aggressive and chemical substances.
- The operating environment of the device must always be in accordance with the basic characteristics set out.
- Features of the operating environment:
 1. Ambient temperature: $+5 \div +40 \text{ }^{\circ}\text{C}$
 2. Humidity: $5 \div 85\%$
 3. Altitude: $\leq 2\,000 \text{ m}$
 4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
 5. Occurrence of foreign bodies: quantity and type of dust are insignificant
 6. Protection degree: min. IP20 (device protected from touching dangerous parts by hand and non-waterproof)
- This degree of protection is not indicated on the product and on the technical parameters in the operating instructions.
- If the protection class of the product is different from IPX0, this information is then displayed on the label of the appliance or in the technical data of the operating instructions.
- Other characteristics of the domestic operating environment (mechanical stress - vibrations and vibrations, occurrence of plant, animals, weather effects ...) are negligible in terms of effect on the correct and safe use of electrical equipment.

1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electric appliance is designed to power from 1 / N / PE ~ 230 V 50 Hz.
- The electrical safety of the appliance is guaranteed only if it is properly connected to the mains.
- Electrical protection class I equipment is equipped with a protection against electric shock by means of protective earthing of inanimate parts, which can become dangerous when the device is malfunctioning. Always connect such devices to properly installed mains sockets that are equipped with earthing conductors and have a properly grounded earthing conductor.

All electrical equipment is equipped with a three-wire power supply.

- Class II electrical equipment is protected against electric shock by double insulation or by enhanced insulation of hazardous live electrical parts. Device of protection class II it must not be equipped with means to connect protective earthing.

All electrical equipment is equipped with two-wire power supply.

- Class III electrical equipment is a device that is powered by a small safe voltage source (battery or accumulator) and does not present any danger to the user from electrical shock.
- In order to provide increased safety against the risk of electric shock due to the use of electrical appliances by laypersons, it is recommended to install the power supply circuit for sockets with a rated current not exceeding 20 A RCD with a rated operating current not exceeding 30 mA.

To ensure the safety and correctness of the electrical installation, consult a qualified electrician.

- Only use a power cord with a plug (mains lead) supplied with the device and compatible with a wall socket. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible mains socket. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- The power cord and mains plug must always be easily accessible for safe disconnection of the electrical appliance from the power supply.
- Do not pull off the power cord by pulling the cable. Disconnect the power cord by pulling the plug behind the power cord plug.
- If you use an extension cord, make sure that the total rated power of all devices connected to the extension cord does not exceed the max. current load on the extension cable.

- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power socket, and not to another extension cord or power supply. The extension power cord or power supply block must be designed for grounded electrical plugs and connected to a properly grounded electrical socket.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged drawers!
- To avoid electrical shock, plug the power cables into properly grounded electrical sockets. If the device is equipped with a 3-pole plug, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.
- Do not bend, crush or otherwise expose the power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.
- When the power cord is damaged, disconnect the appliance from the mains and do not use it again.
- If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similarly qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical appliance as well as the power cord and power socket. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock.
If the power cord is wet or the water has penetrated the water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power circuit before attempting
unplug the power. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

1.4 Safety of persons

- This appliance is intended for use and operation by persons without electrotechnical qualification - lay people, according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children under the age of 8 and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge when supervised or instructed to use the appliance safely and understand the dangers involved.
- Children may not play with the appliance.
- Cleaning and maintenance for users may not be performed by children unattended.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance! Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus.
- Inattention during operation may result in serious injury.

1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
- If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
- Electrical appliances that are cleaned after use and are not intended to be completely or partly immersed in water or other liquid, protect against the effects of dripping and / or splashing water and before immersion.
- Electric household appliances, like all other technical devices, are subject to the surrounding environment and natural wear. Since the legal framework of regular maintenance is not laid down for lay-in electrical household appliances, the manufacturer recommends that the user have the appliance checked and cleaned at least once a year by a specialist workshop.
- By doing so, it is possible to achieve safety, operational reliability and increased service life.
- Do not disassemble the electric appliance! The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the mains supply during user maintenance. In the event of a fault, please have the repair serviced by an authorized service center.
- Before calling a service:
 1. Verify that you are unable to remedy the malfunction yourself according to the procedure described in the chapter Problem solving.
 2. Turn the appliance off and on to make sure the fault reappears.
 3. If the malfunction of the appliance still persists after these operations, call the nearest specialist service center.
- Never repair the electric appliance yourself!
- Unauthorized, unqualified and improper use of an electric appliance may result in electric shock or other serious injury.
- Only carry out the warranty or post-warranty repair of an electrical appliance to an authorized qualified person (*).

(*) Competent qualified expert: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

Special Safety Instructions. Read carefully!

- Electrical equipment is designed and manufactured in such a way as to allow for safe operation and use by persons without a professional qualification. Despite all the measures taken by the manufacturer for safe use, handling and use, they carry some residual risks and associated potential hazards.
- The following symbols and their meanings have been used on the device and in the accompanying documentation to warn of possible hazards:



This symbol alerts users that the device is operating a dangerous electrical voltage. Do not remove the protective covers on the device.

Failure to observe the safety instructions during use and operation of the device may result in:
Danger of electric shock! Danger of serious injury or life threatening!



This symbol warns users that if the following precautions are not followed during use and operation of the device:
Danger of serious injury or life threatening! Danger of damage to equipment or other property damage!



This symbol warns users that if the following precautions are not followed during use and operation of the device:
Danger of burns from hot surfaces!

Transport/Carriage

- When transporting and using, of the transport carriage be careful when moving, to avoid overturning the device.
- Transport/transmit the equipment only after thorough inspection of the space and routes, which must be unobstructed.
- Never carry the machine while it is in operation. Do not carry the device while it is connected to a wall outlet.

Warning!

- Some surfaces may become warm when operating the unit. Do not touch hot surfaces! Never transfer the appliance until it has cooled down to ambient temperature.
- Transfer the device firmly with both hands to the bottom edge of the base or solid parts of the body.
- Make sure that your hands and equipment are not damp or slippery when carrying.
- To maintain safety (considering the size and weight of the device), only persons who are competent and physically capable of doing so can only carry the device.
There is a risk of serious injury or life threatening!
There is a risk of damage to the device!

Unpacking/Packaging

- Unpack the equipment and accessories before putting it into service and remove all parts of the packaging material and labels. Store the packaging in a safe place, especially out of the reach of children and unaccompanied persons, or dispose of them safely.

There is a risk of serious injury!

Risk of suffocation!

Check/Startup

- The appliance is designed for food preparation. Therefore, thoroughly clean all parts before commissioning, following the instructions in the Startup section. Cleaning and maintenance.
- Never clean the machine (its drive unit with electrical parts and controls) and the power cord with the plug in a way (under running water) that may cause the liquid to flow into the device.
- Clean these parts with a damp cloth only and wipe dry or let it dry.
- Only clean the appliance when it is switched off and disconnected from the mains.
- It is recommended that you carry out the initial and subsequent periodic inspections of the equipment.
- Never use the appliance if it is incomplete, damaged, or damaged during transportation or use.
- Do not use non-original and incomplete parts of the device and its accessories.

There is a risk of serious injury!

There is a risk of electric shock!

Location/Installation

- Only place the appliance on flat, and stable pads - kitchen work desks and furniture parts, suitable for the location of kitchen utensils.
- Always make sure that the place you want to place the device has enough space, mechanical strength and appropriate lighting.

Warning!

- Do not expose the device to:
 - direct sunlight, sources and equipment producing heat,
 - vibrations and mechanical stress,
 - excessive dust,
 - water and excess moisture,
 - insect,
 - an aggressive external environment
- Do not use or dispose of the appliance:
 - to unstable tables or parts of furniture,
 - on an uneven and dirty surface,
 - on the sealing edge of tables or parts of furniture,
 - in the vicinity of containers with water or other liquids.
- Do not cover the device in part. Do not add anything to the device. Do not insert or allow the foreign bodies to enter the holes of the device covers.

- Do not cover the openings of the airflow covers. Air ventilation ensures reliable and safe operation of the device.
There is a risk of electric shock!
There is a danger of fire!

Warning!

- Place the device in a place where children can not reach freely.
- Prevent children from handling the device. The appliance may overturn and cause serious injury.
- Mechanical damage (breakage or breakage of parts and covers) of the device can cause serious injury.
There is a risk of serious injury!
There is a risk of damage to equipment or other property damage!
- Do not place or use equipment near water containers. If the appliance falls into the water, do not remove it! First, pull the power cord plug out of the mains socket and then select the appliance from the water. In such cases, take the device for inspection to a specialist service to check that it is safe and working properly.
There is a risk of electric shock!
There is a risk of electrical short circuit!

Operation/Supervision

Please note!

- This device must only be used with original parts and accessories.
- Always use the appliance with the appropriate lid/cover of the container.
- Always disconnect the device and always disconnect the power cord from the AC outlet before replacing the accessory or accessory parts of the device, before installing and dismantling, and before cleaning and servicing.
- Always make sure that the device is properly assembled and that none of its parts is damaged before using the appliance. Do not use incorrectly assembled and damaged devices.
There is a risk of serious injury!
- Be sure to keep the appliance under control during use and operation!
- This device is not intended to be operated via a programmer, external time switch or remote control because there is a risk of fire if the device is covered or incorrectly positioned.
- Always unplug the appliance from the power supply if you leave it unattended.
- Make sure that the controller (main switch) is set to „0“ (off) before each connection to the power supply.
- Do not switch the device on or off by plugging in or pulling out the power cord from the wall outlet.
- Always connect the appliance to mains power supply for normal use, then switch on the main switch.

- When you have finished using the appliance, turn off the main switch and then pull out the power cord from the wall socket.
- Do not use the device if the main power switch does not work on the device.
- The device is under dangerous voltage when the power supply is connected.
There is a risk of electric shock!
There is a risk of serious injury!
- The appliance contains parts, covers and media that are heavily heated during operation - heaters, heating/cooking pot, hot water/steam.
Warning! HOT SURFACE/Hot Water/ Steam.
- Do not touch any parts of the hot/warm parts of the device!
- Hot steam may escape from the cooking vessel during operation of the appliance.
- Do not fill the cooking vessel above the specified volume/contents. Cooking may cause hot water to spray.
There is a risk of burns from the hot surface/water/steam!
There is a risk of serious injury!

Warning

- After switching off the appliance, the heating elements remain hot for a certain amount of time. Before any further manipulation with the device – putting away, resp. storage, always wait until the device cools down completely.
- Do not remove the cooked/heated food from the container directly with your hands. Use appropriate kitchen utensils to remove food, fork, pliers, and the like.
- Do not connect the power cord to bundles. The power cord must remain accessible for safe disconnection of the appliance from the power supply.
- Do not let the cord hang loose and do not allow it to be freely accessible and reachable by children.
- Never leave your device freely accessible and do not leave it with a loose power cord. Children could overturn the device for cord.
- Do not store the appliance with a wrapped cord around your body. Wipe the loop „loosely“ in the way it was folded in the original packaging from the manufacturer.
There is a risk of serious injury!
- Never overload the machine beyond the limits set by the technical specifications!

- Do not exceed the maximum content/volume of processed foods indicated on the containers or recommended in the Food Processor Information in this manual. Do not switch on the appliance unless there is water in the cooker.
- Always divide the device into the recommended service intervals (continuous operation/break time) and follow these instructions.
- If you notice any unusual occurrences (vibrations, sounds, smells, smoke, etc.) during use of the device, switch off the device immediately and unplug it from the mains. Have the appliance checked by a specialist workshop.
- Only install and disassemble the device and its parts when the device is switched off and disconnected from the mains. There is a risk of serious injury!
- Always clean the equipment and accessories immediately after use and dispose of all residues of processed food.
- If any safety component (mechanical, electrical/electronic) is part of the device, never disable this part/component! If there it is safety part/component damaged or not working, do not use the appliance!
- Do not use safety parts/components for switching on/off the device.
- Children under 3 years of age must be prevented from accessing the appliance unless they are under the supervision.
- Children between 3 years and under 8 years of age may not connect the appliance to the outlet, regulate it, or clean or perform maintenance on the user.

WARNING!


- Some parts of this product may become very hot and may cause burns. Take special care when vulnerable persons or children are present.
- Never underestimate the potential hazards and pay extra caution !!!

Placement

- Leave enough space around the device to ensure proper ventilation. The minimum free space above the device must be at least 30 cm. Steam can escape from the cooking vessel and damage objects above the device.
- Do not place any objects on the device.
- Place the device near an easily accessible electrical outlet. Do not use extension cords or splitters. If problems are observed, disconnect the device from the mains immediately.

Description of parts

Carefully unpack the device from the packaging.
Remove any remaining packaging material on the device.

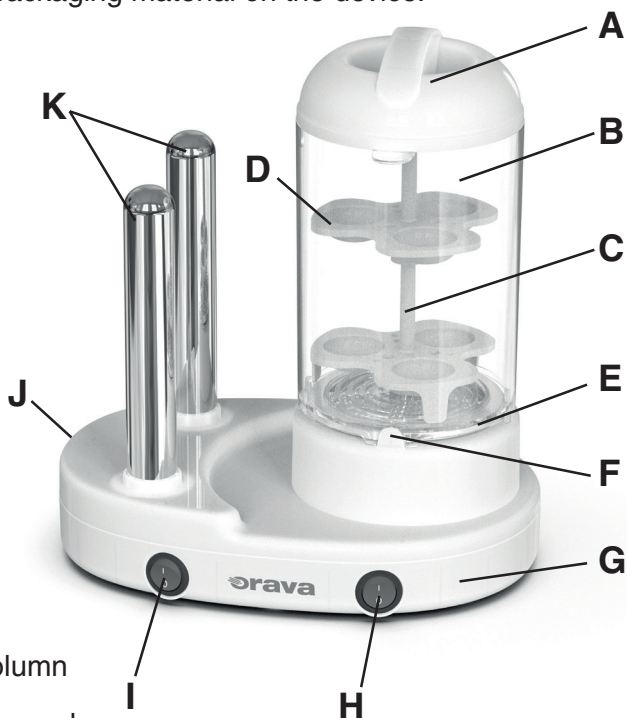

- A** cover
- B** steaming vessel
- C** egg holder support column
- D** egg holder
- E** water bowl - cooking vessel
inside the bowl - MAX line
(Do not exceed this level when filling with water!)
- F** container handles
- G** device body
- H** main switch I/O for cooking sausages/eggs
- I** main switch I/O for heating corners
- J** power cord
- K** spikes for heating corners

Using of device

Preparation of hotdog

You can prepare 2 hot dogs at once. If you just want to cook sausages, we do not recommend cooking more than 6 pieces of sausage at a same time.

Before first use, remove all packaging and protective material. Before using the device for the first time, clean it according to the instructions in the chapter Cleaning and maintenance of the device.

1. Place the appliance at the required height on a flat and non-slip work surface (table, sink, etc.).
2. Fill the water bowl (**E**) with water up to the MAX mark. Do not exceed this level when filling with water!
3. Place the steaming container (**B**) on the water bowl (**E**). Fit it firmly so that it fits into the holders (**F**).
The water bowl must be boiled at least once before first use, so proceed to step 4.
After boiling, change the water and return to step 2.
4. Insert sausages (max. 6 pieces) into the steaming container (**B**). Do not overfill the steaming container. The device would not work properly and the sausages would not heat up.
5. Place the cover (**A**) on the steaming container (**B**).
6. Connect the mains cord (**J**) to the prescribed 230 V ~ 50 Hz electrical socket with a protective earth pin.
7. To cook the sausages, turn the main switch (**H**) to position **I**. After approx. 2 minutes, the water will boil.
8. Sausages are ready after about 6 - 8 minutes.
The cooking time depends on the previous storage of sausages (fridge or freezer), their number, weight, size, etc.
9. Carefully remove the cover (**A**) from the steaming container (**B**). Use a fork or tpliers to remove the sausages from the container.
10. To heat the bred rolls, turn the main switch (**I**) to position **I**.
11. Impale the pastry (bread rolls) on the spikes for heating the rolls (**H**).
We recommend cutting off the lower end of the corner.
Warning! The spike is very hot! Danger of burns!
12. Remove the pastry from the roll warmer (**K**) and add ketchup, mayonnaise, mustard or other side dish to the hole in the pastry and then put the sausages in it.
13. Insert another pastry (bread roll) into the pastry heating spike (**K**) and repeat the procedure.
14. After operation, turn off the machine and unplug it from the electrical outlet.
Allow the device to cool for about 20 minutes, and then clean it as described in Cleaning and maintaining the device.

Preparation of eggs

The device allows the preparation of up to 6 eggs at once.

Before first use, remove all packaging and protective material. Before using the device for the first time, clean it according to the instructions in the chapter Cleaning and maintenance of the device.

1. Place the appliance at the required height on a flat and non-slip work surface (table, sink, etc.).
2. Fill the water bowl (**E**) with water up to the MAX mark. Do not exceed this level when filling with water!
3. Place the steaming container (**B**) on the water bowl (**E**). Fit it firmly so that it fits into the holders (**F**).
The water bowl must be boiled at least once before first use, so proceed to step 4.
After boiling, change the water and return to step 2.
4. Assemble the egg holder (**D**) together with the support column (**C**). Insert fresh eggs in the shell into the holes of the egg holder and carefully lower the holder to the bottom of the steaming container (**B**) using the support column (**C**).
5. Place the cover (**A**) on the steaming container (**B**).
6. Connect the mains cord (**J**) to the prescribed 230 V ~ 50 Hz electrical socket with a protective earth pin.
7. To cook the eggs, turn the main switch (**H**) to position **I**. After approx. 2 minutes, the water will boil.
8. To prepare the soft-boiled eggs, boil them for about 8 minutes. If you want to prepare hard-boiled eggs, cook them about 5 minutes longer. The cooking time depends on the previous storage of eggs (fridge or freezer), their number, weight, size, etc.
9. Carefully remove the cover (**A**) from the steaming container (**B**). Use pliers or similar kitchen tools to remove the eggs from the container.
10. After operation, turn off the machine and unplug it from the electrical outlet.
Allow the device to cool for about 20 minutes, then clean it as described in Cleaning and maintaining the appliance.

Preparation of vegetables

In the steaming container (**B**) you can cook corn cobs or vegetables, such as broccoli, asparagus, etc. Before cooking, adjust the size of the vegetables so that they fit in the steaming container (**B**). When cooking vegetables, proceed in the same way as when preparing eggs, except that you do not use an egg holder.

Do not overfill the steaming container!

Approximate cooking times of vegetables:

150 g broccoli:	approx. 6 min.
150 g asparagus:	approx. 8 min.
corn cob:	approx. 10 min.

Problem solving

Common problems

In the vicinity of the appliance, the steam and the warm air are precipitated from it.

When cooked, humidity may evaporate from the vessel. Most steam is released after the cover is opened and can therefore precipitate around the device.

This is not a malfunction.

You accidentally switched on the appliance without the food.

In the case of short-term operation of the appliance without an intermediate food, without the water in the bowl, there is no risk of damage.

Never, however, do this intentionally.

Problém	Cause	Solution
The device did not switch on.	The power cord is not properly connected.	Disconnect and after approx Reconnect the power cord for 10 seconds.
	The circuit breaker is off	Turn on the circuit breaker
	Problem with electrical socket.	Try plugging in another device.
The device is not heating	The power cord is not properly connected.	Disconnect and reconnect the power cord.

If the device does not work:

- a. Ensure that the device is properly plugged into the power supply. If it is not, disconnect it from the mains, wait about 10 seconds, and then reconnect it.
- b. Check the switchgear with the circuit breakers (fuses).
If everything is ok, test the outlet with some other device.

Equipment cleaning and maintenance

Unplug the power cord and allow the machine to cool completely.

1. Clean the surface of the device

Never immerse the device in water or any other liquid!

Use only a cloth slightly moistened with a mild detergent solution to clean the surface of the device. Do not use any solvents or harsh cleaners. They can damage the surface finish.

2. Cleaning the spike, bowl and container

Wipe the spike with a cloth slightly moistened in a mild detergent solution. Do not use any solvents or harsh cleaners.

Wash the steaming container and the water bowl and lid in warm water and a commercially available dishwashing detergent. After washing, rinse them in clean water.

After cleaning, dry the device and accessories thoroughly in air and store them in the place where they are usually stored after drying.

Technical specifications

Model:	HM-04
Power supply:	220 - 240 V ~, 50/60 Hz
Power consumption:	400 W (heating sausages/eggs) 40 W (spikes for bread roll' s heating)
Dimensions (W x H x D):	24 x 27 x 17 cm
Container diameter:	8 cm (inner part)
Mandrel diameter:	2.5 cm
Weight:	0,8 kg

We reserve the right to make changes!

Producer:

ORAVA retail 1, a.s.
Seberínho 2
821 03 Bratislava
Slovenská republika

Importer:

ORAVA retail 1, a.s.
Seberínho 2
821 03 Bratislava
Slovenská republika

ORAVA distribution CZ, s.r.o.
Ostravská 494
739 25 Sviadnov
Česká republika

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING

Dispose of used packaging material at a municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more details collection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

For business entities in the countries of the European Union

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product complies with all the essential requirements of the EU directives that apply to it.