


Shoes dryer/warmer

orava

SW-482 **Instruction manual**

EN

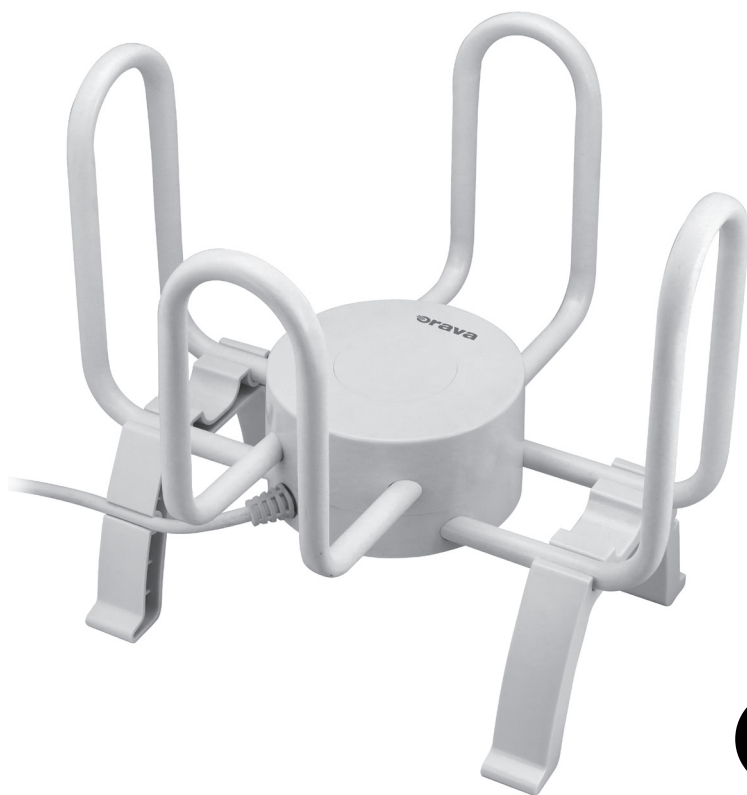

CE

Please read this manual carefully before using the appliance and keep it for future reference.

SW-482

Intended use of the device

The device is designed exclusively for drying (drying) or warming up shoes and some types of clothing e.g.. gloves, to the extent determined by the technical and operational parameters and functions, safety and user instructions and external influences of the operating environment. ORAVA electrical appliances are manufactured according to the state of the art and recognized safety rules. Nevertheless, improper and unprofessional use or use contrary to the intended use may result in injury or danger to the life of the user or third party. damage to equipment and other material values.

1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the general term product is used in text parts such as: electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
 - household electric appliances,
 - information and communication equipment,
 - consumer electronics,
 - lighting equipment,
 - electrical and electronic tools,
 - toys and equipment for sporting and recreational purposes,
 - medical devices (aids),
 - monitoring and control devices,
 - vending machines.

1.1 General safety instructions

- Before operating the unit, we recommend that you carefully read the instruction manual and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that cannot be incorporated into any of the products is personal responsibility and caution. These factors must therefore be ensured by users serving this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!

- Keep the instruction manual as close to the device as possible throughout its service life. Always keep the instruction manual together with the appliance for future use and use by new users.
- Use the appliance only for the intended purpose and in the manner specified by the manufacturer.
- The appliance is intended for home and similar indoor use without special focus.
- This appliance is intended, in addition to domestic use, for the following uses:
 - in shops, offices and other similar work environments;
 - in economic buildings;
 - in hotels, motels and other residential environments;
 - in bed and breakfast establishments.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

1.2 Safety of the operating environment

- Do not use the device in an industrial environment or outside environment!
- Do not expose the appliance to:
 - sources of excessive heat or open flame,
 - dripping or splashing water,
 - vibration and excessive mechanical stress,
 - insects, animals and plants,
 - aggressive and chemical substances.
- The operating environment of the device must always be in accordance with the basic characteristics set out.
- Features of the operating environment:
 1. Ambient temperature: $+5 \div +40$ ° C
 2. Humidity: $5 \div 85\%$
 3. Altitude: $\leq 2\,000$ m
 4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
 5. Occurrence of foreign bodies: quantity and type of dust are insignificant
 6. Protection degree: min. IP20 (device protected from touching dangerous parts by hand and non-waterproof)
- This degree of protection is not indicated on the product and on the technical parameters in the operating instructions.
- If the protection class of the product is different from IPX0, this information is then displayed on the label of the appliance or in the technical data of the operating instructions.

- Other characteristics of the domestic operating environment (mechanical stress - vibrations and vibrations, occurrence of plant, animals, weather effects ...) are negligible in terms of effect on the correct and safe use of electrical equipment.

1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electric appliance is designed to power from 1 / N / PE ~ 230 V 50 Hz.
- The electrical safety of the appliance is guaranteed only if it is properly connected to the mains.
- Electrical protection class I equipment is equipped with a protection against electric shock by means of protective earthing of inanimate parts, which can become dangerous when the device is malfunctioning. Always connect such devices to properly installed mains sockets that are equipped with earthing conductors and have a properly grounded earthing conductor.

All electrical equipment is equipped with a three-wire power supply.

- Class II electrical equipment is protected against electric shock by double insulation or by enhanced insulation of hazardous live electrical parts. Device of protection class II it must not be equipped with means to connect protective earthing.

All electrical equipment is equipped with two-wire power supply.

- Class III electrical equipment is a device that is powered by a small safe voltage source (battery or accumulator) and does not present any danger to the user from electrical shock.
- In order to provide increased safety against the risk of electric shock due to the use of electrical appliances by laypersons, it is recommended to install the power supply circuit for sockets with a rated current not exceeding 20 A RCD with a rated operating current not exceeding 30 mA.

To ensure the safety and correctness of the electrical installation, consult a qualified electrician.

- Only use a power cord with a plug (mains lead) supplied with the device and compatible with a wall socket. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible mains socket. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- The power cord and mains plug must always be easily accessible for safe disconnection of the electrical appliance from the power supply.
- Do not pull off the power cord by pulling the cable. Disconnect the power cord by pulling the plug behind the power cord plug.

- If you use an extension cord, make sure that the total rated power of all devices connected to the extension cord does not exceed the max. current load on the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power socket, and not to another extension cord or power supply. The extension power cord or power supply block must be designed for grounded electrical plugs and connected to a properly grounded electrical socket.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged drawers!
- To avoid electrical shock, plug the power cables into properly grounded electrical sockets. If the device is equipped with a 3-pole plug, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.
- Do not bend, crush or otherwise expose the power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.
- When the power cord is damaged, disconnect the appliance from the mains and do not use it again.
- If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similarly qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical appliance as well as the power cord and power socket. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock.
If the power cord is wet or the water has penetrated the water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power circuit before attempting
unplug the power. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

1.4 Safety of persons

- This appliance is intended for use and operation by persons without electrotechnical qualification - lay people, according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children under the age of 8 and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge when supervised or instructed to use the appliance safely and understand the dangers involved.
- Children may not play with the appliance.
- Cleaning and maintenance for users may not be performed by children unattended.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance! Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus.
- Inattention during operation may result in serious injury.

1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
- If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
- Electrical appliances that are cleaned after use and are not intended to be completely or partly immersed in water or other liquid, protect against the effects of dripping and / or splashing water and before immersion.
- Electric household appliances, like all other technical devices, are subject to the surrounding environment and natural wear. Since the legal framework of regular maintenance is not laid down for lay-in electrical household appliances, the manufacturer recommends that the user have the appliance checked and cleaned at least once a year by a specialist workshop.
- By doing so, it is possible to achieve safety, operational reliability and increased service life.
- Do not disassemble the electric appliance! The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the mains supply during user maintenance. In the event of a fault, please have the repair serviced by an authorized service center.
- Before calling a service:
 1. Turn the appliance off and on to make sure the fault reappears.
 2. If the malfunction of the appliance still persists after these operations, call the nearest specialist service center.
- Never repair the electric appliance yourself!
- Unauthorized, unqualified and improper use of an electric appliance may result in electric shock or other serious injury.
- Only carry out the warranty or post-warranty repair of an electrical appliance to an authorized qualified person (*).

(*) Competent qualified expert: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

Special safety instructions. Read carefully!

- The electrical equipment is designed and manufactured in such a way as to enable safe operation and use by persons without professional qualifications. Despite all the precautions that have been taken by the manufacturer for safe use, operation and use carry some residual risks and associated hazards.
- The following symbols and their meanings have been used on the device and in the accompanying documentation to warn of potential hazards:



This symbol warns users that the device is working with hazardous electrical voltage. Do not remove the protective covers on the device.

Failure to follow the safety instructions for use and operation of the device may result in:

Risk of electric shock! Risk of serious injury or death!



This symbol warns users that there is a risk that if they do not follow the safety instructions when using or operating the device:

Risk of serious injury or death! Risk of equipment damage or other property damage!

Transportation/Carrying

- When transporting and carrying, take care when moving to avoid tipping the device.
- Only transport / carry the device after thorough inspection of the area and route, which must be free of obstacles.
- Never carry the device while it is in operation. Do not carry the device while it is connected to a power socket.
- Carry the device firmly by its solid body.
- Make sure your hands and device are not damp or slippery when carrying.

There is a risk of serious injury or danger to life!

There is a risk of damage to the device!

Unpacking/Packaging

- Unpack the device and accessories before putting them into service and remove any parts of the packaging materials, labels and tags. Store packaging materials in a safe place or keep them out of reach of children and incapacitated persons.
There is a risk of serious injury! Risk of suffocation!

Inspection/Commissioning

- We recommend that you perform both initial and follow-up periodic inspections of the equipment.
- Never use the appliance if it is incomplete, damaged, or any part of it is damaged during use.
- Do not use non-original and incomplete equipment and accessories.
There is a risk of electric shock!
There is a risk of electric short circuit!
- Do not turn on the device unless it is fully and properly assembled and is not ready for use. For stand-alone devices, make sure that the feet are properly mounted.
- Complete and correct assembly of the equipment must be carried out in accordance with the manufacturer's instructions.
- Never clean the appliance (its electrical unit with heater) and the power cord with a plug in a manner that could cause liquid to flow into the device.
- Clean these parts only with a damp cloth and wipe dry or allow to dry.
- Clean the device only when it is turned off and unplugged from the wall socket.
- Use the equipment only with original accessories designed for use with the type.

Location/Installation

- Only place the machine on a flat, stable surface with a solid structure.
- Always make sure that the space you want to place the equipment has sufficient space, mechanical strength and stability.
- Do not use or place the device:
 - on unstable surfaces or pads,
 - uneven and dirty surface
 - to the tight edge of surfaces or pads
 - near containers with water or other liquids.
- Do not insert or allow foreign bodies to enter the housing openings.
- Do not block the air vents openings. Air ventilation ensures proper, reliable and safe operation of the device.
There is a risk of electric shock!
There is a risk of fire!

Warning!

- Place the device in a place where children cannot reach it freely.
- Keep children away from the device. The device may not overturn children and cause serious injury.
- Mechanical damage (breakage or breakage of parts and covers) of the device can cause serious injury.
There is a risk of serious injury!
There is a risk of damage to the device or other material damage!
- Do not place or use the equipment near containers containing water. Do not remove the device if it falls into the water. First, unplug the power cord from the wall socket and then remove it from the water. In such cases, take the equipment to a specialist garage to check that it is safe and functioning properly.
There is a risk of electric shock!
There is a risk of electric short circuit!

Operation/Supervision


Caution!

- Use the appliance only for drying or warming shoes and clothing.
- Do not use the device for heating the rooms.
- Use the device only in its working position. Use only in places where there is no risk of tipping over.
- Support the stability of the device by ensuring that the shoes are evenly distributed on both sides of the heaters.
- Do not turn on the device unless it is fully and properly assembled and is not ready for use. For stand-alone devices, make sure that the support feet are correctly installed.
- Complete and correct assembly of the equipment must be carried out in accordance with the manufacturer's instructions.
- During operation and operation, keep the device under supervision!
- This equipment is not intended to be operated by a programmer, an external timer or remote control, as there is a risk of fire if covered or incorrectly positioned.
- Do not use the equipment in potentially explosive atmospheres in the presence of flammable substances and their vapors, fog or dust, and in atmospheric conditions where they simply spread through the air after combustion of the combustion products. There is a risk of fire!

Warning!

- The device must not be left unattended while it is connected to the mains.
There is a risk of electric shock!
- Before connecting the equipment to the mains, make sure that the control knob (main switch) is in the "0" (Off) position.
- Do not turn the device on or off by plugging in or unplugging the power cord from the wall socket.
- Always connect the device to a power socket in normal use, and then turn on the main power switch.
- After use, turn off the main power switch and then unplug the power cord.
- Do not use the device if the main power switch does not work.
- The unit is at dangerous voltage when AC power is connected.
There is a risk of electric shock!
There is a risk of serious injury!
- The device contains parts that become very hot during operation.
- Do not touch the heated surfaces of the device with your hands or any part of the body.
Warning! After turning off the device, the heated surfaces remain warm for some time. Before any further handling of the device - postponement or retention. always keep the device cool down.
- Never leave the appliance open and do not store it with a free power cord. Children could pull the device behind the power cord.
There is a risk of serious injury!
- Never overload the equipment beyond the limits specified in the technical data!
- Always divide the operating mode (operating time / operation and breaks) into the recommended operating intervals and follow the instructions.
- If you notice any abnormality (smell, smoke, etc.) while using the machine, turn off the power and unplug it immediately. Have the device checked by a specialist garage.
- Folding and unfolding individual parts, cleaning and carrying the device only when the device is turned off, cool enough and disconnected from the mains supply.
- If any safety part / component (mechanical, electrical) is part of the equipment, never remove this part / component from operation! If the safety part / component is damaged or not working, do not use the device!
- Never underestimate possible hazards and be careful!

Parts description

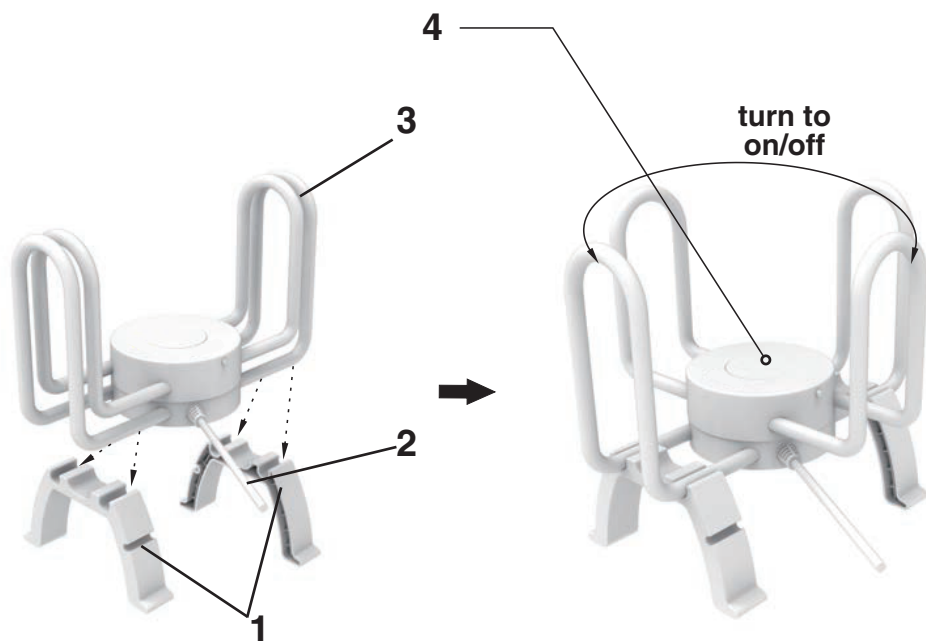

- 1 Legs
- 2 Power cord
- 3 Heating elements (upper heating elements are rotatable)
- 4 Switch on light (green)

Commissioning

1. After unpacking the dryer, place the legs (1) on the lower part of the heating elements.
2. Before putting it into operation, make sure that the power cord is not wrapped around the device. Allow the device to acclimatize to the ambient temperature before first use
3. Plug the end of the power cord into an electrical outlet with an electrical voltage that matches the information on the nameplate.
4. By turning the upper part of the heating elements counterclockwise, you turn on the device - the green light indicator (4) lights up. After a few minutes, the device warms up to operating temperature.
5. Slide the shoes onto the heating elements (all the way to the toe of the shoes).

Warning!

Always use the device with shoes on the heating elements.

6. If necessary, check the shoes or replace them.

Turn off the device

1. By turning the upper part of the heating elements clockwise, you turn off the device - the green light indicator (4) goes out.
2. Disconnect the end of the power cord from the electrical outlet.
3. Before storing the device, let the device cool down completely on a non-flammable mat in such a position that the heating elements are not in contact with any other surface.

Cleaning

- Before each cleaning, first switch off the device, disconnect it from the mains and let it cool down completely.
- Wipe the device with a soft, clean cloth. Do not use any harsh powder cleaners or solvents such as alcohol or thinner. If the device is heavily soiled, you can moisten the cloth in lukewarm water with a mild detergent solution.
- Do not wash the device under running water, in the dishwasher, or immerse it in water.

Technical parameters

Power supply:	220 - 240 V~ 50/60 Hz
Power consumption:	42 W
Dimensions (H x W x D):	26 x 30 x 25,5 cm
Weight:	0,9 kg

Producer:

ORAVA retail 1, a.s.
Seberíniho 2
821 03 Bratislava
Slovenská republika

Importer:

ORAVA retail 1, a.s. Seberíniho 2 821 03 Bratislava Slovenská republika	ORAVA distribution CZ, s.r.o. Ostravská 494 739 25 Sviadnov Česká republika
--	--

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING

Dispose of used packaging material at a municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more details collection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

For business entities in the countries of the European Union

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product meets all the essential requirements of the EU directives that apply to it.