

Facial sauna

**orava**

**FI-300**  
Instruction manual

EN



CE

FI-300

## Intended use of the device

The device is intended for cosmetic steaming. The device mainly provides cosmetic relaxation effects such as heating, stimulation and perfusion of the body during steaming, which is determined by technical and operational parameters and functions, safety and user instructions and the external influence of the operating environment.

ORAVA electrical appliances are manufactured in accordance with the state of the art and recognized safety regulations. However, improper and unprofessional use or use contrary to the intended purpose may result in injury or endanger the life of the user, or a third party, resp. damage to equipment and other property.

### 1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the general term product is used in text parts such as: electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
  - household electric appliances,
  - information and communication equipment,
  - consumer electronics,
  - lighting equipment,
  - electrical and electronic tools,
  - toys and equipment for sporting and recreational purposes,
  - medical devices (aids),
  - monitoring and control devices,
  - vending machines.

#### 1.1 General safety instructions

- Before operating the unit, we recommend that you carefully read the instruction manual and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that cannot be incorporated into any of the products is personal responsibility and caution. These factors must therefore be ensured by users serving this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!
- Keep the instruction manual as close to the device as possible throughout its service life. Always keep the instruction manual together with the appliance for future use and use by new users.
- Use the appliance only for the intended purpose and in the manner specified by the manufacturer.
- The appliance is intended for home and similar indoor use without special focus.

- This appliance is intended, in addition to domestic use, for the following uses:
  - in shops, offices and other similar work environments;
  - in economic buildings;
  - in hotels, motels and other residential environments;
  - in bed and breakfast establishments.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

## **1.2 Safety of the operating environment**

- Do not use the device in an industrial environment or outside environment!
- Do not expose the appliance to:
  - sources of excessive heat or open flame,
  - dripping or splashing water,
  - vibration and excessive mechanical stress,
  - insects, animals and plants,
  - aggressive and chemical substances.
- The operating environment of the device must always be in accordance with the basic characteristics set out.
- Features of the operating environment:
  1. Ambient temperature:  $+5 \div +40$  ° C
  2. Humidity:  $5 \div 85\%$
  3. Altitude:  $\leq 2\ 000$  m
  4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
  5. Occurrence of foreign bodies: quantity and type of dust are insignificant
  6. Protection degree: min. IP20 (device protected from touching dangerous parts by hand and non-waterproof)
- This degree of protection is not indicated on the product and on the technical parameters in the operating instructions.
- If the protection class of the product is different from IPX0, this information is then displayed on the label of the appliance or in the technical data of the operating instructions.
- Other characteristics of the domestic operating environment (mechanical stress - vibrations and vibrations, occurrence of plant, animals, weather effects ...) are negligible in terms of effect on the correct and safe use of electrical equipment.

### 1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electric appliance is designed to power from 1 / N / PE ~ 230 V 50 Hz.
- The electrical safety of the appliance is guaranteed only if it is properly connected to the mains.
- Electrical protection class I equipment is equipped with a protection against electric shock by means of protective earthing of inanimate parts, which can become dangerous when the device is malfunctioning. Always connect such devices to properly installed mains sockets that are equipped with earthing conductors and have a properly grounded earthing conductor.  
All electrical equipment is equipped with a three-wire power supply.
- Class II electrical equipment is protected against electric shock by double insulation or by enhanced insulation of hazardous live electrical parts. Device of protection class II it must not be equipped with means to connect protective earthing.  
All electrical equipment is equipped with two-wire power supply.
- Class III electrical equipment is a device that is powered by a small safe voltage source (battery or accumulator) and does not present any danger to the user from electrical shock.
- In order to provide increased safety against the risk of electric shock due to the use of electrical appliances by laypersons, it is recommended to install the power supply circuit for sockets with a rated current not exceeding 20 A RCD with a rated operating current not exceeding 30 mA.  
To ensure the safety and correctness of the electrical installation, consult a qualified electrician.
- Only use a power cord with a plug (mains lead) supplied with the device and compatible with a wall socket. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible mains socket. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- The power cord and mains plug must always be easily accessible for safe disconnection of the electrical appliance from the power supply.
- Do not pull off the power cord by pulling the cable. Disconnect the power cord by pulling the plug behind the power cord plug.
- If you use an extension cord, make sure that the total rated power of all devices connected to the extension cord does not exceed the max. current load on the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power socket, and not to another extension cord or power supply. The extension power cord or power supply block must be designed for grounded electrical plugs and connected to a properly grounded electrical socket.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged drawers!
- To avoid electrical shock, plug the power cables into properly grounded electrical sockets. If the device is equipped with a 3-pole plug, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.

- Do not bend, crush or otherwise expose the power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.
- When the power cord is damaged, disconnect the appliance from the mains and do not use it again.
- If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similarly qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical appliance as well as the power cord and power socket. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock.  
If the power cord is wet or the water has penetrated the water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power circuit before attempting unplug the power. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

#### **1.4 Safety of persons**

- This appliance is intended for use and operation by persons without electrotechnical qualification - lay people, according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children under the age of 8 and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge when supervised or instructed to use the appliance safely and understand the dangers involved.
- Children may not play with the appliance.
- Cleaning and maintenance for users may not be performed by children unattended.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance! Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus.
- Inattention during operation may result in serious injury.

## 1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
- If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
- Electrical appliances that are cleaned after use and are not intended to be completely or partly immersed in water or other liquid, protect against the effects of dripping and / or splashing water and before immersion.
- Electric household appliances, like all other technical devices, are subject to the surrounding environment and natural wear. Since the legal framework of regular maintenance is not laid down for lay-in electrical household appliances, the manufacturer recommends that the user have the appliance checked and cleaned at least once a year by a specialist workshop.
- By doing so, it is possible to achieve safety, operational reliability and increased service life.
- Do not disassemble the electric appliance! The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the mains supply during user maintenance. In the event of a fault, please have the repair serviced by an authorized service center.
- Before calling a service:
  1. Turn the appliance off and on to make sure the fault reappears.
  2. If the malfunction of the appliance still persists after these operations, call the nearest specialist service center.
- Never repair the electric appliance yourself!
- Unauthorized, unqualified and improper use of an electric appliance may result in electric shock or other serious injury.
- Only carry out the warranty or post-warranty repair of an electrical appliance to an authorized qualified person (\*).

(\* ) Competent qualified expert: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

## Special safety instructions.

### Read carefully!

- The electrical equipment is designed and manufactured in way that allows safe operation and use by persons without professional qualifications. Despite all the measures are taken by the manufacturer for safe use, operation and use entail certain residual risks and the associated risks.
- The following symbols and their meanings have been used on the device and in the accompanying documentation to warn of possible dangers:



The symbol alerts users that the device is operating with dangerous electrical pressure. Do not remove the protective covers on the device. When providing safety instructions for the use and operation of the equipment, there is a risk of:  
Danger of electric shock! Risk of serious injury or death!



The symbol alerts users to the risk of serious injury or death if the safety instructions for the use and operation of the device are not observed!  
Danger of equipment damage or other property damage!



This symbol means that the product is made with double insulation between dangerous live parts (parts with dangerous pressure from the mains) and parts that are accessible during normal use.



The symbol used on the product replaces the sentence: Do not immerse in water or other liquids!



The danger of burns due to steam escaping! Be careful when manipulating with the device.

### Transport/Transfer

- When transporting and carrying, be careful when moving to avoid tipping over, falling and damaging the device.  
Danger of damaging the device!

### Unpacking/Packaging

- Unpack the device and accessories before putting them into operation and dispose of all parts of the packaging materials, labels and tags.
- Store packaging materials in a safe place or keep them out of the reach of children and incompetent persons.  
Danger of serious injuries!  
Danger of suffocation!

## **Control/Commissioning**

- We recommend performing initial and subsequent regular control of the device. Use the device only with accessories supplied and approved by the manufacturer.
- Never use the device if it is incomplete, damaged or its parts or accessories have been damaged during use (eg due to a fall).  
Danger of serious injuries!
- Before commissioning, check and assemble the device according to the instructions in the „Before use“ section.
- Never clean the device (body with electrical parts) in a way that could immerse the liquid and allow the liquid to flow into the device.
- Clean electrical parts only with a damp cloth and dry wipe or allow the device to dry.
- Keep the device clean and dry.

## **Operation/Use**

### **Danger!**

- Never use the appliance in a home environment for very small and small children.
- If you decide to use the appliance with small or older children or with vulnerable people, always do so only on the advice of a specialist and take extra care and never leave children and vulnerable people unattended by an adult responsible person.
- Never use drug solutions in your home environment at your discretion. The device is not a medical device.
- Never use the appliance if you are excessively tired, if you are under the influence of sedatives or if you are excessively sleepy and during sleep. There is a risk of serious health hazards.  
There is a risk of suffocation.

### **Warning!**

- Use the device with the maximal care. Especially then:
  - if there are various spots or plastic features on the skin of your face, such as large freckles, birthmarks, blisters or warts, etc.,
  - if the skin of your face is affected by eczema, psoriasis, open wounds or other acute skin infections,
  - if the skin of your face is otherwise mechanically or otherwise damaged by health,
  - in heart disease,
  - for breathing problems and other serious respiratory diseases.
- Use of the device by persons insensitive to heat is only recommended with extreme personal care.
- Consult your doctor or specialist about the suitability of the device, steaming of the facial skin and inhalation of heated water vapor.
- The device for cosmetic steaming of the facial skin and inhalation of heated water vapor has been designed to allow the application of the effects of water vapor, possibly enriched with herbal essences.
- Only use the appliance if it is filled with sufficient water. The required amount of water is defined by the marking on the inner side of the container.



- Use the device only as recommended and at a time when you will not be uncomfortable with its effects, resp. they will not be unfavorable.
- Only use the appliance on a face that has been thoroughly washed and stripped of all cosmetics.
- When steaming the facial skin and / or inhaling water vapor, set the temperature so that you are not uncomfortable using the appliance and do not cause health problems.
- The service life of the device is not specified by the manufacturer. It is solely at the personal discretion of the responsible person not to exceed such a time interval in use as to avoid endangering and damaging health and damaging or destroying the device.
- All information in the operating instructions on the time period of use of the device is only indicative and represents only a „tip“ for the method of use.
- If you experience any adverse effect of the device on the skin of your face or respiratory system during use, stop using the device immediately. If you have any problems and persist, contact your doctor.
- The manufacturer expressly recommends that the device be kept properly clean.
- After use, the device must always be thoroughly cleaned according to the instructions given in the section „Cleaning devices and their accessories intended for the care of the human body“.

### **Warning!**

- The device is intended for personal cosmetics and preventive relaxation use. Therefore, its use in persons suffering from communicable dermatological diseases of the facial skin and infectious respiratory diseases is not recommended.
- If the principles of proper and thorough hygienic maintenance of the device are not observed  
There is a risk of transmitting dermatological disease!
- Improper or thorough cleaning of all parts can lead to e.g. to the formation of mold, as a result of which  
There is a serious danger or damage to health and there is a risk of damage or complete deterioration of the device.

### **Warning!**

- Do not use the device in the bath or shower.
- Do not place or use the device near baths, showers, swimming pools or other containers containing water. If the device falls into water, turn it off and allow it to dry completely.
- If the device subsequently shows signs of damage or a change in functionality, take it to a specialist garage for inspection.  
Danger of serious injuries!  
There is a risk of damage to the device or other property damage!
- Never overload the device beyond the limits set by the technical parameters!
- Do not expose the device to:
  - direct sunlight, sources producing excessive heat,
  - vibration and mechanical stress,
  - chemical pollutants,
  - insects, plants,
  - aggressive environmental influences.
 Danger of serious injuries!  
There is a risk of damage to the device or other property damage!

- Observe the operating mode of the device (operating / operating time and breaks) in accordance with the operating and operating instructions. Clean the device regularly. Contamination of the device can result in a reduction in operating parameters and possible consequent irreversible damage.
- If any safety part/component (mechanical, electrical) is part of the device, never deactivate this part/component! Do not use the device if the safety part/component is damaged or non-functional!
- Cleaning devices and their accessories intended for the care of the human body.
- The use of equipment designed for the care of the human body also brings with it the need to perform regular and thorough cleaning of these devices and their accessories.
- This section provides important basic procedures for cleaning appliances and their accessories designed to care for and treat parts of the human body with repeated use.

### **Warning!**

- Do not allow other people to use the device for the care of the human body, especially the device intended for personal hygiene or personal use.
- Follow these procedures and instructions when using and cleaning devices to treat parts of the human body:
- Before each use of the appliance, always thoroughly check that it is not damaged, that it works properly and that it is in a satisfactory state of hygiene.
- After each use of the device, all parts and surfaces of the device and its accessories that have been soiled, e.g. Thoroughly wipe with the grease of the facial skin or the remnants of cosmetics. in a dry paper towel - coarse dry cleaning,
- After removing the coarse dirt, apply a suitable cleaning agent (suitable detergent concentrate for removing biological particles and degreasing surfaces - cleaning and, if necessary, disinfectant for the treatment of hygiene products,) and thoroughly clean these parts by hand (by applying adequate pressure with your fingers). hands and friction of surfaces),
- After cleaning, rinse the appliance accessories (parts separable from the unit with electrical circuits) thoroughly under running, clean and warm water,
- Wipe all parts of the device and accessories dry or allow them to dry.
- To thoroughly clean the accessories of the device from residual dirt, it is often necessary to repeat this procedure several times.
- To achieve a higher effect in the process of cleaning and disinfecting the accessories of the device, it is recommended to use a suitable disinfectant used in the field of disinfection of human skin (eg Septonex spray, etc.).
- Proper and thorough cleaning of human body care device accessories is an important prerequisite for maintaining these parts in an acceptable hygienic condition and achieving the longest possible service life.
- Never underestimate the possible dangers and take extra care!

# Characteristic properties

Take care of your tired skin, especially if you feel the symptoms of aging on your face, loss of fat and nutrients from the cheekbones, chin and lips, and vice versa, their accumulation on the neck.

The device is designed for intensive skin care and inhalation.

- Relaxes muscles and relieves pain.
- Performs a deep skin massage.
- Relieves fatigue and stress.
- Gives your skin a youthful appearance.
- Relieves stress and fatigue.
- Opens pores for more effective cleansing and hydrates the skin.
- Easy to clean.

 
 
Proper use results in an increase in blood circulation in the facial skin, which is reflected in a pleasant and long-lasting feeling of warmth (increase in skin temperature).


The device improves blood circulation in the facial skin at regular intervals and relaxes the nasal and frontal cavities.



The heating system with temperature control of the device maintains the required temperature in the device.

# Description of parts

## Device

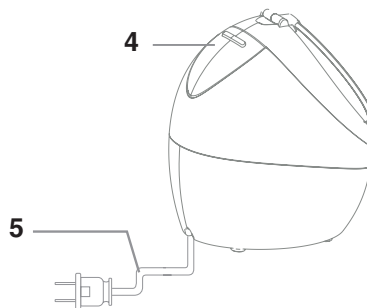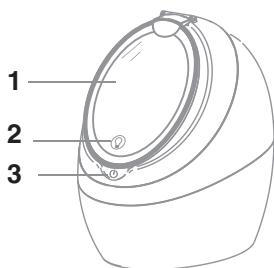

  1. Mirror
2. Led light button
3. Button  (off/on)
4. Top cover of the tank
5. Power cord

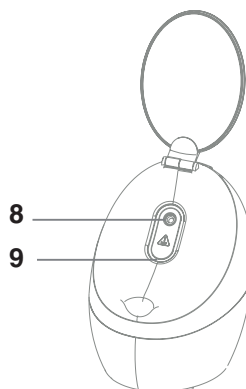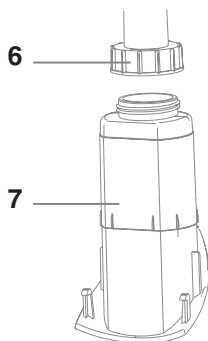

6. Filler plug
7. Water tank
8. Steam nozzle
9. LED indicator

# Assembly and operation

## Preparation

- Unpack the device and remove all packaging material and any protective film.
- The first time you open the package, you may see residual water in the water tank.

It is water that has remained in the factory after quality control and will not cause any hygiene problems.

## INSTALLATION

### Location

 
#### Step 1

- Place the device on a solid and flat surface in an area with at least 30 cm of free space around the device to ensure proper air circulation, such as on a table.

#### Step 2


- Open the top cover of the tank (4) and remove the entire water tank (7).
- Open the filler plug (6), fill the tank with water and close the plug.

Steaming time can range from 12 to 16 minutes, depending on geographical differences.

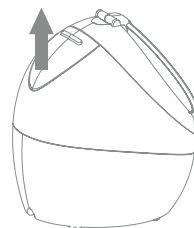

#### Step 3

 - Push the water tank into the main unit back into place until it clicks. Water will be supplied from the tank to the main unit and will be gradually consumed.



- **Use distilled water or filtered water**

As the life of the appliance may be shortened depending on the quality of the water, the use of distilled or purified water is strongly recommended.

- The following types of water cannot be used due to the high mineral content. Tap water, mineral water, geothermal water, acidic water, groundwater, ionized alkaline water
- **Do not mix water with other ingredients**  
Do not mix water with other substances, such as lotions, aromatic oils, etc. This could cause burns, malfunctions or shorten the life of the main unit.


## OPERATION

 - 1 Plug the power cord into an electrical outlet.
- 2 The device enters standby mode by plugging it into an electrical outlet. The LED indicator will turn white.

Switch on the device by pressing the button **(3)**. The LED indicator will turn white.

Briefly touch the button **(2)** to switch the mirror light on/off. The steam starts to be released after about 16 seconds. You can then simply switch off the device by pressing the button **(3)** again.

When steam starts to escape from the nozzle **(8)**, it is normal for hot drops of water to flow out at the beginning.

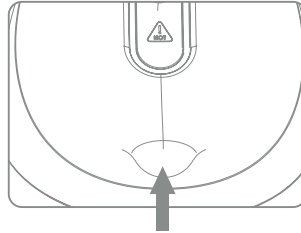


### 3 Steam skin care

- Keep your face at least 20 cm away from the nozzle **(8)**. To ensure that the steam covers your entire face, direct the current to the upper part of the chin.
- The steam is fully released approx. 35 seconds after the appliance is switched on.
- When the water level in the tank drops, it is normal for the volume of steam to decrease accordingly. The appliance switches off automatically when there is not enough water in the water tank. Do not remove the water tank immediately after the water has run out. This can cause burns and scalding. Wait at least 10 minutes for the tank to cool before removing it.


### Warning!

If the appliance switches off automatically due to lack of water, the temperature control system will be deactivated.

 It is necessary to wait about 2 minutes for the main unit to cool down. The temperature control system is then reset and normal operation is restored.

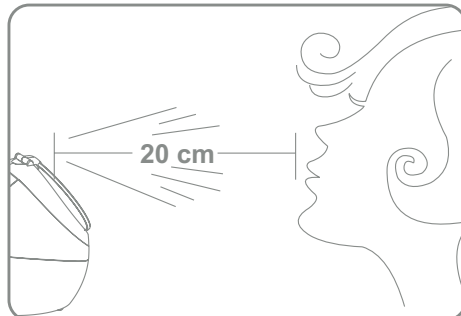

 - 4 Switch off the device by pressing the button (3). The LED indicator will flash white.  
After steam treatment of the skin, it is necessary to take care of your skin, e.g. using moisturizing lotion, cleanse, etc.  
Otherwise, the water evaporates from the skin and causes it to dry out.

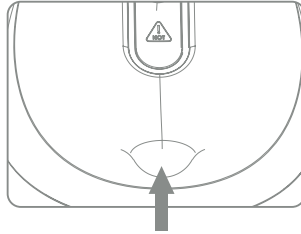

## AFTER USE

### Warning!

 
Empty the residual water from the water tank and the main unit after each use. Otherwise, water deposits or an unusual odor may form.

- 1 Allow the appliance to cool down for at least 10 minutes.
- 2 Unplug the power cord from the electrical outlet.  
Then remove the water tank from the main unit, pour out the water from the water tank and wipe the water drops on the surface of the tank.



- 3 Hold the main unit as shown so that your hands are not exposed to hot water and pour out any water from the main unit. In the opposite  
In this case, scalding or burns may occur.

- 4 Push the empty water tank into the main unit into place until it clicks.

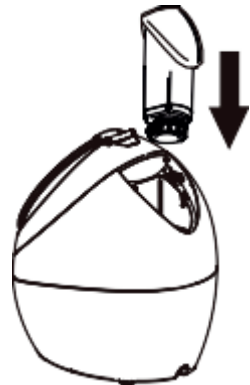

- 5 If you do not use the device for a long time (more than a few weeks), there must be no water left in the tank or in the appliance. Insert the water tank into the main unit, shake the entire unit horizontally 3 to 4 times (shake carefully without tilting the unit), then remove the water tank from the main unit and pour out the water from the main unit. Return the device to the straight position and repeat the above step two to three times.



## Maintenance and cleaning

- Clean the device regularly after each use or once a month. The unit must be turned off, unplug the power cord from both the outlet and the main unit. Wipe off any dust and dirt with a dry cloth. Do not use solvents, thinners, alcohol or harsh cleaners for cleaning. After cleaning, the device must remain completely dry.
- If the filler plug seal separates, push the center of the plug with your index finger, then press lightly along the outer edge of the plug to find a raised edge on the plug. Rotate the seal by hand, leave the seal loose, and align the raised edge of the plug seal with the groove on the plug.



# Storage and disposal of unnecessary equipment

## **STORAGE**

### **Long-term storage:**

If you will not be using the device for a long time (more than a few weeks), it is advisable to clean it and dry it completely.

Follow these steps to store your device:

- 1** Turn off the machine and unplug it.
- 2** Pour water out of the tank.
- 3** Clean both the appliance and the tank and let them dry completely in a shady place.
- 4** Store the power cord with the device.
- 5** The device must be in a vertical (standing) position during storage.
- 6** Store the device in a well-ventilated, dry place and a safe place indoors, in a non-corrosive environment.

# Technical specifications

|                         |  |
|-------------------------|--|
| Power supply:           | 220 - 240 V ~ 50/60 Hz                         |
| Max. power consumption: | 280 W  |
| Water tank capacity:    | 80 ml  |
| Operating temperature:  | 40 °C (at a distance of 20 cm from the nozzle) |
| Dimensions (W x D x H): | 14 x 18.5 x 20 cm                              |
| Weight:                 | 0.9 kg   |

|                          |   |
|--------------------------|---|
| <b>Package contents:</b> | Facial steamer (1)<br>Instructions manual (1) |
|--------------------------|---|

**We reserve the right to make changes!**

**Producer:**

ORAVA retail 1, a.s.  
Seberíného 2  
821 03 Bratislava  
Slovenská republika

**Importer:**

ORAVA retail 1, a.s.  
Seberíného 2  
821 03 Bratislava  
Slovenská republika

ORAVA distribution CZ, s.r.o.  
Ostravská 494  
739 25 Sviadnov  
Česká republika

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



The symbol on the product or on its packaging indicates that this product does not belong to household waste. It is necessary to take it to a collection point for electrical recycling and electronic equipment.

By ensuring proper disposal of this product, you will help prevent negative consequences to the environment and human health that would otherwise be caused by inappropriate disposal of this product. For more detailed information about recycling of this product, please contact your local authority, your household waste disposal service or the shop where you purchased the product.



This product meets all the essential requirements of the EU directives that apply to it.