

Electric folding grill

**orava**

# Grillchef 2

## Instruction manual

EN



CE

Grillchef 2

# The intended use of the device

The device is designed exclusively for the heat treatment of food - grilling, baking, etc., to the extent that it is determined by the technical and operating parameters and functions, the safety and user instructions and the external influences of the operating environment.

ORAVA electrical appliances are manufactured according to the state of the art and recognized safety-technical rules. Nevertheless, the use or use contrary to designation may result in the risk of injury or endanger the life of the user or third person, damage to the device and other material values.

## 1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the general term product is used in text parts such as:  
electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
  - household electric appliances,
  - information and communication equipment,
  - consumer electronics,
  - lighting equipment,
  - electrical and electronic tools,
  - toys and equipment for sporting and recreational purposes,
  - medical devices (aids),
  - monitoring and control devices,
  - vending machines.

### 1.1 General safety instructions

- Before operating the unit, we recommend that you carefully read the instruction manual and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that cannot be incorporated into any of the products is personal responsibility and caution. These factors must therefore be ensured by users serving this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!
- Keep the instruction manual as close to the device as possible throughout its service life. Always keep the instruction manual together with the appliance for future use and use by new users.
- Use the appliance only for the intended purpose and in the manner specified by the manufacturer.
- The appliance is intended for home and similar indoor use without special focus.

- This appliance is intended, in addition to domestic use, for the following uses:
  - in shops, offices and other similar work environments;
  - in economic buildings;
  - in hotels, motels and other residential environments;
  - in bed and breakfast establishments.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

## **1.2 Safety of the operating environment**

- Do not use the device in an industrial environment or outside environment!
- Do not expose the appliance to:
  - sources of excessive heat or open flame,
  - dripping or splashing water,
  - vibration and excessive mechanical stress,
  - insects, animals and plants,
  - aggressive and chemical substances.
- The operating environment of the device must always be in accordance with the basic characteristics set out.
- Features of the operating environment:
  1. Ambient temperature:  $+5 \div +40$  ° C
  2. Humidity:  $5 \div 85\%$
  3. Altitude:  $\leq 2\,000$  m
  4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
  5. Occurrence of foreign bodies: quantity and type of dust are insignificant
  6. Protection degree: min. IP20 (device protected from touching dangerous parts by hand and non-waterproof)
- This degree of protection is not indicated on the product and on the technical parameters in the operating instructions.
- If the protection class of the product is different from IPX0, this information is then displayed on the label of the appliance or in the technical data of the operating instructions.
- Other characteristics of the domestic operating environment (mechanical stress - vibrations and vibrations, occurrence of plant, animals, weather effects ...) are negligible in terms of effect on the correct and safe use of electrical equipment.

### 1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electric appliance is designed to power from 1 / N / PE ~ 230 V 50 Hz.
- The electrical safety of the appliance is guaranteed only if it is properly connected to the mains.
- Electrical protection class I equipment is equipped with a protection against electric shock by means of protective earthing of inanimate parts, which can become dangerous when the device is malfunctioning. Always connect such devices to properly installed mains sockets that are equipped with earthing conductors and have a properly grounded earthing conductor.

All electrical equipment is equipped with a three-wire power supply.

- Class II electrical equipment is protected against electric shock by double insulation or by enhanced insulation of hazardous live electrical parts. Device of protection class II it must not be equipped with means to connect protective earthing.

All electrical equipment is equipped with two-wire power supply.

- Class III electrical equipment is a device that is powered by a small safe voltage source (battery or accumulator) and does not present any danger to the user from electrical shock.
- In order to provide increased safety against the risk of electric shock due to the use of electrical appliances by laypersons, it is recommended to install the power supply circuit for sockets with a rated current not exceeding 20 A RCD with a rated operating current not exceeding 30 mA.

To ensure the safety and correctness of the electrical installation, consult a qualified electrician.

- Only use a power cord with a plug (mains lead) supplied with the device and compatible with a wall socket. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible mains socket. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- The power cord and mains plug must always be easily accessible for safe disconnection of the electrical appliance from the power supply.
- Do not pull off the power cord by pulling the cable. Disconnect the power cord by pulling the plug behind the power cord plug.
- If you use an extension cord, make sure that the total rated power of all devices connected to the extension cord does not exceed the max. current load on the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power socket, and not to another extension cord or power supply. The extension power cord or power supply block must be designed for grounded electrical plugs and connected to a properly grounded electrical socket.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged drawers!
- To avoid electrical shock, plug the power cables into properly grounded electrical sockets. If the device is equipped with a 3-pole plug, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.
- Do not bend, crush or otherwise expose the power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.

- When the power cord is damaged, disconnect the appliance from the mains and do not use it again.
- If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similarly qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical appliance as well as the power cord and power socket. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock.  
If the power cord is wet or the water has penetrated the water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power circuit before attempting  
unplug the power. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

#### **1.4 Safety of persons**

- This appliance is intended for use and operation by persons without electrotechnical qualification - lay people, according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children under the age of 8 and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge when supervised or instructed to use the appliance safely and understand the dangers involved.
- Children may not play with the appliance.
- Cleaning and maintenance for users may not be performed by children unattended.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance! Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus.
- Inattention during operation may result in serious injury.

## 1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
  - If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
  - Electrical appliances that are cleaned after use and are not intended to be completely or partly immersed in water or other liquid, protect against the effects of dripping and / or splashing water and before immersion.
  - Electric household appliances, like all other technical devices, are subject to the surrounding environment and natural wear. Since the legal framework of regular maintenance is not laid down for lay-in electrical household appliances, the manufacturer recommends that the user have the appliance checked and cleaned at least once a year by a specialist workshop.
  - By doing so, it is possible to achieve safety, operational reliability and increased service life.
  - Do not disassemble the electric appliance! The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the mains supply during user maintenance. In the event of a fault, please have the repair serviced by an authorized service center.
  - Before calling a service:
    1. Verify that you are unable to remedy the malfunction yourself according to the procedure described in the chapter „Remedy of operating faults“.
    2. Turn the appliance off and on to make sure the fault reappears.
    3. If the malfunction of the appliance still persists after these operations, call the nearest specialist service center.
  - Never repair the electric appliance yourself!
  - Unauthorized, unqualified and improper use of an electric appliance may result in electric shock or other serious injury.
  - Only carry out the warranty or post-warranty repair of an electrical appliance to an authorized qualified person (\*).
- (\*) Competent qualified expert: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

## 2. Special Safety Instructions. Read carefully!

- Electrical equipment is designed and manufactured in such a way as to allow for safe operation and use by persons without a professional qualification. Despite all the measures taken by the manufacturer to ensure safe use, handling and use, it carries with it some residual risks and associated potential hazards.
- To warn of possible hazards, the following symbols and their meanings have been used on the device and in the accompanying documentation:



This symbol alerts users that the device is operating a dangerous electrical voltage. Do not remove protective covers on the device.  
Failure to observe the safety instructions during use and operation of the device may result in:  
Danger of electric shock!  
Danger of serious injury or life threatening!



This symbol alerts users to the following:  
Risk of serious injury or life threatening when not following the safety instructions when using and operating the unit!  
Danger of damage to equipment or other damage to property!



This symbol warns users that if the safety instructions for use and operation of the appliance are not followed, there is a risk of: Burns from hot surfaces!



This symbol alerts users to the following: Failure to observe the safety instructions during use and operation of the unit may result in: Danger of fire!

### Transport/Carry

- When transporting and using, for example the transport cart, be careful when moving, to avoid overturning the device.
- Transport / carry the equipment only after thorough inspection of the space and the routes, which must be unobstructed.
- Never carry the machine while it is in operation. Do not carry the device while it is plugged into a wall outlet.

### Attention!

- Some surfaces may be hot during operation.
- Never transfer the appliance until it has cooled down to ambient
- Transfer the device firmly with both hands behind the handles or the lower edge of the base or fixed parts of the body.
- Make sure that your hands and equipment are not damp or slippery when carrying.  
There is a risk of serious injury or life threatening!  
There is a risk of damage to the device!

### Unpacking/Packaging

- Unpack and remove all parts and accessories of packaging materials, labels, and labels before putting the device into operation. Keep all packaging materials in a safe place or keep them out of the reach of children and inappropriate persons.  
There is a risk of serious injury!  
There is a risk of choking!

## **Check/Startup**

- Clean the machine before commissioning as described in the „Startup“ section. „Cleaning“.
- Do not clean the unit (the body with the electrical parts and the control panel) and the power cord with the plug and the temperature controller - under running water, which may cause the liquid to flow into the device.
- Clean these parts with a slightly moistened cloth and wipe dry or let it dry.
- Only clean the appliance if it is switched off and disconnected from the mains.
- We recommend performing both initial and subsequent regular machine inspections. Do not attempt to interfere with the construction or adjustment of the component parts in any way.
- Never use the appliance if it is incomplete, damaged, or any part of it has been damaged during use. In case of damage, have the appliance repaired by a specialist workshop.  
There is a risk of serious injury!

## **Location/Installation**

### **Warning!**

- The appliance is not intended for use in recreational and motor homes and boats.
- Only place the appliance on straight, strong and stable pads - kitchen work desks and furniture parts, suitable for the location of kitchen utensils.
- It is recommended to use a heat-resistant insulation pad underneath the device to provide effective protection against excessive heat flowing from the device.
- The insulating washer must be made of the reaction-to-fire class A1 (non-combustible) or A2 (non-flammable) with a thickness of at least 1 mm. The size of such a pad should exceed the ground plan of the device by 150 mm on each side.
- Always make sure that the place you want to place the device has sufficient space, stability, mechanical strength and appropriate lighting.
- Do not place objects or containers of liquids on the heated plates unless you use them.
- Do not place the appliance:
  - unstable tables or inappropriate parts of furniture,
  - on an uneven and dirty surface,
  - on the sealing edge of tables or parts of furniture,
  - in the vicinity of containers with water or other liquids.

### **Warning!**

- It is forbidden to install and use the device in an environment where there is a risk of fire or explosion of explosives, explosions of flammable gases and vapors, and fire of flammable liquids.

### **Warning!**

- Place the device in a place where children can not reach freely. Work desks and furniture for placing should not be less than 85 cm.
- Prevent children from handling the device. The device may overwrite and cause serious injury. Mechanical damage (breakage or breakage of parts and covers) of the device can cause serious injury.
- Do not place the appliance and do not use the proximity of containers with water. If the appliance falls into the water, do not remove it! First, pull the power cord plug out of the power outlet and then select the device.  
In such cases, take the device for inspection to a specialist service to check that it is safe and working properly.  
There is a risk of electric shock!  
There is a risk of electrical short circuit!

- Do not expose the device to:
  - direct sunlight, sources and equipment producing heat,
  - vibration and mechanical stress,
  - excessive dust,
  - water and excess moisture,
  - insect,
  - aggressive effects of the external environment.

There is a risk of serious injury!  
There is a risk of damage to equipment or other property damage!
- Do not cover the device in any way. Do not insert or allow the foreign bodies to enter the holes of the device covers. Do not cover the cover openings for air flow. Air ventilation ensures reliable and safe operation of the device.
- From a fire protection and safety point of view, the device can also be placed on a work table or similar surface if a safe distance from the flammable surfaces is maintained:
  - at least 800 mm in the direction of the main heat , and
  - at least 200 mm in other directions.

There is a risk of electric shock! There is a danger of fire!

## **Operation/Supervision**

### **Warning!**

- Only use the device with the original parts and the supplied accessories.
- For the safe and reliable use of the device, use only the original power cord with the appropriate thermostat connector.
- This requirement applies to all types of equipment that include a power supply with a connector containing the thermostat.

### **Warning!**

- Connect the appliance to the power supply only in such a way that you first connect the thermostat socket to the socket on the device and then plug the power plug for the mains socket.
- Do not disconnect the AC power plug from the device while the power cord plug is plugged into an electrical outlet.
- The power supply connector is under a dangerous voltage when the power supply is connected to the power supply.
- Do not drop any objects into the power connector.
- Make sure that the controller is set to „OFF“ in the „0“ position before each connection to the power supply.
- Do not switch the device on or off by plugging in or pulling out the plug of the power cord from the wall socket.
- Always connect the appliance to mains power supply for normal use, then switch on the main power switch - the power controller.
- When you have finished using the appliance, turn off the main power switch - the power controller, and then pull the plug of the power cord out of the mains socket.
- The device is under dangerous voltage when the power supply is connected.  
There is a risk of electric shock!  
There is a risk of damage to equipment or other property damage!
- The electrical socket and power cord must remain easily accessible for safe disconnection of the device from the power supply.
- Always unplug the power cord from the wall outlet when leaving the device unattended.
- Never leave the appliance unattended and freely accessible with a free-hanging power cord. Children, inappropriate persons or animals could throw down the device for the power cord.  
There is a risk of serious injury!  
There is a risk of damage to equipment or other property damage!

- Do not store the appliance with a wrapped cord around its body. Unfold the network cord „in the way it was put in the original packaging by the manufacturer.
- If you are not using the device for a long time, disconnect the power plug from the socket located on the device itself. Keep the power supply securely together with the device.

There is a risk of damage to the device or other damage to property.

- Always keep your device under control during use and operation!
- This device is not intended to be operated via a programmer, external time switch or remote control because there is a risk of fire if the device is covered or incorrectly positioned.
- Do not leave the appliance unattended during use and during operation, especially when there are children, inappropriate persons or animals nearby.
- Do not use the appliance near easily flammable materials and objects, curtains, curtains, decorative fabrics,

### **Warning!**

- Do not use the appliance for space heating, drying textiles, clothing, footwear or any other items!
- Do not place objects on the appliance's heating surface. There is a danger of fire! There is a risk of damage to equipment or other property damage!

### **Caution!**

- The temperature of the accessible surfaces may increase during operation.
- Do not touch hot surfaces, especially when operating and immediately after use.
- Be very careful when preparing meals. Heat-treated dishes are also very hot.
- Use handles when handling the device and its parts. Use kitchen towels or gloves.
- Open the device covers (eg glass lid) at the time of use slowly and carefully. When suddenly opening, there is a risk of a hot air leak.

### **Attention!**

- After turning off the machine, the surfaces remain warm for a certain amount of time. Before any further handling of the storage device, always wait for the hot surfaces to cool completely.  
There is a risk of burning from the hot surface!  
There is a risk of burning / burning from hot air/hot food!

### **Caution!**

- Do not use the appliance to prepare or cook food with an open flame.
- Food preparation unattended when using grease or oil can be dangerous and may result in fire.
- Do not try to extinguish with water if there is a fire (from overheating of fat or oil). Always turn off the device first  
and cover the flame on the device, for example. a lid or a fire blanket.  
There is a risk of damage to the device or other damage to property.  
There is a danger of fire!
- Never overload the equipment beyond the limits specified by the technical specifications!
- Observe the operating mode of the machine in accordance with the operating and operating instructions.
- If you notice any unusual occurrences (sounds, smell, smoke, ...) while using the device, switch off the device immediately and disconnect it from the power supply. Have the appliance checked by a specialist workshop.
- Carefully clean the appliance after all use of all food and grease residues. Incorrect cleaning or neglect of cleaning results in reduced equipment safety and service life.

### **Warning!**

- Do not immerse the appliance (even in part) in water or other liquid. There is a risk of electric shock!  
There is a risk of damage to equipment or other property damage!
- If any safety component (mechanical, electrical) is part of the device, never disable this part / component! If the safety component is damaged or not working, do not use the appliance!
- Children under 3 years of age must be prevented from accessing the appliance unless they are under the supervision.
- Children between 3 years and under 8 years of age may not connect the appliance to a power outlet, nor regulate or clean it or service users.

### **CAUTION!**

- Some parts of this product may become very hot and may cause burns. Take special care when vulnerable persons or children are present.
- Never underestimate the potential hazards and take extreme caution !!!

## **Technical specifications**

<b>Power supply:</b>	220 - 240V~ 50/60Hz
<b>Power consumption:</b>	1 800 - 2 100 W
<b>Max. operating time:</b>	120 min.
<b>Dimensions (W x H x D):</b>	38 x 18 x 35 cm
<b>Weight:</b>	5,25 kg
<b>Noise:</b>	50 dB (A)

The declared noise emission value of this device is 50 dB (A), which represents the sound power level A with respect to the reference sound power of 1 pW.

**We reserve the right to make changes!**

## Before first use

Do not connect the device to the mains during preparation.


Unpack the device and remove all packing material. To remove any dirt that may have formed during the packaging process from the device, clean the interior with a dry, lint-free cloth.

### **Observe the following before using the device:**

- Remove the grill plates using the plate release buttons and wash the plates and the drip tray with water and detergent. Wipe dry. Then lightly rub the grill surface with a suitable cooking oil.
- When using your grill for the first time, do not place any food on the grill plates.
- Connect the grill according to the instructions.
- There is an invisible protective layer from the production process on the plates. This protective layer must be removed before first use. Select manual mode **M** with the control knob (see further in the manual) and let the device operate in this mode switched on for approx. 10 min. Make sure the room is well ventilated, as smoke and a slight odor may form. This is not a fault on the device, it is a process in which the protective layer is removed. Switch off the grill with the on/off button and let it cool down. The grill is now ready for use.


### **Only for domestic use!**


## Parts description

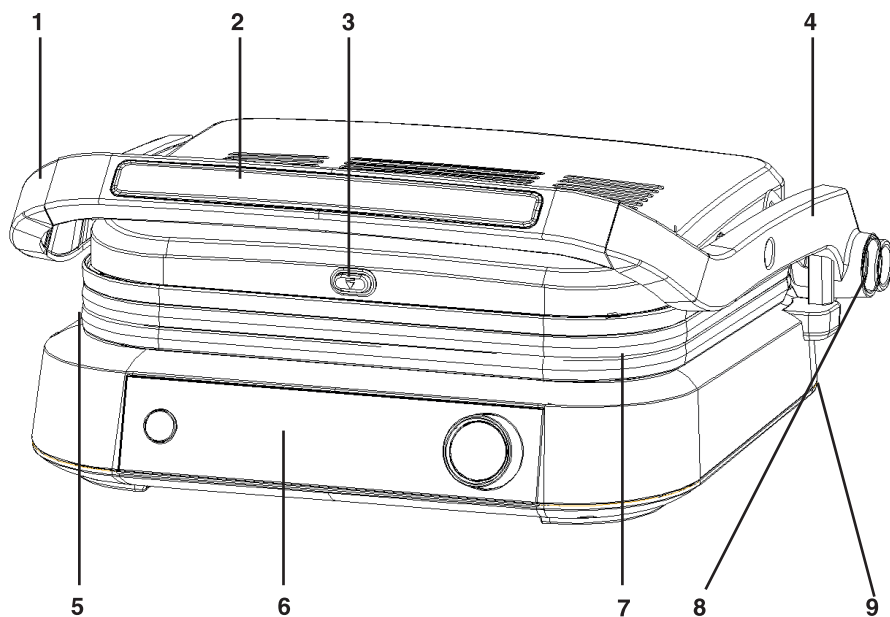

- 1 Left holder
- 2 Handle
- 3 Top plate release button
- 4 Right holder
- 5 Lower plate release button
- 6 LED display, control panel
- 7 Upper/lower grill plate
- 8 grill opening button/positioning joint (105° and 180°)
- 9 dripp tray (grill bottom)

## LED display, control panel

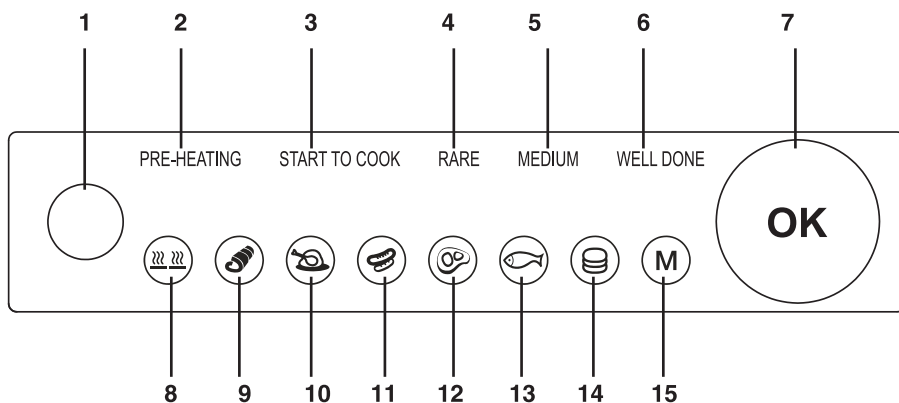


- 1 Button  (switch)
- 2 PRE-HEATING indicator
- 3 START TO COOK indicator
- 4 RARE indicator
- 5 MEDIUM indicator
- 6 WELL DONE indicator
- 7 Rotary control mode and OK button
- 8 Defrost indicator
- 9 Indicator to grill bacon
- 10 Indicator to grill chicken
- 11 Indicator to grill pork
- 12 Indicator to grill steaks
- 13 Indicator to grill fish
- 14 Indicator to grill hamburger
- 15 Manual grill indicator

## Assembly of the device

- 1 Place the appliance on a dry, flat and stable surface. Do not plug in the power cord before assembling the device completely!
- 2 By default, the grill opens at an angle of 105 degrees. The upper grill plate can also be placed in one horizontal plane with the lower plate to create a large grill area. Open the grill at an angle of 105 degrees. To open the grill 180 degrees for a standard manual grill, then press the grill open button (8) with your right hand and grab the handle with the other hand and open the grill 180 degrees.
- 3 Fit the upper and lower grill plates in their places with the rear projections at the joints and then press the front end of the plates with light pressure to snap them into place. You can unclip the plates for washing by pressing the top plate release button (2) and the lower plate release button (5) and then removing the plates.
- 4 Close the grill by tilting the handle down.

## Using the grill

- 1 Place the assembled device on a dry, level, and firm, heat-resistant surface. Plug the power cord into an electrical socket. Ventilation openings must not be covered (minimum free distance must be 15 cm).
- 2 Press  (1) to switch on the device. The fan starts and the LED display lights up. The indicators of the entire Grill Menu (8-15) light up red.
- 3 Do not load food yet and turn the rotary knob (7) to select the desired grilling mode (food). When you select rotary knob (7) currently selected item will turn blue. All other items are lit in red.
- 4 After selecting the selected mode, confirm by pressing the knob (7) (OK button). When pressed, the selected Menu item will light blue permanently, the other items will go out and the progress bar will flash and the corresponding grill status indicators (2-6) will light up depending on the status reached. If you do not press the OK button after selection, or if you open the grill during grilling, the Menu item will not be selected.
- 5 When the grill reaches the set preheating temperature, an acoustic signal (beep) sounds and the grill is preheated and you can load food. The preheating indicator (2) will light up and the grill start indicator (3) will flash.  
(The first progress bar is lit and the second will flash.)
- 6 Put the food in and close the grill. The preheat (2) and grill start indicators (3) will light up and the half-baked indicator (4) will flash.

- 7 The appliance works in the same way in all modes and all stages of grilling will take place gradually, which will be indicated by the lighting of the given status indicator and the flashing of the next status indicator. The difference is in the duration of individual cycles and the temperature used, which the device regulates automatically. The food is gradually grilled. You can decide in which grilling state to end the process (RARE) (4)/ MEDIUM (5)/WELL DONE (6). The grill sets the required temperature and duration of the individual steps according to the mode selected in steps 3 and 4 AUTOMATICALLY.
8. When the last step (WELL DONE) is completed, 8 beeps will also sound and you can put the food away. The fan will continue to run for about 3 minutes if the device is plugged in. Do not unplug it earlier, as this will cool the grill.


 
## Manual grilling

- 1 After switching on the grill, open the grill completely to 180 degrees or only 105 degrees if you only want to use the bottom plate.
- 2 Turn the rotary selector (7) to select grill mode **M**.  
**M** mode selected will turn blue. All other items are lit in red.
- 3 After selecting the mode, press the knob (7) to confirm (**OK** button).  
The grill starts to preheat and stops preheating as soon as the grill plates reach the set temperature.
- 4 Place the food on the plates and grill. Turn the food over with a suitable tool (not metal to avoid scratching the surface of the plates).  
When the food is ready, turn off the grill and when the fan turns off, unplug it.

## Warning!

When the grill is open at 105° or 180°, it is not possible to use the intelligent (automatic) grill mode (Menu).

## Notes

- For best results, lightly rub or spray the plates with a thin layer of barbecue oil.
- Close the plates when preheating. However, in manual mode **M**, the device does not use any detection function, so it will be in operation for about two hours until it switches off automatically.
- Remove (turn) food with a suitable tool (plastic heat-resistant spatula, etc.).  
Never use metal tools (tongs, knife ...) as you could damage the non-stick surface of the grill plates.
- The audible signal at the end of the „RARE“ and „MEDIUM“ stages sounds only in the steak grill mode (12). In other intelligent modes, a beep will not sound until the „WELL DONE“ level is completed.
- Smart mode can only be used with the grill closed.
- When preheating is completed, an acoustic signal sounds to warn you that food needs to be put in. If you do not put food in, the signal will sound again after approx. 5 minutes and then again after approx. 2 minutes. If you still do not put food in, the appliance switches off automatically.
- After pressing button  and switching on the grill, the time starts to be measured internally. If no program is selected, the power will turn off automatically 10 minutes after the unit is turned on. If the device needs to be used again, the device must be switched on again by pressing button .

# Cleaning and maintenance

Before cleaning or maintenance, switch off the grill, unplug it and let it cool down completely.

- 1 Open the grill and use the upper plate release button (3) and the lower plate release button (5) to remove the grill plates.
- 2 After removing the plates, wash them in warm soapy water or in the dishwasher. Dry the plates thoroughly before putting them back on the grill.
- 3 Pull out the drip tray and empty its contents into a suitable container.
- 4 Wash the drip tray in warm soapy water or in the dishwasher and then dry it thoroughly.

## Note

Before removing the drip tray, make sure that the temperature of the drip contents in the drip tray is below 40 ° C, otherwise burns may occur.

- 5 Wipe the other surfaces of the grill with a clean damp cloth. To remove stubborn dirt, use only a cloth slightly dampened in a mild detergent solution. Do not use any solvents or harsh cleaners. They can damage the surface finish.
- 6 Place the drip tray and grill plates in the grill.

## Warnings!

- Do not immerse the device in water or any other liquid.
- Do not use harsh cleaners or solvents.
- Never use scrubber or chemical cloths.

## Storage

- 1 Before storing the grill, make sure that it is clean and thoroughly dried.
- 2 Close the grill.
- 3 Store the grill in a cool, dry place out of the reach of children in a horizontal position. The grill cannot be stored in an upright position.
- 4 Never wrap the power cord tightly around the grill. Wrap it loosely to prevent damage.

**Producer:**

ORAVA retail 1, a.s.  
Seberíniho 2  
821 03 Bratislava  
Slovenská republika

**Importer:**

ORAVA retail 1, a.s.  
Seberíniho 2  
821 03 Bratislava  
Slovenská republika

ORAVA distribution CZ, s.r.o.  
Ostravská 494  
739 25 Sviadnov  
Česká republika

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



The symbol on the product or on its packaging indicates that this product does not belong to household waste. It is necessary to take it to a collection point for electrical recycling and electronic equipment.

By ensuring proper disposal of this product, you will help prevent negative consequences to the environment and human health that would otherwise be caused by inappropriate disposal of this product. For more detailed information about recycling of this product, please contact your local authority, your household waste disposal service or the shop where you purchased the product.



This product meets all the essential requirements of the EU directives that apply to it.