



# HR-125

Instruction manual

EN



Read this manual carefully before using the device and keep it for future reference.

Automatic toaster

# Intended use of the device

The appliance is designed exclusively for toasting or warming bread, to the extent determined by technical and operational parameters and functions, safety and user instructions and external influences of the operating environment.

ORAVA electrical appliances are manufactured according to state-of-the-art knowledge and recognized safety regulations. Nevertheless, improper and improper use or improper use may result in injury or endangerment to the life of the user or a third party, or to a third party. damage to equipment and other property.

## 1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the general term product is used in text parts such as: electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
  - household electric devices,
  - information and communication equipment,
  - consumer electronics,
  - lighting equipment,
  - electrical and electronic tools,
  - toys and equipment for sporting and recreational purposes,
  - medical devices (aids),
  - monitoring and control devices,
  - vending machines.

### 1.1 General safety instructions

- Before operating the unit, we recommend that you carefully read the instruction manual and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that cannot be incorporated into any of the products is personal responsibility and caution. These factors must therefore be ensured by users serving this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!
- Keep the instruction manual as close to the device as possible throughout its service life. Always keep the instruction manual together with the device for future use and use by new users.
- Use the device only for the intended purpose and in the manner specified by the manufacturer.

- The device is intended for home and similar indoor use without special focus.
- This device is intended, in addition to domestic use, for the following uses:
  - in shops, offices and other similar work environments;
  - in economic buildings;
  - in hotels, motels and other residential environments;
  - in bed and breakfast establishments.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

## **1.2 Safety of the operating environment**

- Do not use the device in an industrial environment or outside environment!
- Do not expose the device to:
  - sources of excessive heat or open flame,
  - dripping or splashing water,
  - vibration and excessive mechanical stress,
  - insects, animals and plants,
  - aggressive and chemical substances.
- The operating environment of the device must always be in accordance with the basic characteristics set out.
- Features of the operating environment:
  1. Ambient temperature:  $+5 \div +40$  ° C
  2. Humidity:  $5 \div 85\%$
  3. Altitude:  $\leq 2\,000$  m
  4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
  5. Occurrence of foreign bodies: quantity and type of dust are insignificant
  6. Protection degree: min. IP20 (device protected from touching dangerous parts by hand and non-waterproof)
- This degree of protection is not indicated on the product and on the technical parameters in the operating instructions.
- If the protection class of the product is different from IPX0, this information is then displayed on the label of the device or in the technical data of the operating instructions.
- Other characteristics of the domestic operating environment (mechanical stress - vibrations and vibrations, occurrence of plant, animals, weather effects ...) are negligible in terms of effect on the correct and safe use of electrical equipment.

### 1.3 Electrical safety

- Before connecting the device to the power supply for the first time, make sure that the voltage on the device label corresponds to that of the household electrical outlet.
- The electric device is designed to power from 1/N/PE ~ 230 V 50 Hz.
- The electrical safety of the device is guaranteed only if it is properly connected to the mains.
- Electrical protection class I equipment is equipped with a protection against electric shock by means of protective earthing of inanimate parts, which can become dangerous when the device is malfunctioning. Always connect such devices to properly installed mains sockets that are equipped with earthing conductors and have a properly grounded earthing conductor.

All electrical equipment is equipped with a three-wire power supply.

- Class II electrical equipment is protected against electric shock by double insulation or by enhanced insulation of hazardous live electrical parts. Device of protection class II it must not be equipped with means to connect protective earthing.

All electrical equipment is equipped with two-wire power supply.

- Class III electrical equipment is a device that is powered by a small safe voltage source (battery or accumulator) and does not present any danger to the user from electrical shock.
- In order to provide increased safety against the risk of electric shock due to the use of electrical devices by laypersons, it is recommended to install the power supply circuit for sockets with a rated current not exceeding 20 A RCD with a rated operating current not exceeding 30 mA.

To ensure the safety and correctness of the electrical installation, consult a qualified electrician.

- Only use a power cord with a plug (mains lead) supplied with the device and compatible with a wall socket. Using another cable may result in fire or electric shock.
- Always connect an electrical device to an easily accessible mains socket. In the event of an operating fault, the device must be switched off as soon as possible and disconnected from mains supply.
- The power cord and mains plug must always be easily accessible for safe disconnection of the electrical device from the power supply.
- Do not pull off the power cord by pulling the cable. Disconnect the power cord by pulling the plug behind the power cord plug.
- If you use an extension cord, make sure that the total rated power of all devices connected to the extension cord does not exceed the max. current load on the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power socket, and not to another extension cord or power supply. The extension power cord or power supply block must be designed for grounded electrical plugs and connected to a properly grounded electrical socket.
- The power plug of the device must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged drawers!

- To avoid electrical shock, plug the power cables into properly grounded electrical sockets. If the device is equipped with a 3-pole plug, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.
- Do not bend, crush or otherwise expose the power cord of the device to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.
- When the power cord is damaged, disconnect the device from the mains and do not use it again.
- If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similarly qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical device as well as the power cord and power socket. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the device to water or moisture. The ingress of water into the device increases the risk of electric shock.  
If the power cord is wet or the water has penetrated the water, disconnect it immediately from the mains. If the device is plugged into a mains socket and if possible, turn off the power circuit before attempting unplug the power. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

#### **1.4 Safety of persons**

- This device is intended for use and operation by persons without electrotechnical qualification - lay people, according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This device can be used by children under the age of 8 and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge when supervised or instructed to use the device safely and understand the dangers involved.
- Children may not play with the device.
- Cleaning and maintenance for users may not be performed by children unattended.
- Always keep the device out of reach of children during use and operation. Be sure to download the device even for a freely accessible power cord.
- Always be careful when operating the electric device! Do not use an electric device if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus.
- Inattention during operation may result in serious injury.

## 1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the device in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household devices.
- If you do not use the device, clean it or disconnect the device from the power supply when the device is faulty.
- Electrical devices that are cleaned after use and are not intended to be completely or partly immersed in water or other liquid, protect against the effects of dripping and / or splashing water and before immersion.
- Electric household devices, like all other technical devices, are subject to the surrounding environment and natural wear. Since the legal framework of regular maintenance is not laid down for lay-in electrical household devices, the manufacturer recommends that the user have the device checked and cleaned at least once a year by a specialist workshop.
- By doing so, it is possible to achieve safety, operational reliability and increased service life.
- Do not disassemble the electric device! The device works with a dangerous voltage. For this reason, always switch off the device and disconnect it from the mains supply during user maintenance. In the event of a fault, please have the repair serviced by an authorized service center.
- Before calling a service:
  1. Turn the device off and on to make sure the fault reappears.
  2. If the malfunction of the device still persists after these operations, call the nearest specialist service center.
- Never repair the electric device yourself!
- Unauthorized, unqualified and improper use of an electric device may result in electric shock or other serious injury.
- Only carry out the warranty or post-warranty repair of an electrical device to an authorized qualified person (\*).

(\*) Competent qualified expert: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

## 2.Special Safety Instructions.

### Read carefully!

Electrical equipment is designed and manufactured in such a way as to allow for safe operation and use by persons without a professional qualification. Despite all the measures taken by the manufacturer to ensure safe use, handling and use, it carries with it some residual risks and associated potential hazards.

To warn of possible hazards, the following symbols and their meanings were used on the device and in the accompanying documentation:



This symbol alerts users that the device is operating a dangerous electrical voltage. Do not remove protective covers on the device. Failure to observe the safety instructions during use and operation of the device may result in:  
Danger of electric shock! Danger of serious injury or life threatening!



This symbol alerts users to the following: • Risk of serious injury or life threatening when not following the safety instructions when using and operating the unit!  
Danger of damage to equipment or other damage to property!



This symbol warns users that if the safety instructions for use and operation of the appliance are not followed, there is a risk of: Burns from hot surfaces!



This symbol alerts users to the following: Failure to comply with the safety instructions for use and operation of the equipment may result in: Fire hazard!



This symbol used on the product replaces the sentence: Do not immerse in water or other liquids!

### Transportation/Transfer

- When transporting , be careful when moving to avoid overturning the device.
- Transport / carry the equipment only after thorough inspection of the space and the routes, which must be unobstructed.
- Never carry the machine while it is in operation. Do not carry the device while it is plugged into a wall outlet.

### Warning!

- Some surfaces may be hot during operation.
- Never transfer the appliance until it has cooled down to ambient temperature.
- Transfer the device firmly by gripping the handles or the lower edge of the base or fixed parts of the body.
- Make sure that your hands and equipment are not damp or slippery when carrying. There is a risk of serious injury or life threatening!  
There is a risk of damage to the device!

## **Unpacking/Packaging**

- Unpack and remove all parts and accessories of packaging materials, labels, and labels before putting the device into operation. Keep all packaging materials in a safe place or keep them out of the reach of children and inappropriate persons.  
There is a risk of serious injury!  
There is a risk of choking!

## **Check/Startup**

- We recommend performing both initial and subsequent regular machine inspections. Do not attempt to interfere with the construction or adjustment of the component parts in any way.
- Never use the appliance if it is incomplete, damaged, or damaged during use (eg due to fall). In case of damage, have the appliance repaired by a specialist workshop.
- Clean the machine before commissioning as described in the „Startup“ section. „Cleaning“.
- Never clean the device (body with electrical parts) and the power cord with the plug in a way that could cause the liquid to flow into the device.
- Clean these parts with a slightly moistened cloth and wipe dry or let it dry.

## **Location/Installation**

### **Warning!**

- The appliance is not intended for use in recreational and motor homes and boats.
- Only place the appliance on straight, strong and stable pads - kitchen work desks and furniture parts, suitable for the location of kitchen utensils.
- It is recommended to use a heat-resistant insulation pad underneath the device to provide effective protection against excessive heat flowing from the device.
- The insulating washer must be made of the reaction-to-fire class A1 (non-combustible) or A2 (non-flammable) with a thickness of at least 1 mm. The size of such a pad should exceed the ground plan of the device by 150 mm on each side.
- Always make sure that the place you want to place the device has sufficient space, stability, mechanical strength and appropriate lighting.
- Do not place objects or containers of liquids on the heated plates unless you use them.
- Do not place the appliance:
  - unstable tables or inappropriate parts of furniture,
  - on an uneven and dirty surface,
  - on the sealing edge of tables or parts of furniture,
  - in the vicinity of containers with water or other liquids.

### **Warning!**

- It is forbidden to install and use the device in an environment where there is a risk of fire or explosion of flammable gases and vapors, and a fire of flammable liquids.

### **Warning!**

- Place the device in a place where children can not reach freely. Work desks and furniture for placing should not be less than 85 cm.
- Prevent children from handling the device. The device may overwrite and cause serious injury. Mechanical damage (breakage or breakage of parts and covers) of the device can cause serious injury.



- Do not place the appliance and do not use in the proximity of containers containing water. If the appliance falls into the water, do not remove it. First, pull the power cord plug out of the mains socket and then select the appliance from the water. In such cases, take the device for inspection to a specialist service to check that it is safe and working properly.  
There is a risk of electric shock!  
There is a risk of electrical short circuit!
- Do not cover the device in any way. Do not insert or allow the foreign bodies to enter the holes of the device covers. Do not cover the cover openings for air flow. Air ventilation ensures reliable and safe operation of the device.
- From a fire protection and safety point of view, the device can also be placed on a work table or similar surface if a safe distance from the flammable surfaces is maintained. materials:
  - at least 500 mm in the direction of the main heat sink, and
  - at least 200 mm in other directions.
 There is a risk of electric shock!  
There is a danger of fire!

## **Operation/Supervision**

### **Danger!**

- Do not reach the work area with your fingers (especially at the operating time of the appliance and when the heaters are hot or warm) or any tools, utensils.
- You can only reach the machine's work area if it is switched off completely and disconnected from the power supply. When handling, be very careful.
- Do not switch on the appliance until the appropriate cooking area has been placed in the work area.  
There is a risk of serious injury or life threatening!  
There is a risk of serious burns!

### **Warning!**

- There is a high degree of food warming and hot air when cooking food. Be very careful at the time of operation.
- Do not place the face or other body parts in the immediate vicinity of the work area of the device and under the influence of radiant heat.  
There is a risk of very serious injury!  
There is a risk of burning from the radiant hot air!
- Use only the clean and appropriate type and size of pastry for preparing toasts. An inappropriate type and size of pastry may cause the device to malfunction (for example, an over-sized piece of bread may block the automatic cut-off mechanism).
- Do not put pastry in the machine with grease or other ingredients. A high degree of heating will result in the spreading of these foods, subsequent contamination and possible damage to the appliance.
- Always keep your device under control during use and operation!
- This device is not intended to be operated via a programmer, external time switch or remote control because there is a risk of fire if the device is covered or incorrectly positioned.
- Do not leave the appliance unattended during use and during operation, especially when there are children, inappropriate persons or animals nearby.
- Do not use the appliance near easily flammable materials and objects, curtains, curtains, decorative fabrics,  
There is a danger of fire!  
There is a risk of damage to equipment or other property damage!

## **Warning!**

- The temperature of the accessible surfaces may increase during operation.
- Do not touch hot surfaces, especially when operating and immediately after use.
- Be very careful when preparing meals. Heat-treated dishes are also very hot. When handling equipment and food use kitchen gloves and appropriate tools.

## **Warning!**

- After turning off the machine, the surfaces remain warm for a certain amount of time. Before any further handling of the device - storage , always wait for the device to cool down completely.  
There is a risk of burning from the hot surface!  
There is a risk of burning from a hot food!
- Do not use the appliance for space heating, drying textiles, clothing, footwear or any other items! Do not place any objects on the device covers.  
There is a danger of fire!  
There is a risk of damage to equipment or other property damage!
- The unsupervised cooking of food can be dangerous and may result in fire - bread can burn.
- If there is a fire, do not attempt to extinguish with fire. Always turn off the device first  
(disconnect from the electrical outlet) and cover the flame on the device, for example, fireproof blanket.  
There is a risk of damage to the device or other damage to property.  
There is a danger of fire!
- The electrical socket and power cord must remain easily accessible for safe disconnection of the device from the power supply.
- Protect the power cord from touching the hot parts of the device and sharp edges.
- Always unplug the power cord from the wall outlet when leaving the device unattended.
- Never leave the appliance unattended and freely accessible with a free-hanging power cord. Children, unqualified persons or animals could download the device for the power cord.
- Always switch off and unplug the appliance before removing the accessories, before installing and dismantling, before cleaning or servicing, or after use, by unplugging the power supply from the electrical outlet.  
There is a risk of serious injury!  
There is a risk of electric shock! There is a risk of damage to equipment or other property damage!
- Do not store the appliance with a wrapped cord around your body. Unfold the network cord „in the way it was put in the original packaging by the manufacturer.  
There is a risk of damage to the device or other damage to property.
- Never overload the equipment beyond the limits specified by the technical specifications!
- Observe the operating mode of the device (normal operating time and rest time) according to the operating and operating instructions.
- If you notice any unusual occurrences (sounds, odors, smoke, etc.) while using the device, switch off the device immediately and disconnect it from the power supply. Have the appliance checked by a specialist workshop.

- Carefully clean the appliance after all use of all residues of processed food. Incorrect cleaning or neglect of cleaning results in reduced equipment safety and service life.
- Before cleaning, disconnect the appliance from the power supply and allow it to cool down sufficiently.

### **Warning!**

- Do not immerse the appliance (even in part) in water or other liquid. There is a risk of electric shock! There is a risk of damage to equipment or other property damage!
- If any safety component (mechanical, electrical) is part of the device, never disable this part/component! If the safety component/part is damaged or not working, do not use the appliance!
- Never underestimate the potential hazards and take extreme caution !!!

### **Instructions for cleaning the surfaces of parts and components of food contact devices**

- The appliance must not adversely affect the quality and properties of the food while using it; therefore, it is necessary to regularly and thoroughly clean all surfaces that come in contact with the processed food.
- Once the appliance has been used, it is always necessary to clean all parts of it from the food residue. It is important to thoroughly clean the surfaces from the residues of burners and possible greasy deposits.

Follow these steps:


- Disassemble (depending on the type of appliance and the manufacturer's instructions) parts and components that are individually washable either directly under running hot water or can be immersed in warm water where appropriate detergent is added.  
Otherwise, clean the unit in assembled condition.
- Carefully remove any visible parts of the food from all parts of the appliance (parts of the food processor).
- It is a good way to use all areas with a dry paper towel. Do not use abrasive cleaners and metal utensils for cleaning.
- Areas designed to prepare food and contaminated surfaces with adequate pressure, but thoroughly use a cleaning sponge soaked in warm water and, if necessary, a small amount of detergent, and remove all food and grease residues.
- Apply the cleaned area of parts and parts of the appliance using a soft sponge or cloth soaked in clean, warm water. Be careful not to get water into the electrical parts of the appliance.
- Repeat this procedure as necessary to remove any detergent residue.
- Always dry thoroughly with a soft cloth or paper towel, or allow it to dry.
- It is important to clean the device (parts and components intended for contact with food) because food residues tend to be subject to a rotting process and thus contaminate unsafe foods when they are processed.

## Description of parts

- A** Indoor baking space
- B** Crumb tray
- C** Inner slide position control - start baking
- D** CANCEL button
- E** DEFROST button
- F** REHEAT button
- G** Heating intensity regulator (browning) - 7 degrees
- H** Pastery toaster - ***optional accessory***



**B**

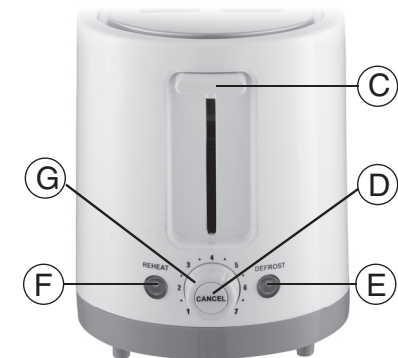

## Operation

1. Only connect the device to a 230 V ~ 50Hz mains socket with a safety pin, which is installed in accordance with the relevant regulations.
2. Using the control (**G**), it is possible to select the baking level from 1 to 7. To verify baking, we recommend setting a lower level than the maximum and repeating the baking several times. This will achieve the desired shade of roasting.
3. If you are using frozen bread and want to defrost it, press the DEFROST button (**E**). The indicator light comes on. When defrosting is completed, the appliance switches off, the indicator light goes out and the inner carriage slides upwards.
4. If you are using chilled bread and want to reheat it, press the REHEAT button (**F**). The indicator light comes on. When defrosting is completed, the appliance switches off, the indicator light goes out and the inner carriage slides upwards.
5. Insert 2 - 4 slices of bread and a sled into the pastry slot using the knob (**C**) pull down until they lock.
6. The appliance starts to operate and automatically switches off and slides the inner carriage upwards when baking is completed according to the set level.
7. The baking process can be interrupted at any time with the CANCEL button (**D**).
8. Allow the device to cool before storing.

## Pastry toaster (optional accessory)

1. Place the attachment (**H**) on the toaster and place the pastry (small baguette, bun or croissant) on it.
2. Using the control (**G**), it is possible to select the baking level from 1 to 7. To verify baking, we recommend setting a lower level than the maximum and repeating the baking several times.
3. Push the inner slide position control (**C**) down until it locks.
4. The appliance starts to operate and automatically switches off and slides the inner carriage upwards when baking is completed according to the set level.
5. The baking process can be interrupted at any time with the CANCEL button (**D**).
6. Allow the device to cool before storing.

## Advices

- Thin and drier slices of bread bake faster than wet and coarse slices.
- If you feel a burn during baking, stop baking.
- Do not bake slices coated with butter or other spreads.

### Warning!

Do not put wrapped pastries in the toaster. Before baking, remove the packaged bread.

## Cleaning the crumb tray

When using the machine, clean the crumb tray (**B**) regularly. The tray is located at the bottom of the toaster.

## Cleaning

- Before each cleaning, unplug the appliance and let it cool down.
- Do not attempt to remove a jammed slice of bread from the appliance without unplugging the appliance.
- Use only a slightly damp cloth to clean the device.
- Do not use any solvents or harsh cleaners.
- Unscrew the screw at the bottom of the toaster, open the cover and empty the leftover bread.
- Be careful not to allow debris to accumulate in it, as this may ignite.

## Technical specifications

<b>Power supply:</b>	220 - 240 V~ 50 Hz
<b>Power consumption:</b>	1 200 - 1 400 W
<b>Dimensions (W x H x D):</b>	38,2 x 17,2 x 14,4 cm
<b>Weight:</b>	1,3 kg

**We reserve the right to make changes!**

**Producer:**

ORAVA retail 1, a.s.  
Seberíniho 2  
821 03 Bratislava  
Slovenská republika

**Importer:**

ORAVA retail 1, a.s.  
Seberíniho 2  
821 03 Bratislava  
Slovenská republika

ORAVA distribution CZ, s.r.o.  
Ostravská 494  
739 25 Sviadnov  
Česká republika

**INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING**

Dispose of used packaging material at a municipal waste disposal site.

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more details collection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

**For business entities in the countries of the European Union**

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

**Disposal in other countries outside the European Union**

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product complies with all the essential requirements of the EU directives that apply to it.