

Kitchen table mixer

orava

RM-1001
Instruction manual

EN



CE

RM-1001

Intended use of the device

The equipment is intended exclusively for mixing liquid, soft and semi-hard foods (pulp and vegetables) and/or for mixing frozen foods and crushing ice and/or chopping nuts, spices and the like in containers for preparation, to the extent that it is determined by the technical and operational parameters and functions of the equipment, the safety and user instructions and the external influences of the operating environment.

ORAVA electrical appliances are manufactured according to the state of the art and recognized safety rules. Nevertheless, improper and unprofessional use or use contrary to the intended use may result in injury or danger to the life of the user or third party. damage to equipment and other material values.

1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the general term product is used in text parts such as: electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
 - household electric appliances,
 - information and communication equipment,
 - consumer electronics,
 - lighting equipment,
 - electrical and electronic tools,
 - toys and equipment for sporting and recreational purposes,
 - medical devices (aids),
 - monitoring and control devices,
 - vending machines.

1.1 General safety instructions

- Before operating the unit, we recommend that you carefully read the instruction manual and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that cannot be incorporated into any of the products is personal responsibility and caution. These factors must therefore be ensured by users serving this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!
- Keep the instruction manual as close to the device as possible throughout its service life. Always keep the instruction manual together with the appliance for future use and use by new users.
- Use the appliance only for the intended purpose and in the manner specified by the manufacturer.

- The appliance is intended for home and similar indoor use without special focus.
- This appliance is intended, in addition to domestic use, for the following uses:
 - in shops, offices and other similar work environments;
 - in economic buildings;
 - in hotels, motels and other residential environments;
 - in bed and breakfast establishments.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

1.2 Safety of the operating environment

- Do not use the device in an industrial environment or outside environment!
- Do not expose the appliance to:
 - sources of excessive heat or open flame,
 - dripping or splashing water,
 - vibration and excessive mechanical stress,
 - insects, animals and plants,
 - aggressive and chemical substances.
- The operating environment of the device must always be in accordance with the basic characteristics set out.
- Features of the operating environment:
 1. Ambient temperature: $+5 \div +40^{\circ}\text{C}$
 2. Humidity: 5 \div 85%
 3. Altitude: $\leq 2\,000\text{ m}$
 4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
 5. Occurrence of foreign bodies: quantity and type of dust are insignificant
 6. Protection degree: min. IP20 (device protected from touching dangerous parts by hand and non-waterproof)
- This degree of protection is not indicated on the product and on the technical parameters in the operating instructions.
- If the protection class of the product is different from IPX0, this information is then displayed on the label of the appliance or in the technical data of the operating instructions.
- Other characteristics of the domestic operating environment (mechanical stress - vibrations and vibrations, occurrence of plant, animals, weather effects ...) are negligible in terms of effect on the correct and safe use of electrical equipment.

1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electric appliance is designed to power from 1 / N / PE ~ 230 V 50 Hz.
- The electrical safety of the appliance is guaranteed only if it is properly connected to the mains.
- Electrical protection class I equipment is equipped with a protection against electric shock by means of protective earthing of inanimate parts, which can become dangerous when the device is malfunctioning. Always connect such devices to properly installed mains sockets that are equipped with earthing conductors and have a properly grounded earthing conductor.
All electrical equipment is equipped with a three-wire power supply.
- Class II electrical equipment is protected against electric shock by double insulation or by enhanced insulation of hazardous live electrical parts. Device of protection class II it must not be equipped with means to connect protective earthing.
All electrical equipment is equipped with two-wire power supply.
- Class III electrical equipment is a device that is powered by a small safe voltage source (battery or accumulator) and does not present any danger to the user from electrical shock.
- In order to provide increased safety against the risk of electric shock due to the use of electrical appliances by laypersons, it is recommended to install the power supply circuit for sockets with a rated current not exceeding 20 A RCD with a rated operating current not exceeding 30 mA.
To ensure the safety and correctness of the electrical installation, consult a qualified electrician.
- Only use a power cord with a plug (mains lead) supplied with the device and compatible with a wall socket. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible mains socket. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- The power cord and mains plug must always be easily accessible for safe disconnection of the electrical appliance from the power supply.
- Do not pull off the power cord by pulling the cable. Disconnect the power cord by pulling the plug behind the power cord plug.
- If you use an extension cord, make sure that the total rated power of all devices connected to the extension cord does not exceed the max. current load on the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power socket, and not to another extension cord or power supply. The extension power cord or power supply block must be designed for grounded electrical plugs and connected to a properly grounded electrical socket.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged drawers!

- To avoid electrical shock, plug the power cables into properly grounded electrical sockets. If the device is equipped with a 3-pole plug, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.
- Do not bend, crush or otherwise expose the power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.
- When the power cord is damaged, disconnect the appliance from the mains and do not use it again.
- If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similarly qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical appliance as well as the power cord and power socket. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.
- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock.
If the power cord is wet or the water has penetrated the water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power circuit before attempting unplug the power. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

1.4 Safety of persons

- This appliance is intended for use and operation by persons without electrotechnical qualification - lay people, according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children under the age of 8 and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge when supervised or instructed to use the appliance safely and understand the dangers involved.
- Children may not play with the appliance.
- Cleaning and maintenance for users may not be performed by children unattended.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance! Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus.
- Inattention during operation may result in serious injury.

1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
- If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
- Electrical appliances that are cleaned after use and are not intended to be completely or partly immersed in water or other liquid, protect against the effects of dripping and / or splashing water and before immersion.
- Electric household appliances, like all other technical devices, are subject to the surrounding environment and natural wear. Since the legal framework of regular maintenance is not laid down for lay-in electrical household appliances, the manufacturer recommends that the user have the appliance checked and cleaned at least once a year by a specialist workshop.
- By doing so, it is possible to achieve safety, operational reliability and increased service life.
- Do not disassemble the electric appliance! The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the mains supply during user maintenance. In the event of a fault, please have the repair serviced by an authorized service center.
- Before calling a service:
 1. Verify that you are unable to remedy the malfunction yourself according to the procedure described in the chapter „Remedy of operating faults“.
 2. Turn the appliance off and on to make sure the fault reappears.
 3. If the malfunction of the appliance still persists after these operations, call the nearest specialist service center.
- Never repair the electric appliance yourself!
- Unauthorized, unqualified and improper use of an electric appliance may result in electric shock or other serious injury.
- Only carry out the warranty or post-warranty repair of an electrical appliance to an authorized qualified person ^(*).

^(*) Competent qualified expert: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

2. Special safety instructions.

Read carefully!

- The electrical equipment is designed and manufactured in such a way as to enable safe operation and use by persons without professional qualifications. Despite all the precautions that have been taken by the manufacturer for safe use, operation and use carry some residual risks and associated hazards.
- The following symbols and their meanings have been used on the device and in the accompanying documentation to warn of potential hazards:



This symbol warns users that the device is working with hazardous electrical voltage. Do not remove the protective covers on the device. Failure to follow the safety instructions for use and operation of the device may result in:

Risk of electric shock! Risk of serious injury or death!



This symbol warns users that there is a risk that if they do not follow the safety instructions when using or operating the equipment:

Risk of serious injury or death!

Risk of equipment damage or other property damage!



This symbol warns users that they do not follow the safety instructions when using and operating the device:

Risk of cutting or puncture fingers!

Transportation/Transfer

- For transport and use eg. Take care when moving the trolley to prevent the device from tipping over. Do not transport the equipment until after thorough inspection of the area and the route, which must be free of obstacles. Never carry the device while it is in operation. Do not carry the device while it is connected to a power outlet

Warning!

- Some surfaces may become hot during operation. Do not touch heated surfaces! Never carry the appliance until it has cooled down sufficiently to ambient temperature.
- Carry the device firmly with both hands at the bottom of the base or solid parts of the body.
- Make sure your hands and equipment are not damp or slippery when carrying.
- In order to maintain safety (with regard to the dimensions and weight of the device), only persons who are fit and physically fit can carry the device. There is a risk of serious injury or danger to life!
- There is a risk of damage to the equipment!

Unpack/Packaging

- Unpack the equipment and accessories before putting them into service and remove any parts of the packaging materials and labels. Dispose of packaging materials in a safe place, especially out of the reach of children and incapacitated persons, or dispose of them safely. There is a risk of serious injury!
- Risk of suffocation!

Inspection/Commissioning

- This is food preparation equipment. Therefore, before putting it into operation, thoroughly clean all parts of the unit according to the instructions in the „Commissioning“ section. „Cleaning and maintenance“.
- Device (its drive unit with electrical parts and controls) and power cord with plug never do not clean (under running water), which could cause liquid to flow into the device.
- Clean these parts only with a damp cloth and wipe dry or allow to dry.
- Clean the machine only when it is turned off and unplugged.
- We recommend that you perform both initial and follow-up periodic inspections of the equipment.
- Never use the appliance if it is incomplete, damaged, or any part of it has been damaged during transport or use.
Do not use non-original and incomplete equipment and accessories.
There is a risk of serious injury!
There is a risk of electric shock!

Location/Installation

- Only place the appliance on flat, firm and stable mats - kitchen worktops and furniture parts suitable for kitchen appliances.
- Always make sure that the place you want to place the equipment has sufficient space, mechanical strength and appropriate lighting.

Warning!

- Do not expose the device to:
 - direct sunlight, sources and equipment producing heat,
 - vibration and mechanical stress
 - excessive dust,
 - water and excess moisture,
 - insect,
 - an aggressive outdoor environment.
- Do not use or place the device:
 - on unstable tables or parts of furniture
 - uneven and dirty surface
 - on the tight edge of tables or furniture parts
 - near containers with water or other liquids.
- Do not cover the device partially. Do not place any objects on the device. Do not insert or allow foreign bodies to enter the enclosure openings.
- Do not cover the air vents openings. Air ventilation ensures reliable and safe operation of the device.
There is a risk of electric shock!
There is a risk of fire!

Warning!

- Place the machine in a place where children cannot reach it freely.
- Keep children away from the machine. The device may fall over children and cause serious injury.
- Mechanical damage (breakage of parts and covers) of the machine can cause serious injury.

There is a risk of serious injury!

There is a risk of damage to the equipment or other material damage!

- Do not place or use the equipment near containers containing water. If the device falls into the water, do not remove it! First, unplug the power cord from the wall outlet and then remove it from the water. In such cases, take the equipment to a specialist garage to check that it is safe and functioning properly.

There is a risk of electric shock!

There is a risk of electric short circuit!

Operation/Supervision

Caution!

- This equipment must only be used with original parts and accessories.
- Before using the equipment, always make sure that the device is properly assembled and none of its parts are damaged. Do not use improperly assembled and damaged equipment.
- Always use the appliance with the lid/container cover properly attached.
- Fill the container (priming with the uncovered container) only when the appliance is switched off. If you refill food into the container while operating the appliance, do so exclusively through the filler opening (inner cap) in the lid of the container.
- Always switch off and unplug the power cord from the wall outlet before replacing accessories or accessible parts of the machine, before installing and removing and before cleaning and maintenance.

There is a risk of serious injury!

- Always keep the device under supervision during use and operation!
- This equipment is not intended to be operated by a programmer, an external timer or remote control, as there is a risk of fire if the equipment is covered or improperly located.
- If you leave the unit unattended, always unplug it from the wall outlet.
- Before each connection of the equipment to the mains, make sure that the control knob (main switch) is in the „0“ (off) position.
- Do not turn the device on or off by plugging in or unplugging the power cord from the wall outlet.
- Always connect the machine to a power outlet in normal use, and then turn on the main power switch.
- After use, turn off the main power switch and then unplug the power cord.
- Do not use the machine if the main power switch does not work.
- The unit is at dangerous voltage when AC power is connected.

There is a risk of serious injury!

- The machine includes rotating sharp-edged parts - rotating blades.

Warning!

- Do not slide your fingers or insert other objects into the work area - the inside of the container and the rotating parts - while the machine is operating.
- If you need to work in the work area (clean the rotating parts from the caught food) - but only when the machine is turned off, unplugged and the rotating parts have come to a complete stop, use only the specified device accessories or a suitable object, eg. plastic knife, plastic cup/spatula. Do not use metal objects.

Warning!

- After turning off the machine, the drive of the rotating parts is still running for some time. Always wait until the rotating parts have come to a complete stop before handling or handling the equipment.

There is a risk of serious injury!

There is a risk of cutting your fingers!

- Be careful when using and operating the equipment to avoid contact with rotating parts by hair, loose decorative chains or loose clothing.
There is a risk of serious injury!
- Do not bundle the power cord. The power cord must remain accessible for safe disconnection from the mains.

- Do not let the power cord hang freely and allow it to be freely accessible and reachable by children.
- Never leave the appliance open and do not store it with a free power cord. Children could pull the device behind the power cord.

- Do not store the machine with the cord wrapped around its body. Put the power cord in the way it was folded in its original packaging from the manufacturer.
There is a risk of serious injury!

- Never overload the equipment beyond the limits specified in the technical data!
- Do not turn on the appliance unless the container is filled with sufficient liquid/ food.

- Do not exceed the maximum content/volume of food that is indicated on the containers or recommended in the food processing information in this manual.
- Allow food to cool before processing cooked foods. Do not process food above 60 °C.

- Before mixing deep-frozen foods, allow the food to thaw to a temperature at which food can be divided into smaller (recommended) parts. Do not process excessive pieces of deep-frozen food.

- Always divide the operation mode (continuous operation/operation time and pause time) into the recommended work intervals and follow the instructions.
- If you notice any abnormality (vibration, noise, smell, smoke, etc.) while using your device, turn off the power and unplug it immediately. Have the device checked by a specialist garage.

There is a risk of serious injury!

There is a risk of damage to the equipment or other material damage!

- Only install and remove the unit and its parts when the unit is turned off and unplugged from the wall outlet.

There is a risk of serious injury!

- Always clean the equipment and accessories immediately after use and remove any food residues.

- Store the machine in an upright position - especially its drive unit.

- If any safety part/component (mechanical, electrical/electronic) is part of the equipment, never disassemble this part / component! If the safety part/ component is damaged or not working, do not use the device!

- Do not use safety parts/components to switch on/off, turning off the device.
- The operating time of the device is 1 minutes. After 1 minutes, stop operation for at least 2 minutes. If you use a blender to mix sticky or hard foods, we recommend stopping the operation after 20 to 30 seconds and restarting the blender after one to two minutes.
- Never underestimate possible hazards and pay attention to increased caution !!!

Before first use

Do not connect the device to the mains during preparations.

Unpack the device and remove all packaging material from it. To remove any dirt from the device that may have formed during the packaging process, clean the interior, blades and cover with a dry, lint-free cloth. When cleaning the inside, be careful not to injure yourself on sharp knives. (See the Cleaning and Maintenance section of this manual.)

Rinse the accessories in lukewarm water. Do not submerge the body of the device in water! Clean the surface with a cloth moistened with water.

Dry all parts thoroughly.

Never immerse the motor base in water or any other liquid!

For home use only!


Description of parts



A



B

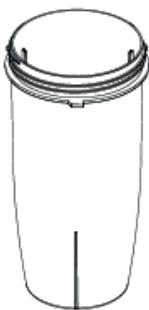


C



D



E

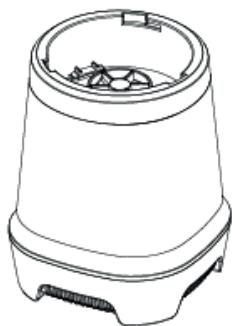

F



G



H

- A.** Sealing cover (2 pcs)
- B.** Lockable travel cover (1 pcs)
- C.** Large mixer jar 900 ml (1 pcs)
- D.** Medium blender jar 500 ml (1 pcs)
- E.** Small mixer jar 300 ml (1 pcs)
- F.** Base with motor (1 pcs)
- G.** Mixer blades (mixing) (1 pcs)
- H.** Flat grinder knife (1 pcs) (grinding - coffee, nuts, etc.)

Assembling the accessories and putting them on the motor unit

Follow the steps below to assemble the food preparation equipment.

1. Place the base on a dry, flat and firm surface. Do not connect the power cord to the power outlet before the device is fully assembled!
2. Choose the desired container (small, medium or large) and put the food you will mix (grind) into the container. Insert only 1 cup (measurement) of food at a time (meat, vegetables, nuts, etc.). Before processing, cut larger pieces of food into approx. 2.5 cm cubes. If necessary, add a little water.
Do not process more than 1 cup (about half of the used container) of food at the same time!

Selected container	Suitable for	Max. filling capacity
large container with mixing knives	mixing smoothies, juices, baby food or any creamy food	900 ml
medium container with mixing knives	mixing smoothies, juices, baby food or any creamy food	500 ml
a small container with a grinding knife	grinding coffee, spices, grating hard cheese, chocolate, nut grinding (ideal for grains, nuts and seeds)	300 ml

- 3 Firmly place the desired knives (mixing or grinding) on the assembled part of the container by turning it. Place the knives inside the container with metal knives and be careful not to injure yourself.

If you are using a large **C** or medium **D** mixing bowl, use mixing blades **G** for mixing (see pic. 1).

If you are using a small **E** mixing bowl, use the flat knives **H** for grinding/grating.


Warning!

Before using the device, always make sure that the blades are tightly screwed in so that the container is sealed.

The knives are very sharp. Always handle them with care. Do not touch the knives with your hands, as injury may occur!.



pic. 1

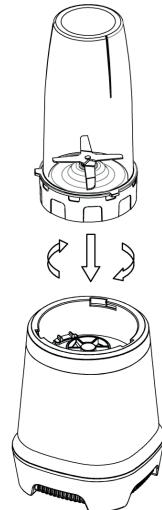


pic. 2


4. Plug the power cord into an electrical outlet.
5. Place the assembled mixing/grinding bowl assembly with blades on the motor base by placing the blades on top of the base so that the tabs on the bowl fit into the holes in the motor base and press it against the base. The blender starts working when you turn the assembled container on the base in the direction of the arrow to the right (see pic 2).

Note:

The blender will not operate if the 3 tabs on the blade assembly are not properly seated in the 3 holes on the motor base. To stop the blender, turn the base assembly counterclockwise to the left (in the direction of the arrow) to stop mixing (see Fig. 3). Before lifting the mixing assembly from the motor base, turn off the device by turning the assembly. Then lift the assembly from the base (see pic. 4)

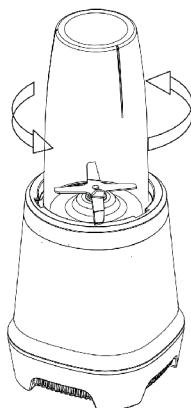

pic. 3

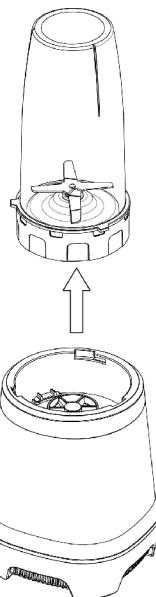

pic. 4

6. After finishing work, disconnect the power cord from the electrical outlet.
7. Turn the mixing bowl with the knives up, grasp the bowl firmly and unscrew the attachment with the knives from the bowl with the other hand.

Tips:

- To preserve the freshness of the contents in the container, screw the supplied sealing cap **A** onto the food container.
- If you want to take the prepared drink on the road, screw on the container travel cover **B** (with a closable stopper) supplied with the drink, through which you can drink the drink while driving without the risk of spilling it. After drinking, simply press the stopper to close.

Do not fill the container with hot water when using the travel cover.

IMPORTANT NOTICE!

- Do not fill containers with hot liquids or carbonated beverages. Releasing the pressurized container may cause it to break and cause injury.
- Do not process hot foods or boiling liquids. Allow them to cool to 60 ° C before mixing.
- Do not operate the machine with an empty container.
- Do not use the device continuously for more than 2 minutes. The recommended duration of use is 2 minutes and then a break of approximately 3 minutes must follow.
- Add some water to the mixed food if necessary.
- Cut the fruit and vegetable into small pieces before mixing them.
Before placing in the container, you must cut the hard fruit and vegetables into pieces of about 1 cm. Even softer food types should be pre-cut into smaller pieces before mixing. This will increase the mixing efficiency. If you are preparing a multi-ingredient meal requiring mixing of the ingredients at different rates, mix the individual ingredients separately.
- Do not overfill containers to prevent damage.
- For optimum results, it is recommended not to fill more than half the capacity of the container and pieces of solid food should not exceed 15 mm.
- To cut fruit/vegetables, place half a cup of fruit/vegetables in a container. Mix continuously until you reach the desired consistency.
- To mix fruit/vegetables, add half a cup of water per half cup of fruit/vegetables to the hard fruit/vegetables. Add a quarter of a cup of water per half cup of fruit/vegetables to the soft fruit/vegetable.
- Avoid premixing. In pulse mode, mix for a few seconds, not minutes.
Premixing produces a slurry.
- Do not overfill the mixing bowl.
- Fill the container first with liquid until it is solid (unless otherwise prescribed by the recipe).
- When mixing beverages, you can put all ingredients in the container at the same time.
- Mix ice only when there is adequate liquid in the container.
- If mixing stops during operation, turn off the appliance, remove the container, remove the knife handle and allow the base to cool.
- Use a rubber spatula to wipe away food from the container and from the blades.

Preparation times and speed settings

Ingredient	Speed	Mixing time
mixed drinks / smoothie	1	50 s
soups	1	30 s
ice cubes	1	50 s
spreads, marinades, dressings	1	30 s
baby food, sauces	1	50 s
poppy seeds, herbs, dried chilli	1	40 s
coffee beans, grain black peppers, nuts	1	60 s

The processing time of the ingredients depends on how thoroughly you want to mix the added food.

Problem solving

A problem	The cause	Solution
Blender won't start	The power cord is not connected correctly.	Plug in the power cord
	The motor unit and mixing/grinding container assembly is not inserted correctly.	Make sure that the protrusions on the containers fit correctly into the holes on the motor unit.
The knife container assembly is leaking	The seal on the mixer blades is not in place.	Correct the gasket position and properly screw the blades onto the container in a clockwise direction.
The ingredients are mixed/ground unevenly	You are processing too much food.	Process food in smaller portions.
The ingredients are mixed/ground too finely	You are mixing/grinding food for too long	Mix the food briefly and repeatedly.

Cleaning and maintenance

After mixing, unplug the device from the mains.

Wash containers, covers and knives in warm water with detergent, wipe them and dry them carefully. Do not leave parts wet.

Do not use solvents or harsh detergents to clean any elements.

Wash the parts immediately after use to prevent food residues from drying on them.

Wash the knives with a dish brush. Do not put your hands under water as they are very sharp.

Do not wash the knives in the dishwasher. There is a seal on the blade assembly.

Do not attempt to disassemble it. This seal can be damaged in the dishwasher due to heat.

Never immerse the motor base in water or any other liquid! Wipe the base with the motor and the power cord with a dry cloth. The motor is lubricated with durable vaseline. Does not require lubrication.

Never store containers with caps on. The cover prevents the venting of odors from the containers and thorough drying.

Warning!

The knives are very sharp. Handle them with care.

Store them out of the reach of children.

Technical specifications

Power supply:	220 - 240 V~ 50 - 60 Hz
Protection class:	II (protection against electric shock is ensured by double insulation)
Power consumption:	1 000 W
Usable container capacity:	900 ml/500 ml/300 ml
Dimensions (H x W):	38 x 15.2 cm (with large container), 34 x 15.2 cm (with medium container), 32.5 x 15.2 cm (with small container),
Volume:	0.3 l (small container), 0.5 l (medium container) 0.9 l (large container)
Weight:	1.9 kg (motor base with large container)
Speed:	20 000 rpm
Time of continuous operation (KB):	max. 1 min.
Noise level:	85 dB (A)

The declared value of the noise emission of this appliance is 85 dB (A), which represents level A of the acoustic power with respect to the reference acoustic power of 1 pW.

The right to make changes reserved!

Producer:

ORAVA retail 1, a.s.
Seberíňho 2
821 03 Bratislava
Slovenská republika

Importer:

ORAVA retail 1, a.s.	ORAVA distribution CZ, s.r.o.
Seberíňho 2	Ostravská 494
821 03 Bratislava	739 25 Sviadnov
Slovenská republika	Ceská republika

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING

Dispose of used packaging material at a municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more details collection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

For business entities in the countries of the European Union

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product complies with all the essential requirements of the EU directives that apply to it.