



CR-900

Instruction manual/Warranty

EN



Please read this manual carefully before using the device and retain it for future reference.

Callus remover

Safety instructions for use

- To warn of possible dangers, the following symbols and their meanings have been used on the device and in the accompanying documentation:



This symbol warns users that failure to observe the safety instructions when using and operating the device may result in:
Danger of serious injury or death! Danger of damage to the device or other property damage!

Unpacking/Packaging

- Before putting the device and accessories into operation, unpack and remove all remaining packaging materials, labels and tags from all parts.
- Store the packaging materials in a safe place or keep them out of the reach of children and incapacitated persons.
Risk of serious injury! Risk of suffocation!

Operation/Use

Warning!

- This device may only be used with original and undamaged parts and accessories.
- Suitability and proper use are determined in the “Use” section.

Warning!

- The device is intended for personal use and personal hygiene.
- In view of this fact, it is not recommended that the device be used by different people.

There is a risk of transmitting dermatological diseases!


Warning!

- If you experience any adverse effects of the device on your skin during use, stop using the device immediately and contact your doctor.

Warning!

- The device must not be used by children.
Keep it out of the reach of children.
- The device is not intended for use by persons with reduced physical, sensory or mental capabilities.

Parts description

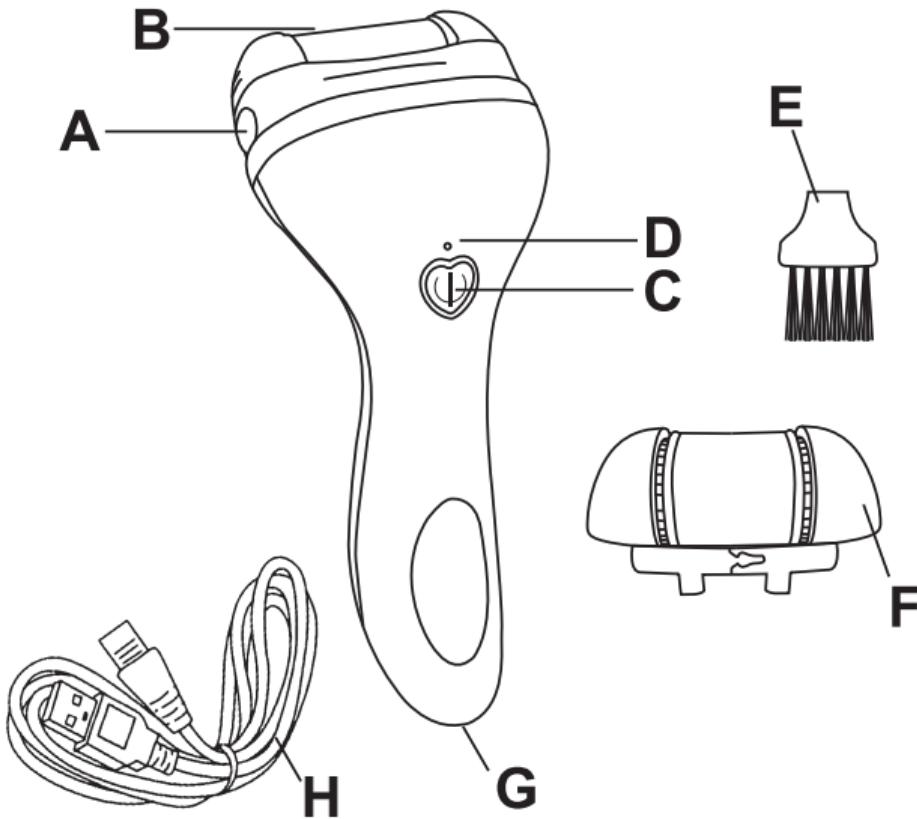

- A** Roller top release button
- B** Sanding roller (coarse)
- C** ON/OFF switch with 2 speed settings
- D** Indicator light
- E** Cleaning brush
- F** Sanding roller (fine)
- G** USB-C charging connector
- H** USB-C/USB-A charging cable

Power

The device is powered by a built-in 800 mAh, 3.7 V Li-ion battery. The battery is charged from a suitable AC adapter with a DC output voltage of 5 V, 500 - 1,000 mA using the supplied charging cable with a USB-C / USB-A connector.

Charging

1 Charge the device before first use.

Connect the USB-C end of the supplied cable to the USB-C power port on this device (**G**) and the other USB-A end to the USB-A port on the optional AC adapter (5V DC output, 500-1000mA) or to the USB-A port on a powered-on PC. Plug the AC adapter into a power socket.

2 The red charging LED will light up during charging, and when it turns green, the battery is fully charged.

Disconnect the device from the charging source and you can use it. Only use the supplied USB-C/USB-A cable for charging.

Using the device

1 Wash and clean your skin and let it dry completely.

Warning!

Do not use the device on injured or bleeding skin.

2 Make sure the roller is inserted in the device.

See the "Changing the roller" section for instructions on how to remove and replace the roller.

3 Remove the protective cover from the device so that it is ready for use.

4 Turn on the device by pressing and holding the **C** ON/OFF button. The device will turn on and the green indicator light will be on.

5 Set the desired speed by pressing the **C** button again, the speed will increase and the indicator light will be red.

6 Gently move the device (back and forth or side to side) over the areas of calloused skin for 2 to 3 seconds.

Do not press too hard on the skin. Just move the device lightly over the desired area. If you press the device too hard against your skin, it will stop.

- 7 Stop the device by pressing and holding the **C** button and check if you have achieved the desired softness. If not, turn the device back on and move it over the treated area for about 2 to 3 seconds and check the result. Repeat the process until you have achieved the desired level of smoothness

Warning

Stop using the device before the skin becomes sore or red. Do not use it for longer than 2 to 3 seconds in one area at a time.

- 8 Switch off the device after use.
- 9 Rinse the skin or use a wet towel to wipe off the removed dead skin.
- 10 Clean the device after use according to the section on cleaning the device.

Replacing the roller

For better efficiency, replace the roller when necessary.

The roller can last for several applications without cleaning, depending on the frequency of use and the size of the area being treated.

Replace the roller as needed.

Switch off the device before replacing the roller.

- 1 Hold the device with one hand and press the roller release button **A** (on the side of the device) with the other hand. After releasing the roller with button **A**, remove the sanding roller by pulling it upwards.
- 2 Insert the new roller into the device. You will hear a click when it is correctly inserted.

Warning

Do not use the device without the roller inserted.

Cleaning and Maintenance

This is a body care device, so always wash your skin before use. Turn off the device before cleaning.

Cleaning and Storage

- Store the device in a safe, cool, and dry place.
- Clean the device with a soft cloth dampened with water. In case of heavy soiling, you can dampen the cloth with a mild detergent solution.

- Do not use aggressive, harsh cleaning agents or solvents. There is a risk of damaging the surface.
- Do not clean the device chemically. There is a risk of damaging the surface.
- Clean the rollers with the brush provided or a similar one.
- The device must not fall on the ground when cleaning.
- Make sure that no water gets into the device.
If this happens, use the device only after it has dried completely.
- Never immerse the device in water or other liquids when cleaning.

Warnings

- Never attempt to repair the device.
- Do not use the device in the following cases:
 - on swollen or inflamed parts of the body, in case of inflammation, skin rashes or wounds
 - without the consent of a doctor on parts of the body that have been numbed or are sensitive to heat
 - if you feel pain or discomfort, stop using the device immediately
 - consult a doctor for use during pregnancy or if you are diabetic.

Technical data

Power supply (charging):

optional AC adapter with output voltage of 5 V, 500 - 1,000 mA (not supplied)

Built-in Li-ion battery, 800 mAh, 3.7 V

Dimensions (w x h x d):

6.4 x 15.7 x 4.5 cm

Weight:

130 g

Noise:

60 dB

The declared noise emission value of this device is 60 dB (A), which represents the A-weighted acoustic power level with respect to the reference acoustic power of 1 pW.

Accessories supplied:

operating instructions (1)
Abrasive roller (2)
Cleaning brush (1)
USB charging cable (1)

Subject to change without notice!

ORAVA retail 1, a.s.
Seberíniho 2, 821 03 Bratislava
Slovak Republic
+421 43 5306 002, office@orava.eu
www.orava.eu

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING

Dispose of used packaging material at a municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

 This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more details collection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

For business entities in the countries of the European Union

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product complies with all the essential requirements of the EU directives that apply to it.

Warranty conditions

A warranty period of 24 months is provided for this device. When exercising the right to a warranty service, return the warranty card and the cash receipt of the equipment to the service center together with the product. The date of the warranty card and proof of purchase must be the same. If not, the warranty will not be granted.

- The right to free repair of the product during the warranty period expires if:
 - the user does not submit a valid warranty and proof of purchase of the product;
 - malfunctions due to incorrect connection, improper use and maintenance (dusty environment), mechanical damage, engine failure and residential installation;
 - do unauthorized interference or alteration in the product by an unauthorized person and/or a malfunction due to the use of non-original spare parts;
 - the appliance is not used according to the enclosed operating instructions.

Other terms and conditions related to the warranty

The shop where the device is sold to the consumer is obliged to show the device to the buyer and inform the buyer:

- the way it is used and handled;
- how warranty repairs are available;
- with the nearest warranty service as well as the way the warranty service is dispatched to the supplier's service center;
- properly fill in the warranty card. Incorrect and incomplete warranty card is void and the consumer loses the right to warranty;
- the guarantee / repair, exchange or withdrawal of the contract / are covered by the relevant provisions of the Civil Code and the Complaint Rules.