

Induction cooker

orava

VP-22i

Instruction manual

EN



CE

VP-22i

Intended use of the device

The device is intended solely for the cooking of food - by cooking/heating, in containers for cooking/heating by eddy currents, to the extent determined by the technical and operating parameters and functions, safety and user instructions and external influences of the operating environment.

ORAVA electrical appliances are manufactured according to state-of-the-art knowledge and recognized safety regulations. Nevertheless, improper or improper use or improper use may result in injury or endangerment to the life of the user or a third party, or to a third party. damage to equipment and other property.

1. GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- This document contains important safety instructions and warnings for safe, correct and economical operation of the electrical equipment. Its compliance helps the user avoid risks, increase reliability and product life.
- In this document, the generic term product is used in text parts such as: electrical equipment - any device used for the production, conversion, transmission, distribution or use of electricity.
- From the point of view of the purpose of using electricity, the concept of electrical equipment in the strict sense of the word will include the following categories:
 - household electric appliances,
 - information and communication equipment,
 - consumer electronics,
 - lighting equipment,
 - electrical and electronic tools,
 - toys and equipment for sporting and recreational

1.1 General safety instructions

- Before commissioning the unit, we recommend that you carefully read the operating instructions and operate the equipment in accordance with the instructions!
- The safety instructions and warnings in this manual do not cover all the possible conditions and situations that may arise when using the device. The user must understand that a factor that can not be incorporated into any of the products is responsibility and caution. These factors must therefore be ensured by users / users who use and operate this device.
- Failure to follow the safety instructions and warnings is forbidden by the manufacturer for any damage to health or property!

- Make sure that the appliance is complete and shows no signs of damage before using the appliance for the first time. If the product is defective or if it has any visible damage, do not use the product.
- Keep the operating instructions as close to the device as possible throughout its service life. Always keep the operating instructions together with the appliance for future use and use by new users.
- Use the appliance only for the purpose for which it is intended and in the manner specified by the manufacturer.
- The appliance is intended for home and similar indoor use, with no special focus.
- It is not a professional device for commercial use.
- Do not change the technical parameters and features of the device by unauthorized modification or modification of any part of the device.
- The manufacturer is not responsible for damages caused during transportation, misuse, damage or destruction of the equipment due to adverse weather conditions.

1.2 Safety of the operating environment

- Do not use the device in an industrial environment or outside environment.
- Always keep the operating environment clean and well lit.
- Do not place the device on an unstable surface. Overriding or dropping the device may result in personal injury or damage to the device.
- Do not expose the unit to direct sunlight or excessive heat sources.
- Do not use an electric appliance in areas with flammable liquids, gases or dust. The appliance may be the source of scaling, which can result in the ignition of dust or vapors.

Features of the operating environment

1. Ambient temperature: $+5 \div +40 \text{ }^{\circ}\text{C}$
2. Humidity: $5 \div 85\%$
3. Altitude: $\leq 2\,000 \text{ m}$
4. Occurrence of water: intermittent condensation of water or occurrence of water vapor
5. Occurrence of foreign bodies: amount and type of dust are not significant

Protection class: IP20

- Other characteristics of the operating environment (mechanical stress - shocks and vibrations, occurrence of plant, animals, weather effects) are negligible in terms of effect on the correct and safe use of electrical equipment.

1.3 Electrical safety

- Before connecting the appliance to the power supply for the first time, make sure that the voltage on the appliance label corresponds to that of the household electrical outlet.
- The electrical appliance is designed for mains supply 230 V ~. The electrical safety of the appliance is guaranteed only if it is properly connected to the electricity grid.
- Only use a power cord with a plug (mains lead) that came with the device and compatible with a wall outlet. Using another cable may result in fire or electric shock.
- Always connect an electrical appliance to an easily accessible power outlet. In the event of an operating fault, the appliance must be switched off as soon as possible and disconnected from mains supply.
- Do not pull the power cord / power cord by pulling on the cord / cord. Disconnect the power cord by pulling the plug behind the power cord / power cord plug.
- If you use an extension cord, check that the total rated (ampere) power of all devices connected to the extension cord does not exceed the maximum current rating of the extension cable.
- If you need to use an extension cord or power supply block, make sure that the extension cord or power pack is plugged into a power outlet, and not to another extension cord or power supply. Extension power cord or power supply block must be designed for grounded plugs and plugged into a grounded outlet.
- The power plug of the appliance must be compatible with the mains socket. Never use any adapters or modify the socket in any other way. Do not use inappropriate or damaged sockets.
- To avoid electrical shock, plug the power cables into properly grounded electrical outlets. If the device is equipped with a 3-pin power supply cord, do not use adapters that do not have a grounding element or remove the grounding element from the plug or adapter.
- Do not bend, crush or otherwise expose the power cord / power cord of the appliance to mechanical stress or external heat sources. Damage to the power cord may result in electric shock.
- If the power cord is damaged, disconnect the appliance from the mains and do not use it again. If the power cord / power cord is damaged, it must be replaced by the manufacturer, its service department, or a qualified person to avoid the risk of electric shock.
- Regularly check and maintain the electrical appliance as well as the power cable. Disconnect the power plug regularly and clean it if necessary. Pollution by dust or other substances may cause disruption of the insulating state and consequently fire.

- Do not expose the appliance to water or moisture. The ingress of water into the appliance increases the risk of electric shock. If the power cord is wet or the appliance gets water, disconnect it immediately from the mains. If the appliance is plugged into a mains socket and if possible, turn off the power supply before attempting to disconnect the power supply. If you are pulling wet wires from a live power source, be very careful.
- If the electrical equipment is installed (connecting) the protective covers are dismantled, the electrical parts must not be accessible to the user when the installation is finished.

1.4 Safety of persons

- This appliance is intended for use by persons without an electrotechnical qualification (layperson) according to the instructions specified by the manufacturer.
- Device operation includes activities such as switching on and off, user manipulation and setting of operating parameters, visual or auditory inspection of the equipment, and user cleaning and maintenance.
- This appliance can be used by children 8 years of age and older and persons with reduced physical, sensory or mental abilities or lack of experience and knowledge only when under the supervision or guidance of the responsible person have been instructed to use the appliance in a safe way and understand the potential hazards .
- Cleaning and user maintenance can be carried out by children 8 years of age and older only under the supervision of the responsible person.
- Children may not play with the appliance.
- Always keep the appliance out of reach of children during use and operation. Be sure to download the appliance even for a freely accessible power cord.
- Always be careful when operating the electric appliance. Do not use an electric appliance if you are overly tired, under the influence of medication or narcotic drugs that reduce attention and focus. Inattention during operation may result in serious injury.

1.5 Cleaning, maintenance and repairs

- Observe the normal user cleaning and maintenance of the appliance in the recommended way. Do not use solvents or harsh cleaners for cleaning. Pollution and visible stains from finger contact, respectively. The hands can be cleaned using detergent detergents specially designed to clean household appliances.
- If you do not use the appliance, clean it or disconnect the appliance from the power supply when the appliance is faulty.
- Do not disassemble the appliance. The appliance works with a dangerous voltage. For this reason, always switch off the appliance and disconnect it from the power supply. In the event of a fault, please have the repair serviced by an authorized service center.
- Only guarantee qualified and qualified personnel to repair and repair the electrical appliance.

(*) Appropriate qualified professional: the sales department of the manufacturer or importer or the person qualified and authorized to carry out this type of activity with the ability to avoid all risks.

2. Special Safety Instructions. Read carefully!

- Electrical equipment is designed and manufactured in such a way as to allow for safe operation and use by persons without a professional qualification. Despite all the measures that have been to the manufacturer for safe use, handling and use carries with it certain residual risks and the associated potential hazards.
- To warn of possible hazards, the following symbols and their meanings have been used on the device and in the accompanying documentation:



This symbol alerts users that the device is operating a dangerous electrical voltage. Do not remove protective covers on the device. Failure to observe the safety instructions during use and operation of the device may result in:
Danger of electric shock!
Danger of serious injury or life threatening!



This symbol alerts users to the following: Risk of serious injury or life threatening when not following the safety instructions when using and operating the unit!
Danger of damage to equipment or other damage to property!



This symbol alerts users that if not following safety instructions while using and operating the device:
Danger of burning from hot surfaces!



This symbol means that the product is made with a double insulation between hazardous live parts (parts with dangerous voltage from the mains) and parts that are accessible in normal use.

Transport/Carriage

- When transporting and using, for example the transport cart, be careful when moving, to avoid overturning the device.
- Transport / carry the equipment only after thorough inspection of the space and the routes, which must be unobstructed.
- Never carry the machine while it is in operation. Do not carry the device while it is plugged into a wall outlet.

Warning!

- Some surfaces may be hot during operation. Do not touch hot surfaces!
- Never transfer the appliance until it has cooled down to ambient temperature.
- Transfer the device firmly by both hands to the bottom edge of the base or fixed parts of the body.
- Make sure that your hands and equipment are not damp or slippery when carrying.
There is a risk of serious injury or life threatening! There is a risk of damage to the device!

Unpacking/Packaging

- Unpack and remove all parts and accessories of packaging materials, labels, and labels before putting the device into operation. Keep all packaging materials in a safe place or keep them out of the reach of children and inappropriate persons. There is a risk of serious injury! There is a risk of choking!

Check/Commissioning

- Clean the machine before commissioning as described in the „Commissioning „ or „Cleaning“ section.
- Never clean the appliance (body with electrical parts and control panel) and the power cord with the plug - under running water, which could cause the liquid to flow into the device.
- Clean these parts with a slightly moistened cloth and wipe dry or let it dry.
- Only clean the appliance if it is switched off and disconnected from the mains.
- We recommend performing both initial and subsequent regular machine inspections. Do not attempt to interfere with the construction or adjustment of the component parts in any way.
- Never use the appliance if it is incomplete, damaged, or any part of it has been damaged during use. Have the appliance repaired by a specialist workshop.
There is a risk of serious injury!

Location/Installation

- Only place the appliance on straight, strong and stable pads - kitchen work desks and furniture parts, suitable for the location of kitchen utensils.
- Always make sure that the location you want to place the device has sufficient space, stability, mechanical strength and appropriate lighting.
- If you do not use the appliance, do not place objects or liquid containers on the cooker.

Warning!

- Do not install or use the machine on metal (ferromagnetic) washers.
- Do not place the appliance:
 - unstable tables or inappropriate parts of furniture,
 - on an uneven and dirty surface,
 - on the sealing edge of tables or parts of furniture,
 - in the vicinity of containers with water or other liquids.

Warning!

- Place the device in a place where children can not reach freely. Work desks and furniture for placing should not be less than 85 cm.
- Prevent children from handling the device. The device may overwrite and cause serious injury. Mechanical damage (breakage or breakage of parts and covers) of the device can cause serious injury.
- Do not place the appliance and do not use the proximity of containers containing water. If the appliance falls into the water, do not remove it! First, pull the power cord plug out of the mains socket and then select the appliance from the water. In such cases, take the device for inspection to a specialist service to check that it is safe and working properly.

There is a risk of electric shock! There is a risk of electrical short circuit!

- Do not expose the device to:
 - direct sunlight, sources and equipment producing heat,
 - vibration and mechanical stress,
 - excessive dust,
 - water and excess moisture,
 - insect,
 - aggressive effects of the external environment.

There is a risk of serious injury!

There is a risk of damage to equipment or other property damage!

- Do not cover the device in any way. Do not insert or allow the foreign bodies to enter the holes of the device covers. Do not cover the cover openings for air flow. Air ventilation ensures reliable and safe operation of the device.
- From a fire protection and safety point of view, the device can also be placed on a work table or similar surface if a safe distance from the flammable surfaces is maintained. materials:
 - at least 500 mm in the direction of the main heat sink, and
 - at least 100 mm in other directions.

There is a risk of electric shock! There is a danger of fire!

Operation/Supervision

Warning!

- The induction cooker (panel surface) is made of a technical material (eg glass-ceramic), which is susceptible to damage under certain circumstances.
- Be careful about this, and do not expose the device to excessive mechanical stress (mechanical shock and pressure of sharp objects) acting on the surface of the hob.

Warning!

- If the surface of the hob is cracked or otherwise mechanically damaged, turn off the device to avoid possible electric shock. Do not use the damaged device anymore.

CAUTION!

- Do not place any metallic (ferromagnetic) objects on the surface of the cooker, knives, forks, spoon or cover plates, etc., as they may become hot and cause burns.

CAUTION!

- Use only such hob guards that have been designed by the manufacturer of the cooking appliance or the manufacturer of the appliance as instructed to indicate that they are suitable for use or the hoods of the hobs built into the appliance.
- Using unsuitable protective covers may cause accidents.

CAUTION!

- For cooking / heating only dishes intended for heating / cooking by means of whirlpools - vessels with ferromagnetic bottom.
- Do not switch on or use the appliance with an empty kettle on the hob.

Warning!

- Do not heat any metal cans on the hotplate.
- Position the cooking container as accurately as possible into the central axis of the cooking zone of the cooking zone.
- Ensure that the cooker is in the cooking zone during the entire cooking time (during cooking). The evacuation of the cooking vessel from the cooking zone results in a reduction of the cooking power and thus the extension of the cooking time.
- Do not place other devices and products sensitive to the electromagnetic field in the vicinity of the device. They may affect their function or damage them.
- Always keep your device under control during use and operation!
- This device is not intended to be operated via a programmer, external time switch or remote control because there is a risk of fire if the device is covered or incorrectly positioned.
- Do not leave the appliance unattended during operation, especially if there are children, inappropriate persons or animals nearby.
- Do not use the appliance near easily flammable materials and objects, curtains, curtains, decorative fabrics.

Warning!

- Do not use the appliance for space heating, drying textiles, clothing, footwear or any other items!
There is a danger of fire!
- Do not immerse the appliance or any part of it in water or other liquid.
There is a risk of electric shock!
There is a risk of damage to equipment or other property damage!
- Make sure that the controller is set to „OFF“ in the „0“ position before each connection to the power supply.
- Do not switch the device on or off by plugging in or pulling out the plug of the power cord from the wall socket.
- Always connect the appliance to mains power supply for normal use, then switch on the main power switch - the power controller.
- When you have finished using the appliance, turn off the main power switch - the power controller, and then pull the plug of the power cord out of the mains socket.
- If the main power switch does not work - the power controller, do not use the device.
- The device is under dangerous voltage when the power supply is connected.
There is a risk of electric shock! There is a danger of fire!

CAUTION!

- The cooking zones become hot during use.
- Do not touch hot surfaces, especially when operating and immediately after use. The residual heat transferred from the heated bottom of the cooking vessel acts on the cooking zone of the panel.
- Be very careful when cooking. Cooking utensils and cooked / heated dishes are also very hot / hot. Use kitchen towels or cloths when handling the appliance and cooking utensils.
- Open closed containers at the time of cooking slowly and carefully. Sudden leakage of hot air or boiling fluid may occur when a sudden opening occurs.

Attention!

- After switching off the appliance, the hotplate surfaces remain warm for some time. Before any further handling of the storage and storage device, always wait for the hot surfaces to cool completely.
- Do not disconnect the appliance from the electrical outlet immediately after use. To ensure efficient cooling, it is necessary that the fan power supply is connected for at least a few minutes.
There is a risk of burning from the hot surface!
There is a risk of burning / burning from hot air / hot food!

CAUTION!

- Unpreserved cooking on the cooking bar with grease or oil can be dangerous and may result in a fire.
- Do not try to extinguish with water if there is a fire (from overheating fat or oil). Always switch off the device first and cover flames in the cooker, for example with blanket or a fire blanket.

Warning!

- Keep the cooking process constantly under surveillance. The short-term cooking process must be constantly monitored.
- The electrical socket and power cord must remain easily accessible for safe disconnection of the device from the power supply.
- Never leave the appliance unattended and freely accessible with a free-hanging power cord. Children, inappropriate persons or animals could download the device for the power cord.
- Do not store the appliance with a wrapped cord around your body. Unfold the network cord „in the way it was put in the original packaging by the manufacturer.
There is a risk of serious injury!
- Never overload the equipment beyond the limits specified by the technical specifications!
- Observe the operating mode of the machine in accordance with the operating and operating instructions.
- If you notice any unusual occurrences (sounds, smell, smoke, ...) while using the device, switch off the device immediately and disconnect it from the power supply. Have the appliance checked by a specialist workshop.
- Always thoroughly clean the machine after decommissioning from food and grease residues. Failure to properly maintain the device results in a reduction in its safety and its practical life.
- If any safety component / component (mechanical, electrical) is part of the device, never disable this part / component! If the safety component / component is damaged or not working, do not use the appliance!
- Children under 3 years of age must be prevented from accessing the appliance unless they are under the supervision.
- Children between 3 years and under 8 years of age may not connect the appliance to a power outlet, nor regulate or clean it or service users.

CAUTION!

- Some parts of this product may become very hot and may cause burns. Take special care when vulnerable persons or children are present.
- Never underestimate the potential hazards and take extreme caution!!!


Features

- 9 levels of power settings
- 9 levels of temperature setting
- large LED display
- function of locking the controls (Lock) - child lock
- setting the switch-off timer
- simple operation

Induction heating principle

The induction cooker operates on the principle of electromagnetic induction. The voltage converter in the cooker electrical circuit converts 50 Hz alternating current to a high-frequency direct current of 20 to 40 kHz. The rectified electric current passes through the induction coil. When a metal container is placed on a ceramic plate with an induction coil under it, a strong magnetic field is created. The magnetic field currents pass through the bottom of the metal container - thus generating numerous eddy magnetic currents inside the bottom of the pot. These eddy currents heat the bottom of the pot very quickly.

Drawing of the principle of induction heating

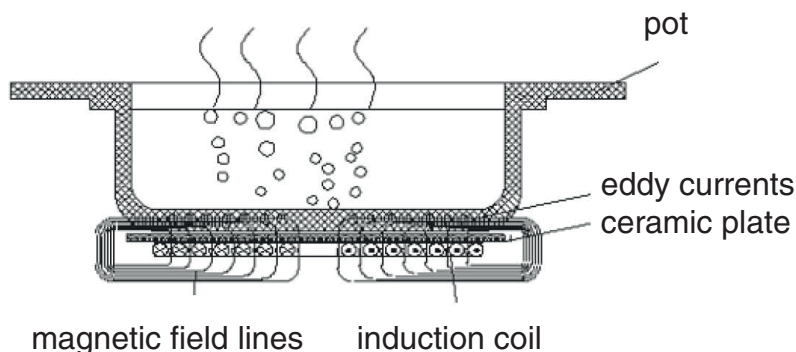

The main advantage of induction heating is the elimination of heat transfer losses, because the bottom of the metal container is heated directly. If you use electric cookers with hotplates or ceramic hob, the hotplate or hob will always be heated first and only then will this heat be transferred to the bottom of the pot. This transition is a source of high heat loss, especially if the bottom of the pot and the plate do not fit exactly together (there is an air gap or burnt food between the two surfaces). In contrast, induction heating heats the bottom of the pot much faster, so cooking takes place faster with significantly less electricity consumption.

Advantages of cooking on an induction cooker

- High-performance cooking with energy savings - thermal efficiency is more than 98%.
- Checking the operation of the appliance with a large-capacity microprocessor - simply cook, fry or heat any type of food.

- The cooker is equipped with an electronic control panel with a display.
- The cooker is equipped with safety control functions:
 - automatic control of the size of the bottom of the container,
 - protection against overheating,
 - overvoltage protection, undervoltage protection function.
- The ceramic plate is resistant to high temperatures.
- Due to the fact that the hob is heated only indirectly through the bottom of the pot, the overflowing contents do not stick and do not burn and the risk of burns to the user is almost eliminated. The ceramic hob is heated only by a hot pot.
- When you remove the pot from the hob, the appliance automatically switches to standby mode.
- The appliance recognizes whether a suitable pot is placed on the hob. If the pot does not have a ferromagnetic bottom, it will not heat up.

Location

- Leave a space of at least 10 cm around the device to ensure proper ventilation.
There must be completely free space on the side with the ventilation openings.
- Place the device near an easily accessible electrical outlet. Do not use extension cords or splitters. If problems are observed, disconnect the device from the mains immediately.

Suitable dishes

Before using the appliance, make sure that your dishes are suitable for use in the appliance.

Suitable dishes

Suitable are pots and pans with a magnetic bottom, steel pots with an iron bottom, cast iron, glazed pans, pans with a flat bottom and pots with a diameter of 12 to 22 cm with a magnetic bottom.

The maximum weight of the pot containing 6 kg.



Unsuitable dishes


Pots/pans with a diameter of less than 12 cm and larger than 22 cm are not suitable.

Also suitable are ceramic pots, heat-resistant glass, copper pots and pans, aluminum pots and pans, dishes with legs and round-bottomed containers.



Description of parts

Carefully unpack the cooker from the packaging material.
Remove any remaining packaging material on the device.

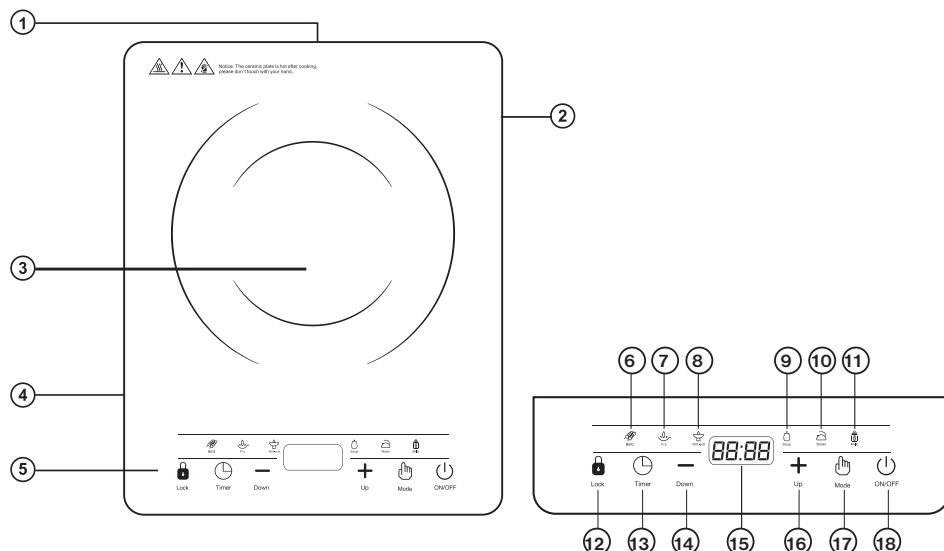

- 1 Vents**
- 2 Vents**
- 3 Hob**
- 4 Fan**
- 5 Control panel**
- 6 BBQ (grill) light**
- 7 FRY switch**
- 8 HOT POT switch**
- 9 SOUP switch (soup)**
- 10 WATER switch (water)**
- 11 MILK switch (milk)**
- 12 LOCK**
- 13 Timer switch**
- 14 Decreasing (-)**
- 15 LED**
- 16 Increasing (+)**
- 17 MODE**
- 18 ON/OFF switch**

cooking mode
fry mode
cooking mode
cooking mode
cooking mode
cooking mode
switch locks controls

decreasing power/time, etc.
information display
increasing power/time, etc.
switch switching cooking modes
turns the machine on and off

Using the device

1. Plug the power cord into an electrical outlet (for a minimum consumption of 15 A). After connecting to the mains, the cooker is activated, a beep sounds, the indicators light up, the display lights up briefly.
2. Place the food pot on the hob and center it.
3. **Switch on the cooker:** Press the ON/OFF switch.
A beep sounds, ON is displayed and the cooker is switched on and ready to select the cooking mode. If you do not perform a certain time (approx. 30 seconds) no operation for approx. 60 seconds, the fan switches on and then the cooker switches off automatically.
4. **Setting the power for automatic cooking using the cooking function buttons:**
Press the desired cooking function button to select the automatic cooking mode. The selected mode will be indicated by its indicator.

Function	Display	Explanation
BBQ (grilling)	160 ° (60 °C, 90 °C, 120 °C, 140 °C, 160 °C, 180 °C, 200 °C, 220 °C, 240 °C)	9 levels of temperature setting with the possibility of arbitrarily switching between these levels during preparation with the +/- buttons. The default temperature is 160 °C. Possibility to use timer by pressing TIMER. The time can be changed by briefly pressing +/- after 1 min. in the range of 1 min. up to 3 hours To change the time faster, hold down the +/- button.
FRY (frying)	1 800 (300, 500, 800, 1 000, 1 200, 1 400, 1 600, 1 800, 2 000)	9 levels of level setting performance with the option arbitrary switching between these levels during preparation with the +/- buttons. The default power is 1,800 W. Possibility to use a timer by pressing TIMER. Time is possible change by briefly pressing +/- after 1 min. in the range of 1 min. up to 3 hours For faster To change the time, hold down the +/- button.
HOT POT (cooking)	1 200 (300, 500, 800, 1 000, 1 200, 1 400, 1 600, 1 800, 2 000)	9 levels of level setting performance with the option arbitrary switching between these levels during preparation with the +/- buttons. The default power is 1200 W. Possibility to use a timer by pressing TIMER. Time is possible changed by briefly pressing +/- after 1 min. in the range of 1 min. up to 3 hours For faster To change the time, hold down the +/- button.

SOUP (preparing soup)	2:00	Automatic default cooking of soup. The default time is 2 hours. The time can be changed by briefly pressing +/- after 1 min. within 1 min. up to 3 hours To change the time faster, hold down the +/- button. When cooking is finished, switch off the cooker by pressing ON/OFF.
WATER (boil/warm water)	0:30	Automatic default water boiling. The default time is 0:30. The time can be changed by briefly pressing +/- after 1 min. in the range of 1 min. up to 3 hours To change the time faster, hold down the +/- button. When cooking is finished, switch off the cooker by pressing ON/OFF.
MILK (warm milk)	0:20	Automatic default milk cooking. The default time is 0:20. The time can be changed by briefly pressing +/- after 1 min. in the range of 1 min. up to 3 hours To change the time faster, hold down the +/- button. When cooking is finished, switch off the cooker by pressing ON/OFF.

5. Switch off the cooker

- If no values are shown on the display, the cooker is already in the off mode.
- If the display is lit, switch off the cooker so that you can switch it on / off.

6. Unplug the power cord from the electrical outlet.

Note

Edit function is accompanied by an audible signal.

Function for locking control elements (child lock) (12)

Briefly use the LOCK button. The Lock indicator lights up and the controls cannot be used (the device will not respond to any button). To unlock the controls, press and hold the LOCK button for as long (approx. 3 seconds) as its indicator turns off. When the indicator goes out, the controls will operate again.

7. Setting the timer using the timer switch (13)

Push the timer switch so that the timer indicator lights up, then use the +/- buttons (14, 16) to adjust the cooking time setting. Set the time from 1 minute to 3 hours. It is automatically used after the set time has elapsed. If you do not set the time within 5 seconds, the device will prepare for the original mode. If you set the time, after 5 seconds the set time will change and the cooking mode will be restored. You can cancel the set time by turning off the time, setting another time, or turning off the devices.

Problem solving

Error messages on the display

Error code

- E0** The cooker does not heat up and a beep sounds.
Make sure you use suitable dishes and that the container is in the middle of the plate. There is no pan on the stove. Place a container on the stove.
- E1** The voltage is lower than 86 V.
Check the power supply, then switch on the cooker again.
- E2** The voltage is higher than 280 V.
Check the power supply, then switch on the cooker again.
- E3** Plate temperature sensor not working.
Contact the nearest authorized service center.
- E4** IGBT (Inner) sensor not working.
Contact the nearest authorized service center.
- E5** Plate temperature is too high.
Reduce the set temperature
- E6** IGBT (Inner) temperature is too high.
Check that the suction and discharge openings of the fan are blocked by something or that the fan is working. If the holes are blocked, remove the obstacle. If the fan does not work, contact the nearest authorized service center.

Equipment cleaning and maintenance

Unplug the power cord and allow the machine to cool completely.

Cleaning the surface of the device

Never immerse the device in water or any other liquid!
Use only a slightly damp cloth in a mild detergent solution to clean the surface of the device. Do not use any solvents or harsh cleaners. They can damage the surface finish.

Routine cleaning

Wipe the appliance with a damp cloth and dishwashing detergent. Use a vacuum cleaner to remove dirt from the fan air intake grille. Clean the ceramic surface and the control panel with a damp cloth and mild detergents designed for cleaning ceramic surfaces. Make sure that no water flows into the device (if water enters the device, it may be destroyed).

Technical specifications

Model:	VP-22i
Power supply:	220 - 240 V~ 50/60 Hz
Power consumption:	300 W to 2 000 W
Protection class:	II
Dimensions (W x H x D):	28 x 4,7 x 35 cm
Weight:	2,2 kg
Noise:	50 dB (A)

The declared noise emission value of this appliance is 50 dB (A), which represents the sound power level A with respect to the reference sound power of 1 pW. We reserve the right to make changes!

Producer:

ORAVA retail 1, a.s.
Seberíniho 2
821 03 Bratislava
Slovenská republika

Importer:

ORAVA retail 1, a.s.
Seberíniho 2
821 03 Bratislava
Slovenská republika

ORAVA distribution CZ, s.r.o.
Ostravská 494
739 25 Sviadnov
Česká republika

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING

Dispose of used packaging material at a municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on the products or in the accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal, recovery and recycling, please return these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you may return your products to your local retailer when purchasing an equivalent new product. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment natural resources and help prevent potential negative effects on environment and human health, which could be the consequences of improper disposal waste. Contact your local authority or nearest office for more details collection point. Improper disposal of this type of waste may result in penalties in accordance with national regulations.

For business entities in the countries of the European Union

If you wish to discard electrical and electronic equipment, please request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to discard this product, please request obtain the necessary information on the correct method of disposal from the local authorities or from the your supplier.



This product meets all the essential requirements of the EU directives that apply to it.